 


WIRING CONNECTION

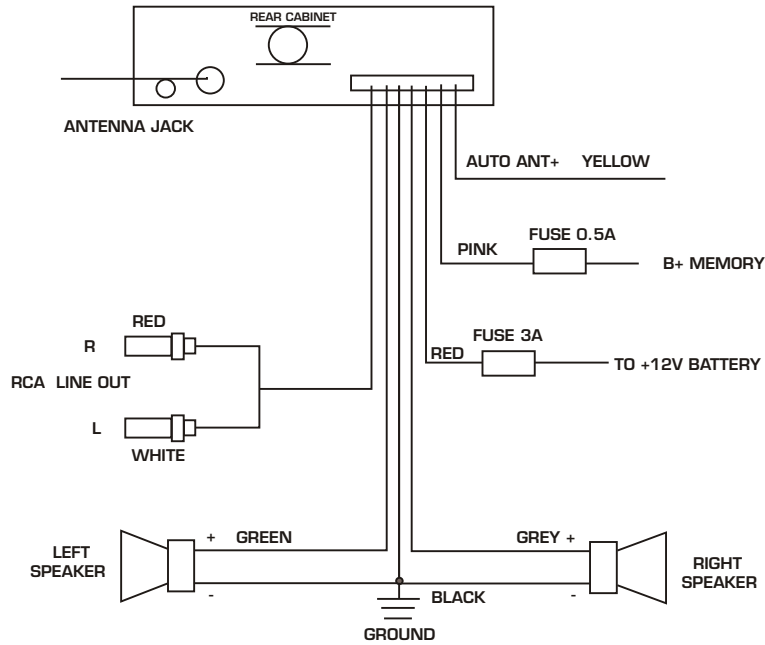

SPECIFICATION

GENERAL

Power Supply Requirements.....DC 12 Volts. Negative Ground
 Maximum Output Power.....80 Watts
 Chassis Dimensions.....181(W)X147(D)X53(H)

FM SECTION

Frequency Range.....88MHz-108MHz


AM SECTION

Frequency Range.....530KHz-1700KHz

LEGACY


LR185D

 INSTRUCTION MANUAL

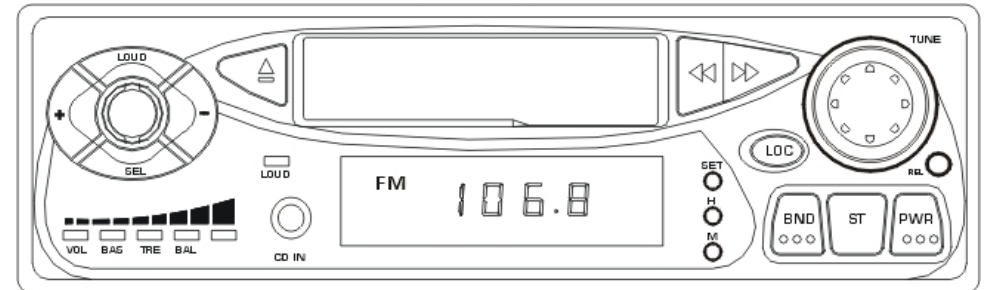

**ANTI-THEFT FULL DETACHABLE SYSTEM
 WITH AM/FM TUNING RADIO**

 LOCATION AND FUNCTION OF CONTROLS

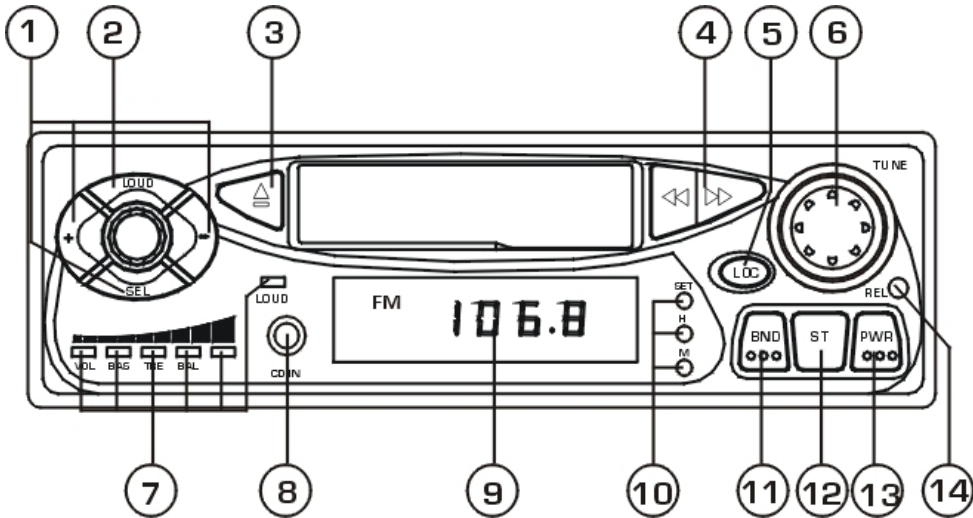

1. SEL AND +/- BUTTON

Press it can select VOL/BAS/TRE/BAL. And with the +/- to adjust volume, treble, bass, balance, when select the VOL/BAS/TRE/BAL function, LED will indicate.

2. LOUD BUTTON

Press it to get the best loudness quality during it is for bass. And word LOUD will indicate.

3. EJECT BUTTON

Press it to eject the tape.

4. FAST FORWARD/REWIND PROGRAM BUTTONS

5. LO/DX BUTTON

Press this button for distance reception when you are located at weak signal location. Depress this button for stronger signal.

6. TUNE KNOB

Rotate this knob to get your desired radio station.

7. LED INDICATORS

8. CD INPUT JACK

9. LCD [LIQUID CRYSTAL DISPLAY]

10. CLOCK ADJUSTMENT BUTTON

When time on display push SET button and H or M button together at the same time to adjust HOUR or MINUTE. When adjustment is completed, release both buttons.

11. BAND BUTTON

Press the button to select you desired band.

12. MO/ST BUTTON

Press it to change sound effect. [MONO keep remain]

13. PWR BUTTON

Press it to turn on or off the unit.

14. RELEASE BUTTON

Press it to eject the front panel the unit.

INSTALLATION

