tips & tricks

use with motorola D670 adapter



Listen to your music wirelessly from your iPod or iPhone with the Motorola D670 Bluetooth Adapter:

- Turn off any Bluetooth devices previously paired with your headphones, then turn headphones off and on to place in pairing mode (indicator light is steady blue).
- Turn on iPod or iPhone.
- **3** Connect your adapter to your iPod or iPhone.

The adapter indicator light flashes rapidly in blue for a few moments, then begins to flash rapidly in red and blue to indicate adapter is in pairing mode.

When your adapter and headphones are connected and ready for use, the adapter indicator light

tips & tricks

changes to a slow blue flash. Music playing on your iPod or iPhone is heard on your headphones.

- To stop wireless music and disconnect from your headphones, remove the adapter from the iPod or iPhone
- **6** To restart wireless music, reconnect the adapter to your iPod or iPhone and turn on headphones.

To turn adapter on or off while connected to your iPod or iPhone, press the button on the adapter for 3 seconds.

To enable hands-free functionality between your headset and iPhone, pair your iPhone directly with you headphones (for hands-free use) before connecting your adapter.

Tip: The iPod or iPhone screen is activated when using headphone music controls. Playtime may be extended by minimizing the device's screen timer (see the device's user manual for details).

Note: To clear the adapter's device list and reset to factory default condition, hold the adapter's button while attaching the adapter to the iPod or iPhone. Hold until the adapter begins flashing rapidly in red and blue.