# **Panasonic**<sup>®</sup>

WMA MP3 CD Player/HD-Radio Receiver with Full Dot Matrix Motorized Display

CQ-CB8901U

# **Operating Instructions**







WMA

MP=

H) Radio

YEFM285625A ND1204-1015 Printed in China

• Please read these instructions (including "Limited Warranty" and "Customer Services Directory") carefully before using this product and keep this manual for future reference.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America One Panasonic Way, Secaucus, New Jersey 07094 http://www.panasonic.com

# **Safety Information**

Read the operating instructions for the unit and all other components of your car audio system carefully before using the system. They contain instructions about how to use the system in a safe and effective manner. Panasonic assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.

■ This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operations. The meanings of the pictographs are explained below. It is important that you fully understand the meanings of the pictographs in order to use this manual and the system properly.



This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in severe injury or death.



This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in injury or material dam-

### **M** Warning

### Observe the following warnings when using this unit.

☐ The driver should neither watch the display nor operate the system while driving.

Watching the display or operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before watching the display or operating the system.

■ Use the proper power supply.

This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially a 24 V DC battery

■ Keep batteries and insulation film out of reach of infants.

Batteries and insulation film can be ingested, so keep them out of the reach of infants. If an infant ingests a battery or insulation film, please seek immediate medical attention.

☐ Protect the Deck Mechanism.

Do not insert any foreign objects into the slot of this unit.

□ Do not disassemble or modify the unit.

Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs to be repaired, consult your dealer or an authorized Panasonic Servicenter.

 $\square$  Do not use the unit when it is out of order.

If the unit is out of order (no power, no sound) or in an abnormal state (has foreign objects in it, is exposed to water, is smoking, or smells), turn it off immediately and consult your dealer.

☐ The remote control unit should not lie about in the car.

If the remote control unit lies about, it could fall on the floor while driving, get wedged under the brake pedal, and lead to a traffic accident.

□ Refer fuse replacement to qualified service person-

When the fuse blows out, eliminate the cause and have it replaced with the fuse prescribed for this unit by a qualified service engineer. Incorrect replacement of the fuse may lead to smoke, fire, and damage to the product.

### Observe the following warnings when installing.

☐ Disconnect the lead from the negative (–) battery terminal before installation.

Wiring and installation with the negative (-) battery terminal connected may cause electrical shock and injury due to a short circuit.

Some cars equipped with the electrical safety system have specific procedures of battery terminal disconnection. FAILURE TO FOLLOW THE PROCEDURE MAY LEAD TO THE UNINTENDED ACTIVATION OF THE ELECTRICAL SAFETY SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.

□ Never use safety-related components for installation, grounding, and other such functions.

Do not use safety-related vehicle components (fuel tank, brake, suspension, steering wheel, pedals, airbag, etc.) for wiring or fixing the product or its accessories.

☐ Installing the product on the air bag cover or in a location where it interferes with airbag operation is prohibited.

☐ Check for piping, gasoline tank, electric wiring, and other items before installing the product.

If you need to open a hole in the vehicle chassis to attach or wire the product, first check where the wire harness, gasoline tank, and electric wiring are located. Then open the hole from outside if possible.

- □ Never install the product in a location where it interferes with your field of vision.
- □ Never have the power cord branched to supply other equipment with power.
- ☐ After installation and wiring, you should check the normal operation of other electrical equipment.

The continuation of their using in abnormal conditions may cause fire, electrical shock or a traffic accident.

- ☐ In the case of installation to an airbag-equipping car, confirm warnings and cautions of the vehicle manufacturer before installation.
- ☐ Make sure the leads do not interfere with driving or getting in and out of the vehicle.
- ☐ Insulate all exposed wires to prevent short circuit-

### $\bigwedge$ Caution

### Observe the following cautions when using this

- Keep the sound volume at an appropriate level. Keep the volume level low enough to be aware of road and traffic conditions while driving.
- □ Do not insert or allow your hand or fingers to be caught in the unit.

To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.

- ■This unit is designed for use exclusively in automo-
- lacktriangle Do not operate the unit for a prolonged period with the engine turned off.

Operating the audio system for a long period of time with the engine turned off will drain the battery.

 $\square$  Do not expose the unit to direct sunlight or excessive heat.

Otherwise these will raise the interior temperature of the unit, and it may lead to smoke, fire, or other damage to the

 $\supseteq$  Do not use the product where it is exposed to water. moisture, or dust.

Exposure of the unit to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainv

### Observe the following cautions when installing.

□ Refer wiring and installation to qualified service personnel.

Installation of this unit requires special skills and experience. For maximum safety, have it installed by your dealer. Panasonic is not liable for any problems resulting from your own installation of the unit.

☐ Follow the instructions to install and wire the prod-

Not following the instructions to properly install and wire the product could cause an accident or fire.

□ Take care not to damage the leads.

When wiring, take care not to damage the leads. Prevent them from getting caught in the vehicle chassis, screws, and moving parts such as seat rails. Do not scratch, pull, bend or twist the leads. Do not run them near heat sources or place heavy objects on them. If leads must be run over sharp metal edges, protect the leads by winding them with vinyl tape or similar protection.

lue Use the designated parts and tools for installation. Use the supplied or designated parts and appropriate tools to install the product. The use of parts other than those supplied or designated may result in internal damage to the unit. Faulty installation may lead to an accident, a malfunction or fire.

lacktriangle Do not block the air vent or the cooling plate of the

Blocking these parts will cause the interior of the unit to overheat and will result in fire or other damage.

### □ Do not install the product where it is exposed to strong vibrations or is unstable.

Avoid slanted or strongly curved surfaces for installation. If the installation is not stable, the unit may fall down while driving and this can lead to an accident or injury.

### □ Installation Angle

The product should be installed in a horizontal position with the front end up at a convenient angle, but not more than

The user should bear in mind that in some areas there may be restrictions on how and where this unit must be installed. Consult your dealer for further details.

- ☐ Wear gloves for safety. Make sure that wiring is completed before installation.
- ☐ To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.
- □ Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)

### Observe the following cautions when handling the battery for the remote control unit.

- Use only specified battery (CR2025).
- Match the polarity of the battery with the (+) and (-) marks in the battery case.
- Replace dead battery as soon as possible.
- Remove the battery from the remote control unit when not using it for an extended period of time.
- Insulate the battery (by placing them in a plastic bag or covering them with vinyl tape) before disposal or storage.
- Dispose of the battery according to the local regulations.
- Do not disassemble, recharge, heat or short the battery. Do not throw a battery into a fire or water.

### In case of battery leakage

- Thoroughly wipe the battery liquid off the battery case and insert new battery.
- If any part of your body or clothing comes into contact with battery liquid, wash it with plenty of water.
- If battery liquid comes into contact with your eyes, wash them with plenty of water and get immediate medical attention.

### Caution

THIS PRODUCT IS A CLASS I LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

### The following applies only in the U.S.A.

### Part 15 of the FCC Rules

### FCC Warning:

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

## **Service and Warranty**

### U.S.A.

Obtain Product Information and Operating Assistance: locate your nearest Dealer or Servicenter: purchase Parts and Accessories: or make Customer Service and Literature requests by visiting our Web Site at:

### http://www.panasonic.com/support

or, contact us via the web at:

### http://www.panasonic.com/contactinfo

You may also contact us directly at: 1-800-211-PANA (7262),

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

### **Accessory Purchases:**

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web

### http://www.pasc.panasonic.com

or, send your request by E-mail to:

### npcparts@panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday-Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American

Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY: 1-866-

### Service in Puerto Rico

Matsushita Electric of Puerto Rico. Inc.

Panasonic Sales Company

Factory Servicenter:

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,

Carolina, Puerto Rico 00985

Phone (787) 750-4300, Fax (787) 768-2910

# **Limited Warranty**

### U.S.A.

PANASONIC CONSUMER ELECTRONICS COMPANY. DIVISION OF MATSUSHITA ELECTRIC CORPORATION OF AMERICA One Panasonic Way, Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,

DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC. Ave. 65 de infanteria. Km. 9.5. San Gabriel Industrial Park Carolina, Puerto Rico 00985

### **PANASONIC AUTO PRODUCTS LIMITED WARRANTY**

### LIMITED WARRANTY COVERAGE

If your product does not work properly because of defects in materials and workmanship.

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated in the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or refurbished product. The decision to repair or replace will be made by the warrantor.

During the "Labor" warranty period, there will be no charge for labor. During the "Parts" warranty period, there will be no charge for

Categories	Parts	Labor
Audio Components (except items listed below)	One (1) Year	One (1) Year
MXE Series Audio Components (except items listed below)	Two (2) Years	Two (2) Years
Speakers	One (1) Year	Not Applicable
Accessories (in exchange for defective items)	Ninety (90) Days	Not Applicable

parts. You must carry in or mail in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

### **CARRY-IN OR MAIL-IN SERVICE**

For Carry-In or Mail-In Service in the United States, call 1-800-211-PANA (7262) or visit

Panasonic Web Site: http://www.panasonic.com For assistance in Puerto Rico, call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

### LIMITED WARRANTY LIMITS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials and workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred during shipment, failures which are caused by products not supplied by the warrantor, failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustment, maladjustment of consumer control, improper maintenance, improper antenna, inadequate signal reception or pickup, power line surge, improper voltage supply, lightning, modification, commercial use (such as use in hotels, offices, restaurants, or other business uses) or rental use of the product, or service by anyone other than the technician from Factory Servicenter or other authorized service centers, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer, and loss of media, data or other memory contents. The items listed are not exclusive, but are for illustration only.) ALL EXPRESS AND

### IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MER-CHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to warrantor's Consumer Affairs Department at the addresses of the warrantor.

### PARTS AND SERVICE WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer's Record	
Model	
No.	
Serial	
No.	
Dealer's	
No.	
Code	
No.	
Dealer's	
Address	
Date of	
Purchase	

5

# Before Reading These Instructions, Features


# **Before Reading These Instructions**

# Operating | Owners | Information Card (YEFM285625) | Instruction kit | Q'ty: 1 set



Qty: 1



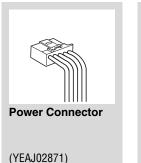


Qty: 1







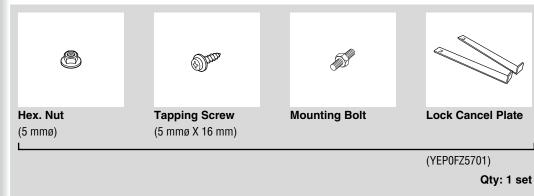

Qty: 1

### Notes:

Accessories

- The number in parenthesis underneath each accessory part name is the part number for maintenance and service.
- Accessories and their parts numbers are subject to modification without prior notice due to improvements.
- Mounting Collar and Trim Plate are mounted on the main unit at shipment.

## **Features**

Panasonic welcomes you to our constantly growing family of electronic products owners.

We endeavor to give you the advantages of precise electronic and mechanical engineering, manufactured with carefully selected components, and assembled by people who are proud of the reputation their work has built for our company. We know this product will bring you many hours of enjoyment, and after you discover the quality, value and reliability we have built into it, you too will be proud to be a member of our family.

### HD Radio tuner for the AM/FM built in

You can hear the digital broadcasting easily due to the incorporation of the IBOC system. "IBOC" stands for In Band On Channel. This system adds to the existing analog radio signals by using broadcast carrier.

As a result, Sound quality of AM/FM broadcasting is greatly improved (An AM is to an FM quality, an FM is to a CD quality).

The station names, call sign, artists and song titles can be received and displayed on your unit.

\*A special antenna is not necessary to tune into a HD Radio broadcast station.

### Full lineup of optional parts

An optional XM tuner allows you to receive the XM radio service. A DVD changer instead of an XM tuner is also connectable.

Toll free number
 XM Tuner P/N: XMD1000
 Call 1-800-XM-RADIO(96-72346)
 Extension cord P/N: XMDPAN100
 Call 1-800-942-TERK(8375)

### $(((\underset{R \in A}{\swarrow})))$

The XM name and related logos are trademarks of XM Satellite Radio Inc.


### Notes

- A changer and an XM receiver are not connectable at the same time.
- To connect the XM receiver (XMD1000), it is required to use an optional extension cord (XMDPAN100) that is produced by XM exclusively for Panasonic products.

### Other function

- Electric-controlled retractable face plate equipped (Tilt → page 15)
- Adjustable 7-band preset equalizer (SQ → page 18)
- Initially stored moving images and still images are editable to taste. IMAGE STUDIO\* allows you to process images from a digital camera or other devices without difficulty. ( → page 37)
- \* This software is downloadable from Panasonic Web site (http://panasonic.co.jp/pas/en/software/customize/index.html).

### Delightful sound space thanks to system buildup

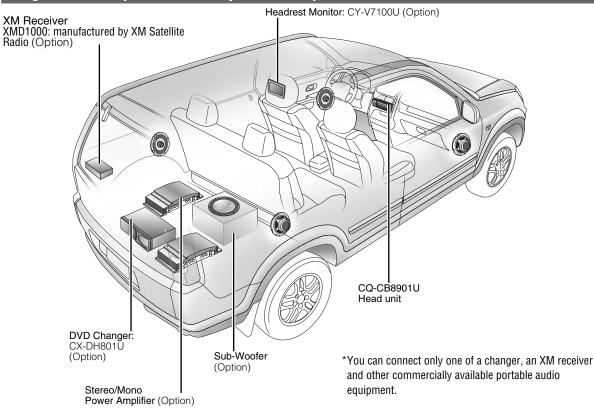

### **Features**

### What is HD Radio™?

Today's AM and FM radio is broadcast in analog, which has lower audio quality and is filled with static, hiss, pops and fades. Radio stations have begun a transformation to the world of digital using a new technology called HD Radio™. Today's analog signals and new HD Radio™ digital signals will be transmitted at the same time from AM and FM stations. The radios you use today will continue to function for years, however, new receivers are needed to hear the HD Radio digital signals broadcast from the stations.

Using these new receivers, you can pick up the new HD Radio™ digital signals at the same place on the dial (106.7 KROQ will be digital 106.7 KROQ broadcasting in HD Radio™, 710 WOR will be digital 710 WOR broadcasting in HD Radio™). Your favorite HD Radio™ digital station will be right where you left it. Additionally, new HD Radio™ receivers will still pick up stations broadcasting in analog, so you don't need two radios. The benefits of digital far outweigh old analog technology. HD Radio™ makes radio "fun" again. FM digital will sound like a CD throughout the coverage area, and AM digital will sound like today's FM throughout the coverage area, both without the static, hiss pops or fades that you've had to put up with for almost a century.

While HD Radio™ will bring you pristine audio quality, it will also provide data services\*. Both AM and FM HD Radio™ stations will transmit song and artist title, traffic updates, weather alerts, news reports and much more. For more information, visit www.hd-radio.com. Stay tuned!

\*This unit supports text displays for the following items; station name, call sign, artist, song title.

HD Radio is a trademark of iBiguity Digital Corporation.

HD Radio broadcasts can be enjoyed only in those areas in the United States where the broadcasts can be received. This means that the HD Radio feature cannot be used outside the U.S. or in areas inside the U.S. where these broadcasts cannot be receive. ( as of December 2003)

## **Contents**

	Safety Information	2
	Service and Warranty	4
<b>E</b>	Before Reading These Instructions	6
Common	• Features	7
2	Controls Layout	10
	<ul><li>Preparation</li></ul>	12
	General	14
<b>a</b> n	Radio	20
	CD Player	22
Each Source	MP3/WMA Player	24
ach	XM Tuner	28
ш	Disc Changer	30
	Audio Setting	34
	Function Setting	35
	Display Setting	36
50	Customize the Display	37
ed	<ul><li>Troubleshooting</li></ul>	39
As Needed	<ul><li>Error Display Messages</li></ul>	42
A	Notes on Discs	44
	<ul><li>Maintenance</li></ul>	44
	<ul><li>Installation</li></ul>	45
	Specifications	55

# **Controls Layout**

Note: This instruction manual explains operations for use with the buttons on the main unit. (Different operations excluded)



The demonstration message appears for first use.

Set your car's ignition switch to the ACC or On position.

The demonstration screen appears.





**2** Press [DISP] (Display).

The demonstration screen is cancelled, and no more

 
3 Press [SRC] (PWR: Power).



**Note:** If you would like to turn on the power and make the demonstration message appear, hold down [SRC] (PWR: Power) for 4 sec. or more after turning off the power in other than the XM mode.

### **Preparation Before Initial Use**


Pull the insulation film out from the backside of remote control gently.




Tough pointed object

### **Battery Replacement**

 - Remove the battery holder with the remote control unit placed on a flat surface.
- 1) Stick your thumbnail into the groove, and push the holder in the direction of the arrow, and at the same time.
- (2) Pull it out in the direction of the arrow using a tough pointed object.



 - 2 Put a battery in the case with (+) side facing up.
- 3 Put the case back.



### **A** Warning

 Keep batteries and insulation film out of reach of infants. If an infant ingests a battery, please seek immediate medical attention.

### **∕** Cautions

- Remove and dispose of an old battery immediately.
- Do not disassemble, heat or short a battery. Do not throw a battery into a fire or water.
- Follow local regulations when disposing of a battery.
- Improper use of a battery may cause overheating, an explosion or ignition, resulting in injury or a fire.

Note: Battery Information:

Battery Type: Panasonic lithium battery (CR2025)

(Included in the remote control)

Battery Life: Approximately 6 months under normal use

(at room temperature)

 
# **Security Function** Setting

Other Settings

**Clock adjustment** 

The following functions are activated when the Security Function is ON. (→ page 35)

• The security indicator lights up when removing the face plate.



• The alarm sounds and the message appears on the screen to warn you to remove the face plate at ACC



You may need to set the following depending on the devices to be connected.

### Using Subwoofer

- Subwoofer level adjustment (⇒ page 34)
- Subwoofer low pass filter (→ page 34)
- High Pass Filter (→ page 34)

### Connecting XM tuner

- Connect the optional XM receiver (XMD1000).
- To connect the XM receiver (XMD1000), it is required to use an optional extension cord (XMDPAN100) that is produced by XM exclusively for Panasonic products.

### **Getting Started**

It is required to sign up to become an XM Satellite Radio subscriber. After checking your XM Satellite Radio ID, sign up on the XM's website or by calling them.

### 1 Check of XM Satellite Radio ID

- Write down the ID indicated on the lower right of your XM receiver (XMD1000).
- Radio ID also can be found by turning your XM Radio to channel 0. (Refer to "Channel Selection" on page

### 2 Activate the XM Satellite Radio

Select either of the below to sign up.

- Web site: http://www.xmradio.com/activation
- Phone number: 1-800-852-9696

Note: Refer to the operating instructions for the XM receiver for details.

### Note:

- Adjust the clock when "ADJUST" appears on the
- 1 Press [MENU] to display the menu

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

- 2 Press [<] or [>] to display the DISPLAY menu.
- Press [∨] to select "CLOCK ADJ".
- 4 Press [BAND] (SET) to confirm the display.

5 Adjust the setting value.



- [>]: Adjusting minutes
- [<]: Adjusting hours
- [ ]: Forward
- [V]: Backward



**7** Press [MENU].

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

12

CQ-CB8901U

Preparation

Plate Removing/Mounting

Face

(Anti-Theft System)

Press [SRC] (PWR: Power).

**Note:** The opening screen appears. You can overwrite opening screen (moving image) with new one. (→ page 37)



Power off

Hold down **[SRC]** (**PWR**) until you hear a beep, then release it.

**Note:** The ending screen appears. You can change the ending screen (moving image). (→ page 37)

 
You can remove the face plate to prevent it from being stolen.



2 Put the face plate in the case.

Mounting

place.



Removing

1 Press [ a ] (Release).

(The face plate disengages with a click when it is removed.)

The face plate automatically closes after a lapse of 5 seconds while it is open.



2 Press the right end of the face plate until "click" is heard.

1 Slide the left side of the face plate in

The power is automatically turned off while the unit is active.


### **⚠** Cautions:

 - It is recommended to remove or mount the face plate when the plate is at the closed position.
   Do not remove or mount the face plate when the plate is in motion.
- This face plate is not waterproof. Do not expose it to water or excessive moisture.
- Do not remove the face plate while driving your car.
- Do not place the face plate on the dashboard or nearby areas where the temperature rises to high levels.
- Do not touch the contacts on the face plate or on the main unit, since this may result in poor electrical contacts.
- If dirt or other foreign substances get on the contacts, wipe them off with clean and dry cloth.
- To avoid damaging the face plate, do not push it down or place objects on it while it is open.

### Open/Eject

Press [ (OPEN).

When a disc is already loaded, the disc will automatically be ejected.



### ⚠ Cautions:

- To avoid damaging the face plate, do not push it down or place objects on it while it is open.
- Do not pinch your finger or hand in the face plate.
- Do not insert foreign objects into the disc slots.
- For the following cases, the face plate automatically closes. Use caution not to catch your finger.
  - After a lapse of 20 seconds
  - When a disc is inserted
  - When the face plate is removed (→ page 14)

 
### Close

Press [ (OPEN).




### Tilt

The display angle changes among 4 levels as follows every time you hold down [a] (TILT) for 1 sec. or more and release.



 **Note:** The last selected angle is memorized even after turning off the power.



# Volume Adjustment (VOLUME)

Face Plate Motion (Open/Close, Tilt)

① Up ② Down

> Setting Range: 0 to 40 Default: 18



### Notes

- The volume level can be set independently for each source. (For radio, one volume setting for AM, one volume setting for all FMs)
- The volume is not adjustable (except XM mode) while an error display is on the monitor. (→ page 42)

# Temporary Volume Off (Down) MUTE (ATT: Attenuation)

Volume off (down)

Press [O] (MUTE).



### Cancel

Press [ ] (MUTE) again.

**Note:** Volume-down range can be specified. (→ page 35)



14

15

General

### Radio

FM1, FM2, FM3, AM (



### Player

When loading CD (→ page 22)



### Auxiliary (AUX 1)

When connecting a device that is not controlled by thir unit




The rear speaker can be used as a substitutional subwoofer when a subwoofer is not connected.

Holding down [ ] (SBC·SW) for 2 sec. or more toggles SBC-SW on and off.





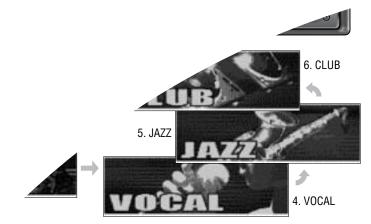

and volume are influenced acceptance mentioned above causes asignal, readjust bass/treble or

FLAT) level is changeable. (⇒ page



Lights when activated.

accordance with your car type or taste.

1 Hold down [SQ] (Sound Quality) for 2 sec. or more.



The targeted SQ preset appears.

2 Adjust each frequency.

**Note:** If you press **[DISP]**, the presetting is canceled. The presetting is active until another SQ preset is called up.

[>]: Higher frequency

[<]: Lower frequency

Level Up
 Level Down

3 Hold down [∧] or [∨] for 2 sec. or more to confirm your adjustment.

**Note:** You can select a SQ preset to be targeted with [ $\Lambda$ ] and [V] (and [2]-[6] on the remote control).




4 Hold down [ more to con

The existing adj adjustment.

### Notes:

- FLAT is not
- If no operation
   onds, the dist
- This adjustn as well. (⇒
- If you hold c the SQ call-t up can be tu

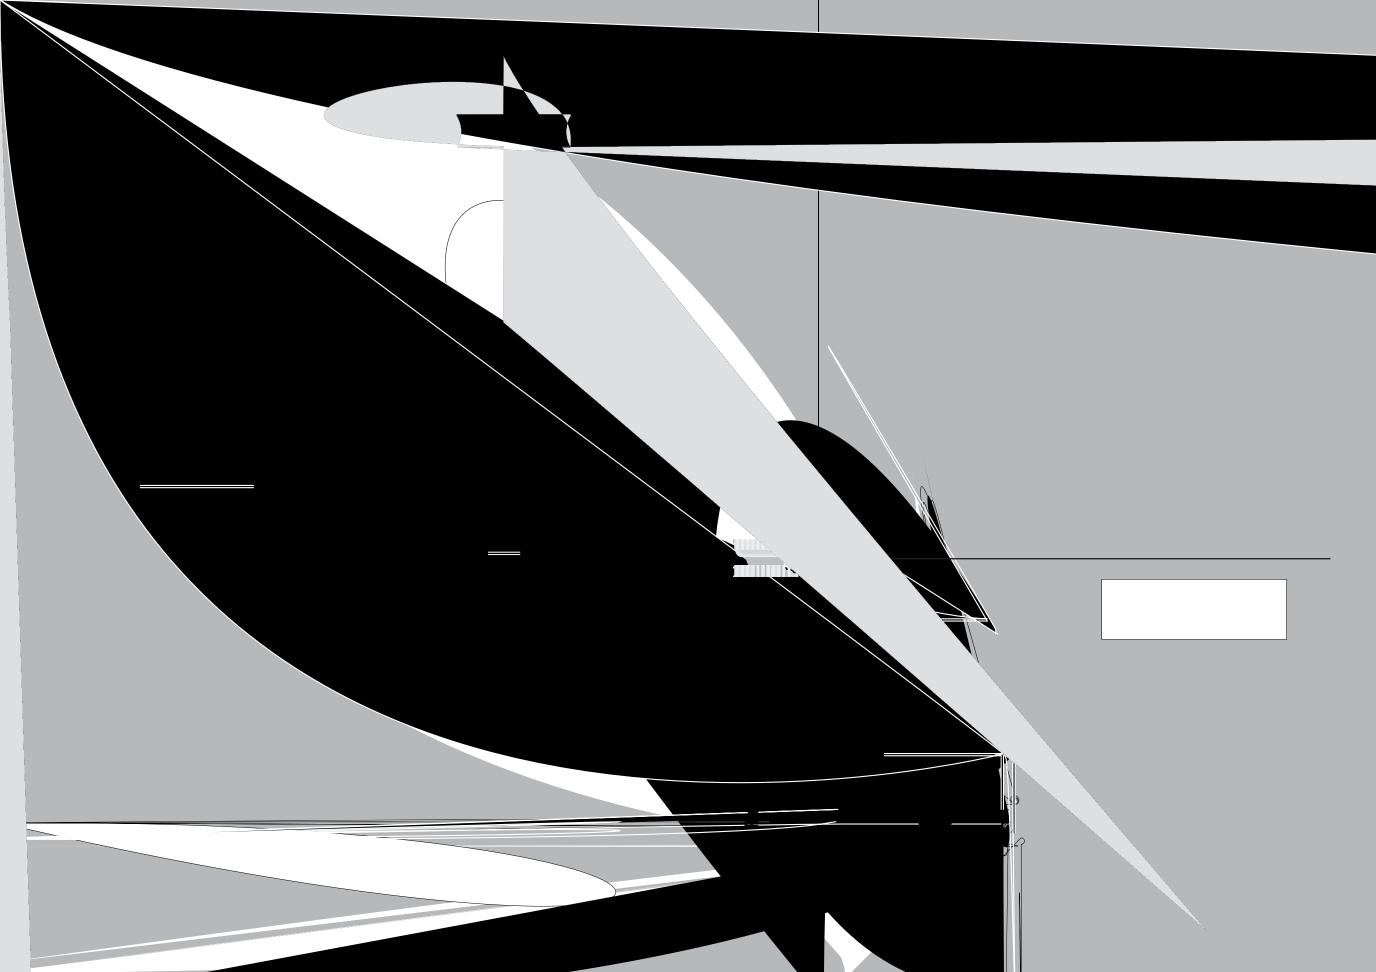

# **MP3/WMA Mode Display**

24

Press [ (a)] (OPEN) to open the face

When a disc is already loaded, the disc will automati-

2 Load a disc with the Printed-side facing

The face plate closes automatically, and the unit recognizes the disc and starts playing automatically, too. (It may take several minutes to start for a disc that has a lot of files.)



When a disc is already loaded, press [SRC] (Source) to select the MP3/WMA mode.



3 Select a desired portion.

### Folder selection

[ \( \) (FOLDER): Next folder [V] (FOLDER): Preceding folder

### | File selection

[►►] (TRACK): Next file


[I◄◄] (TRACK): Preceding file (press twice)

Note: Hold down for fast forward/reverse.

### Pause

Press [BAND] (II / ►).

Press again to cancel.

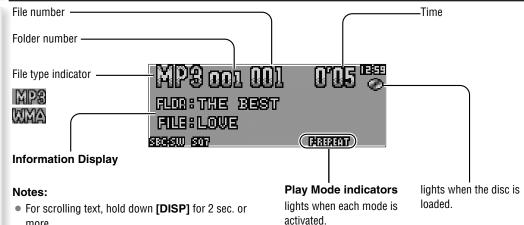

- "NO TEXT" is displayed when there is no information
- ID3/WMA tag information is displayed for the album name and title/artist name.

### RANDOM

### REPEAT

### SCAN

FERANDOM (Folder Random)

FEREFEAT (Folder Repeat)

(Folder Scan)

- Refer to the section on "Notes on MP3/WMA" (→ page 26)
- A disc which has both CD-DA data and MP3/WMA data on it may not be reproduced normally. (For example, it may be reproduced without sound.)

 
Press [MENU] to display the menu dis-Random, Repeat Play (MP3/WMA Menu Display) (RANDOM, REPEAT) play. For using the remote control, hold down [SEL] (MENU) for 2

Random and Repeat play can be set.

**2** Press [ ] or [ ] to select a mode to be adjusted.

3 Press [BAND] (SET) to adjust.

sec. or more.



4 Press [MENU] to confirm the adjustment.

Play Mode Selection

RANDOM, REPEAT

down again to cancel.

SCAN play

SCAN (All files)

each file.

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.



One-touch operation is available for selecting a track

playing style by use of [RANDOM] or [REPEAT].

Hold down the button for 2 sec. or more. Hold

You can find your favorite file by playing first 10-sec. of

Press the button. Press again to cancel.

FOLDER RANDOM, FOLDER REPEAT

Press [SCAN]. Press again to cancel. FOLDER SCAN (1st file in each folder)

### RANDOM

Off: Off

: Random playback (disc)

### **FOLDER RANDOM**

Off:

: Random playback (folder)

### REPEAT

Off: Off

: Playing the current file repeatedly

### **FOLDER REPEAT**

Off: Off

: Playing the current folder repeatedly.

### TEXT

FOILDER/FILLE : Folder name/File name

: Album/Title (tag information)

OFF : No display

Hold down [SCAN] for 2 sec. or more. Hold down again to cancel.

### **Direct Access**

A file in the current folder can be directly selected.

Example: file number 5

1 Press [#] (NUMBER).

2 Press [5].

3 Press [SET].

### Notes:

• For folder selection, enter a number after pressing [#] (NUMBER) twice.

FILE

• To suspend direct selection, press [DISP] (Display).

# Functions Only by Remote Control Unit

# Notes on MP3/WMA

# MP3/WMA Player

27

### What is MP3/WMA?

MP3 (MPEG Audio Layer-3) and WMA (Windows Media™ Audio) are the compression formats of digital audio. The former is developed by MPEG (Motion Picture Experts Group), and the latter is developed by Microsoft Corporation. Using these compression formats, you can record the contents of about 10 music CDs on a single CD media (This figures refer to data recorded on a 650 MB CD-R or CD-RW at a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz).

### Notes:

 MP3/WMA encoding and CD writing software is not supplied with this unit.

### Points to remember when making MP3/WMA files

### Common

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended because playing time is not displayed properly and sound may be skipped.
- The playback sound quality differs depending on the encoding circumstances. For details, refer to the user manual of your own encoding software and writing software.

### MP3

 It is recommended to set the bit rate to "128 kbps or more" and "fixed".

### WMA

- It is recommended to set the bit rate to "64 kbps or more" and "fixed".
- Do not set the copy protect attribute on the WMA file to enable this unit to play back.

### Display Information

### Displayed items

- CD-TEXT Disc title
- Track title
- MP3/WMA Folder name File name
- MP3 (ID3 tag)

Album name Title and artist name

WMA (WMA tag) Album name

Title and artist name

### Displayable characters

- Displayable length of file name/folder name: within 64 characters
- Name files and folders in accordance with the standard of each file system. Refer to the instructions of writing software for details.
- ASCII character set and special characters in each language can be displayed.

### **ASCII** character set

A to Z, a to z, digits 0 to 9, and the following sym-

### Notes:

- With some software in which MP3/WMA format files have been encoded, the character information may not be displayed properly.
- Undisplayable characters and symbols will be converted into an asterisk (\*).

Caution: Never assign the ".mp3", or ".wma" file name extension to a file that is not in the MP3/WMA format. This may not only produce noise from the speaker damage, but also damage your hearing.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



### Recording MP3/WMA files on a CD-media

- You are recommended to minimize the chances of making a disc that contains both CD-DA files and MP3/WMA files.
- If CD-DA files are on the same disc as MP3 or WMA files, the songs may not play in the intended order. or some songs may not play at all.
- When storing MP3 data and WMA data on the same disc, use different folders for each data.
- Do not record files other than MP3/WMA files and unnecessary folder on a disc.
- The name of an MP3/WMA file should be added by rules as shown in the following descriptions and also comply with the rules of each file system.
- The file extension ".mp3" or ".wma" should be assigned to each file depending on the file format.

- You may encounter trouble in playing MP3/WMA files or displaying the information of MP3/WMA files recorded with certain writing software or CD recorders.
- This unit does not have a play list function.
- Although Multi-session recording is supported, the use of Disc-at-Once is recommended.

### Supported file systems

ISO 9660 Level 1/Level 2, Apple Extension to ISO 9660. Joliet, Romeo

 Apple HFS, UDF 1.50, Mix CD and CD Extra are not supported.

### Compression formats

(Recommendation: "Points to remember when making MP3/WMA files" on the previous page)

Compression method	Bit rate	VBR	Sampling frequency
MPEG 1 audio layer 3 (MP3)	32k-320 kbps	Yes	32, 44.1, 48 kHz
MPEG 2 audio layer 3 (MP3)	8k-160 kbps	Yes	16, 22.05, 24 kHz
Windows Media Audio Ver. 2, 8	64k-192 kbps	No	32, 44.1, 48 kHz

### Folder selection order/file playback order

### Maximum number of files/folders

- Maximum number of files: 999
- Maximum number of files in one folder: 255
- Maximum depth of trees: 8
- Maximum number of folders: 255 (Root folder is included.)


### Notes:

MP3/WMA (continued)

등

**Notes** 

- This unit counts the number of folders irrespective of the presence or absence of an MP3/WMA file.
- If the selected folder does not contain any MP3/WMA files, the nearest MP3/WMA files in the order of playback will be played.
- Playback order may be different from other MP3/WMA players even if the same disc is used.
- "ROOT" appears when displaying the root folder name.

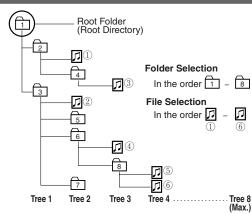

### Copyright

It is prohibited by copyright laws to copy, distribute and deliver copyrighted materials such as music without the approval of copyright holder except enjoying yourself personally.

### No warranty

Above description complies with our investigations as of December 2004. It has no warranty for reproducibility and displayability of MP3/WMA.

Press [SRC] (Source) to select the XM Satellite Radio mode.

Note: "LOADING" is displayed when it takes for 2 sec. or more to receive the XM satellite radio.

Press [BAND] to select a band.







• To connect the XM receiver (XMD1000), it is required to use an optional extension cord (XMDPAN100) that is produced by XM exclusively for Panasonic products.

### Notes:

- "RADIO ID" is displayed with channel 0.
- "UPDATING" is displayed during the update of the identification code.
- "LOADING" is displayed during the acquisition of audio data or information.



3 Select a channel.

### Channel selection

[<]: Preceding channel [>]: Next channel

### Preset channel selection

[**V**] (**P·SET**: Preset): Lower preset channel [ \( \) | (P-SET: Preset): Higher preset channel

Note: Direct selection can be executed with [1] to [6] buttons on remote control.

# **Tuner Mode** Display ×



28

Up to 6 channels can be preset in XM1 to XM3 respectively.

Preset channels can be simply called up by pressing [\bullet1]  $(P \cdot SET)$  or  $[\bigvee]$   $(P \cdot SET)$ .

Note: Direct selection can be executed with [1] to [6] buttons on remote control.

- 1 Tune into a channel.
- Provided Hold down [∧] or [√] for 2 sec. or more.
- 3 Select a preset number by pressing  $[\Lambda]$  or [V].

4 Preset the channel by holding down [\(\Lambda\)] or [V] for 2 sec. or more.



Preset number/channel number blinks once.

- New channels overwrite existing saved channels.
- In step 2, a channel can be stored by holding down one of the preset buttons [1] to [6] for 2 sec. or more.
- To stop presetting channels, press [DISP] (Display).

You can toggle the category on and off every time you hold down [BAND] for 2 sec. or more. If the category is set to on, the unit operates as follows for each button:

### Channel selection

[<] (TUNE): Preceding channel in current category [>] (TUNE): Next channel in current category

### Category selection

[V] (P-SET: Preset): Preceding category [ \( \) | (P-SET: Preset): Next category





lights when activated

### 1 Press [MENU] to display the menu display.

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.



Disabled:

TEXT

: Enabled (Default)

2 Press [BAND] (SET) to adjust.



3 Press [MENU] to confirm the adjustment.

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

# - 000

### Direct Access

A channel can be directly selected. Example: channel number 5

- 1 Press [#] (NUMBER).
- 2 Press [5].
- 3 Press [SET].

Note: To suspend direct selection, press [DISP] (Display).



**Control Unit Functions** Remote

**Selection by Category** 

**TEXT Setting (XM Tuner Menu Display)** 



# Disc Changer (when DVDs or VCDs a


Connected an optional DVD changer (CX-DH801U) can be controlled by this unit.

### 1 Load a magazine (discs).

When a magazine is already loaded, press **[SRC]** (Source) to select the DVD changer mode.

The unit recognizes the magazine and starts playing automatically.

**Note:** The power is turned on automatically when inserting a magazine.

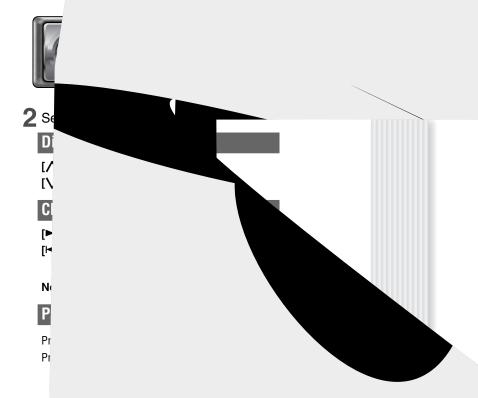

Adjustment to each speaker and an optional subwoofer

1 Press [VOLUME] (SEL: Select) to display the AUDIO menu display.





(Adjustable frequency: 60, 160, 400, 1 k, 3 k, 6 k, 16 k (Hz), Setting range: −12 dB to +12 dB, 2 dB Step) (⇒ page 19)

①: Up 2: Down

(2): Lt



2 Press [VOLUME] (SEL: Select) is a mode to be adjusted.

3 Turn [VOLUME] clockwise or counterclockwise to adjust.

**Note:** If no operation takes place for more than 10 seconds in the audio menu (2 sec. in Main volume adjustment), the display returns to the regular mode.

(Setting range: R15 to F15

Fader adjustn

① : Front enhanced

(2): Rear enhanced



### Main volume adjustment

(Setting range: 0 to 40, Default: 18)

①: Up

2: Down

### Subwoofer level adjustment

(Setting range : mute  $(-\infty)$ , -6 dB to +6 dB, 2 dB Step, Default: 0 dB)

①: Up

2 : Down



### Bass adjustment

(Setting range: -12 dB to +12 dB, 2 dB Step, Default: Bass 0 dB)

①: Up

2: Down



### Treble adjustment

(Setting range: -12 dB to +12 dB, 2 dB Step, Default: Treble 0 dB)

①: Up

2 : Down



Note: Do not activate SQ and Bass/Treble at same time to avoid causing sound distortion.

### Subwoofer Low Pass Filter

(Setting range: 80 Hz, 120 Hz, 160 Hz, Default: 80 Hz)

①: Up

②: Down



Subwoofer output range

Other speakers output ranges

### **High Pass Filter**

(Setting range: Filter OFF, 90 Hz, 135 Hz, 180 Hz, 225 Hz, Default: Filter OFF)

① : Up

2: Down



Adjustment to display on the FUNCTION menu

37

# **Display Setting**

Adjustment to display on the DISPLAY menu

Press [MENU] to display the menu dis-

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.



- 2 Press [<] or [>] to display the DIS-PLAY menu.
- $\mathbf{3}$  Press [ $\wedge$ ] or [ $\vee$ ] to select a function to be adjusted.
- 4 Press [BAND] (SET) to confirm the display.
- 5 Adjust the setting value.
- 6 Press [BAND] (SET).
- **7** Press [MENU] to confirm the adjust-

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

# **Customize the Display (Customize Function)**

You can edit the moving images and still images that are initially stored in the unit. You also can use the data that is downloaded from the Panasonic Web site and the data that is stored with a digital camera or other devices and processed with exclusive software, IMAGE STUDIO. See "Notes on Customize function" (→ page 38) as well.

Note: Visit Panasonic Web site (http://panasonic.co.jp/pas/en/software/customize/index.html) for details

### **Preparation:**

Put the CD-R/RW that contains data to be customized in hand.

- If there is a disc inside, take out the disc.
- 2 Press [SRC] to select the CD mode.
- 3 Hold down [SEL] for 4 sec. or more to display the menu screen.

6 Select a file.

 $[\][\][\]]$ : Select [BAND] (SET): Confirm

### Notes:

- Files are automatically identified by their extensions, and target files are displayed.
- If "BACK" is selected, the screen of step 5 appears.
- **7** For a moving image file or still image file, select where to save the file.

4 Load a CD-R/RW that contains data.

**CUSTOMIZE Menu Display** 

- It may take time for the unit to identify the CD-
- Discs recorded by the packet writing software are not supported.
- 5 Select an item to be customized.

[<][>]: Select [BAND] (SET): Confirm

### Notes:

- New data overwrites existing data.
- If "BACK" is selected, the screen of step 6
- Confirm the changed item.

 $[\Lambda][V]$ : Select [BAND] (SET): Confirm

Note: To exit the customize menu, hold down [SEL] 4 sec. or more.

### GRAPHIC PATTERN

Moving image (graphic pattern) data (→ page 36)

### STILL IMAGE

Still image data (→ page 36)

### OPENING MESSAGE

Moving image at power on (→ page 14)

### CLOSING MESSAGE

Moving image at power off (→ page 14)

[<][>]: [BAND] (SET): Confirm

Customization is performed. Do not turn off the power in mid-operation. (It takes approx. 8 minutes to complete this operation for a 751 kB moving image.) After completion of this operation, the screen of step 5 appears.

Note: If "NO" is selected, the screen of step 5

9 Hold down [SEL] 4 sec. or more.

The CD mode comes back. Press the [OPEN] button to eject the disc.

**DISPLAY Menu Display** 

### Note on Download Service

The download service may be suspended or stopped without advance notice. The download service is not available in some areas. Please visit the site below for further information.

Panasonic Web site: (http://www.panasonic.co.jp/global/)

### Notes on IMAGE STUDIO

- This download service is not available in some areas. For details, please access the Panasonic website.
- IMAGE STUDIO is available only by downloading from the address below. It is not bundled with this unit.
- Refer to the downloaded operating manual for how to use IMAGE STUDIO.

### Notes on File

- The customize-specific file is downloadable from the URL below. You can create exclusive files stored with a digital camera or other devices by using exclusive software, IMAGE STUDIO that can be accessed from the same URL.
- . Do not change the extension. Otherwise, the data cannot be recognized.

### At Disc Making

- Save only customize-specific data.
- Save all data in the root directory. Files contained in a folder cannot be recognized.
- . Follow the table below with regard to the number of files that are saved to a disc. Files beyond the specified capacity are not readable.
- Discs recorded by the packet writing software are not supported.

Туре	Extension	Max. number
GRAPHIC PATTERN	.pfm	10
STILL IMAGE	.pfs	15
OPENING MESSAGE	.pfo	5
CLOSING MESSAGE	.pfe	5

### At Customizing

- If customizing is interrupted on account of turning off the power, stopping the engine, removing the face plate or other reasons, you may lose the data. In such a case, try customizing again.
- The default image exists on the Panasonic Web site. If you would like to restore it, download the image from the site.

### Download site:

http://panasonic.co.jp/pas/en/software/ customize/index.html

### **Error Display Messages**

### NO FILES DETECTED

No customize-specific data on the disc

→ Load a disc that contains customize-specific data.

### **CUSTOMIZING FAILED**

Customize failed

- Check to see whether or not the extension is correct and file contents are appropriate.

### DISPLAY FILE INCOMPLETE

Intended moving image or still image is damaged.

Customize it again and overwrite the file with new one.

## **Troubleshooting**

### If You Suspect Something Wrong

Check and take steps as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest authorized Panasonic Servicenter. The product should be serviced only by qualified personnel. Please refer the checking and the repair to professionals. Panasonic shall not be liable for any accidents arising out of neglect of checking the unit or your own repair after your checking.

### ⚠ Cautions:

- Do not use the unit in an irregular condition, for example, without sound, or with smoke or a foul smell, which can cause ignition or electric shock. Immediately stop using the unit and consult your
- Never try to repair the unit by yourself because it is dangerous to do so.

### Possible cause **Possible solution**

### No power to the unit

**Problem** 

The power cord (battery, power and ground) is connected in the wrong way.

- Check the wiring.

Fuse blows out.

→ Eliminate the cause of fuse blowout and replace the fuse with new one. Consult your dealer.

### Sound is not generated.

MUTE is set to ON.

⇒ Set MUTE to OFF.

The wiring of speaker lines are not correct, or a break or poor contact arises.

→ Check the wiring in accordance with the wiring diagram. (→ page 50)

# and no operable

Common

The demonstration screen displayed

You cannot operate the unit while the demonstration screen appears.

Press [DISP] to end the demonstration screen.

If the demonstration screen appears frequently, there is a possibility that poor contact or wrong wiring arises between the battery lead of the unit and the battery cable of the car. (The battery lead should be always powered.)

Check the battery wiring in accordance with the wiring diagram.

### Noise

There is an electromagnetic-wave generator such as a cellular phone near the unit or its electrical lines

★ Keep an electromagnetic-wave generator such as a cellular phone away from the unit and the wiring of the unit. In case that noise cannot be eliminated due to the wiring harness of the car, consult your dealer.

The contact of the ground lead is poor.

→ Make sure that the ground lead is connected to an unpainted part of the chas-

### Noise is made in step with engine revolutions.

Alternator noise comes from the car.

- Change the wiring position of the ground lead.
- Mount a noise filter on the power supply.

38

**Customize the Display (Customize Function), Troubleshooting** 

**Problem** 

Some operations

are not executable.

### unit is still out of order, consult the dealer. BALANCE/FADER setting is not appropriate. → Readjust BALANCE/FADER. No sound from There is a break, a short circuit, poor contact or wrong wiring regarding the speaker speaker (s) - Check the speaker wiring. Common (continued) The speaker channels are The speaker wiring is confused between right and left. reversed between Perform the speaker wiring in accordance with the wiring diagram. right and left. The sound field is not clear in the The plus and minus terminals at right and left channels of speakers are connected stereo mode. reversely. Central sound does Perform the speaker wiring in accordance with the wiring diagram. not settled. The safety device works. The power fails - Call the store where you purchased the unit, or your nearest Panasonic unintentionally. Servicenter. Antenna installation or wiring of antenna cable is faulty. - Check whether the antenna mounting position and its wiring are correct. In addition, check to see whether the antenna ground is securely connected to the chassis. Poor reception or No power is supplied to the antenna amplifier (when using a film antenna, etc.). noise - Check the wiring of the antenna battery lead. Unsatisfactory broadcast conditions. → Receive and listen to signals from the station concerned in the analog mode. Radio There are no HD radio broadcast stations. Move to an area where HD radio can be received. No digital sound is output. Analog mode is selected. ⇒ Select AUTO mode. Seeking takes too Digital seeking may take some time. - Change to auto seeking, and proceed with seeking again. long. CQ-CB8901U

Possible cause - Possible solution

Some operations are not executable in particular modes such as menu mode.

Read the operating instructions carefully and cancel the mode. In case the

### Problem

### Possible cause > Possible solution

# The number of auto preset stations is less than 6.

The number of receivable stations is less than 6.

Move to an area where receivable stations number is maximum, and try presetting.

### Preset stations cannot be stored.

The contact of the battery lead is poor, or the battery lead is not always powered.

Make sure that the battery lead is connected securely, and preset stations again.

# XM Tuner

吕

Radio (continued)

### Channel unselectable

No contract with XM Satellite Radio Inc.

Refer to page 13 of this book and the XM's website to sign up for XM Radio service.

## No playback or disc ejected

The disc is inserted upside down.

→ Insert a disc correctly.

There is a flaw or foreign material on the disc.

Remove the foreign material, or use a flawless disc.

### Sound skipping or noise

There is a flaw or foreign material on the disc.

Remove the foreign material, or use a flawless disc.

## Sound skipping due to vibration

The unit is not sufficiently secured.

 $\quad \Longrightarrow$  Secure the unit to the console box with the rear support strap, etc.

The unit is tilted at over 30° in the front-to-end direction.

→ Make the angle 30° or less.

### Disc unejectable

Something such as a peeled label obstructs the disc coming out.

→ Hold down the [OPEN] button for 2 sec. or more when the face plate is open (disc forced ejection). In case that the disc forced ejection does not work, consult the dealer

The microcontroller in the unit operates abnormally due to noise or other factors.

Unplug the power cord and plug it again. In case the unit is still out of order, consult the dealer.

40

### No playback or disc ejected

**Problem** 

### Possible cause - Possible solution

The disc has unplayable formatted data.

Refer to the description about MP3/WMA for playable sound data except CD-DA (i.e. music CD).

The unit plays back the ROM track of a MIX mode CD.

→ Skip the ROM track.

### The CD-R/RWs that are playable on other devices are not playable on this unit.

The playability of some CD-R/RWs may depend on the combination of media, recording software and recorder to be used even if these CD-R/RWs are playable on other devices such as a PC.

→ Make CD-R/RWs in different combination of media, recording software and recorder after referring to the description about MP3/WMA.

Sound skipping or noise

There is a flaw or foreign material on the disc.

Remove the foreign material, or use a flawless disc. For MP3/WMA, refer to the description about MP3/WMA.

# **Error Display Messages**

### **Problem**

### Possible cause - Possible solution

# Radio

RADIO E1

Digital broadcasts cannot be received because something is wrong. (However, analog broadcasts can still be received.)

- Call the store where you purchased the unit or the nearest Panasonic Servicenter to ask for repairs.

Cannot receive XM satellite radio

→ Verify the wiring.

ANTENNA

XM antenna unconnected.

Connect the XM antenna.

NO SIGNAL


XM broadcasts unreceivable because of poor receiving conditions.


Move to an area where XM broadcasts can be received well.

OFF AIR

Channel not in service

This channel is not currently in service. Tune to another channel.

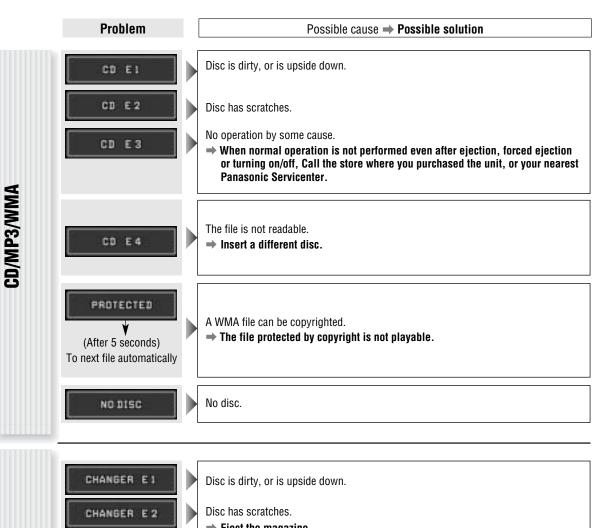

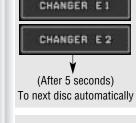

- → Eject the magazine.
- Check the disc.
- Load the disc again

**DISC Changer** CHANGER E 3 No operation by some cause.

⇒ Eject the magazine. If failure persists, press the reset switch on the DISC changer. If normal operation is not restored, call the store where you purchased the unit or the nearest Panasonic Servicenter to ask for repairs.

CHANGER E 6

An error arises in the DVD changer.

→ Check the DVD changer. ("REGION ERROR" etc.)

NO DISC

No disc is in the CD Changer (magazine).

→ Insert discs into the changer (magazine).

NOT CONNECTED

The changer has become disconnected from the unit in the changer mode.

> Verify the wiring.

Note: Messages in the action and display sections of the error chart vary with changers. Refer to the operating instructions for the Disc changer for details.

# Installation

### Warning

- DO NOT INSTALL THE MONITOR IN A LOCATION WHICH OBSTRUCTS DRIVING. VISIBILITY OR WHICH IS PROHIBITED BY APPLICABLE LAWS AND REGULATIONS. If the monitor is installed in a location which obstructs forward visibility or operation of the air bag or other safety equipment or which interferes with operation of the car, it may cause an accident.
- Never use bolts or nuts from the car's safety devices for installation. If bolts or nuts from the steering wheel, brakes or other safety devices are used for installation of the monitor, it may cause an accident.
- Attach the wires correctly. If the wiring is not correctly performed, it may cause a fire, failure of electrical equipment and-or an accident. In particular, be sure to run and secure the lead wire so that it does not get tangled with a screw or the moving portion of a seat rail.
- Use with 12 V DC negative ground car. This unit is only for use with a 12 V DC negative ground car. It cannot be used in large trucks or diesel cars which are 24 V DC cars. If it is used in the wrong type of car, it may cause a fire or an accident.

Δ

☐ Required Tools

You'll need a screwdriver and the following:

### □ Dashboard Specifications

lowing order.

### Power Lead

If your car has a radio or is pre-wired for one: Cut the connector wires one at a time from the plug (leaving the leads as long as possible) so that you can work with individual leads. Turn the ignition on to the accessory position, and ground one lead of the test bulb to the chassis.





Touch the other lead of the test bulb to each of the exposed wires from the cut radio connector plug. Tough one wire at a time until you find the outlet that causes the test bulb to light.


Now turn the ignition of and then on. If the bulb also turns off and on, that outlet is the car power

If your car is not wired for an audio unit: Go to the fuse block and find the fuse port for radio (RADIO) accessory (ACC) or ignition (IGN).

### Battery Lead

If your stereo unit has a yellow lead, you will need to locate the car's battery lead. Otherwise you may ignore this procedure. (The yellow battery lead provides continuous power to maintain a clock or other functions.)



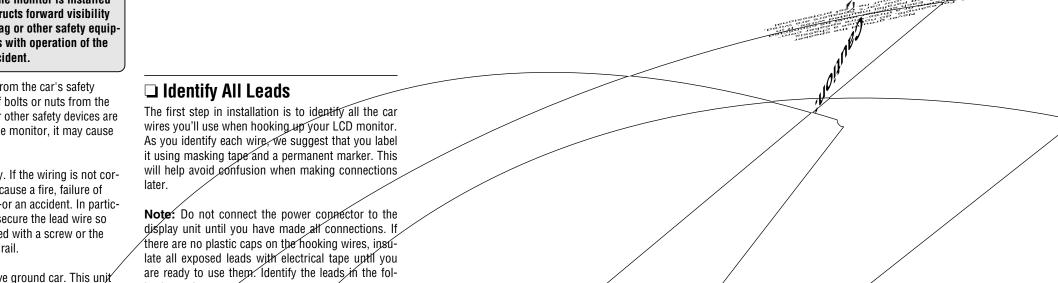


# Preparation

### Before installation, check the radio operation with antenna and speakers.

- Disconnect the cable from the negative (–) battery terminal (see caution below).
- Unit should be installed in a with the front end up not more than 30°.
- Remove Mounting from the main unit i mounted at shipmen.

 Supplied Hardware				
No.	Item	Diagram	Q'ty	
	ting Collar	22.5	1	



**Caution:** Do not disconnect the nals of a car with trip or navigation since all user settings stored in menlost. Instead take extra care with instaunit to prevent shorts.

## Methods for Five

T٢

 
(a) Using the Rear Support Strap

# Dashboard Installation

# Installation Precautions This product should be installed by a professional installer, if possible.


In case of difficulty, please consult the shop where you purchased the product.

- 1. This system is to be used only in battery system (car) with no
- 2. Follow the electrical Page 50-51 age to




- 5. Insulate all exposed wires to prevent sh
- 6. Secure all loose wires after installing t
- Please carefully read the operating an instructions of the respective equipm connecting it to this unit.

• We strongly recommend that you wear gloves for installation work to protect yourself from injuries. With a screwdriver, be careful not to injure your

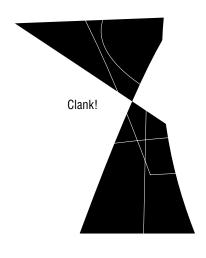



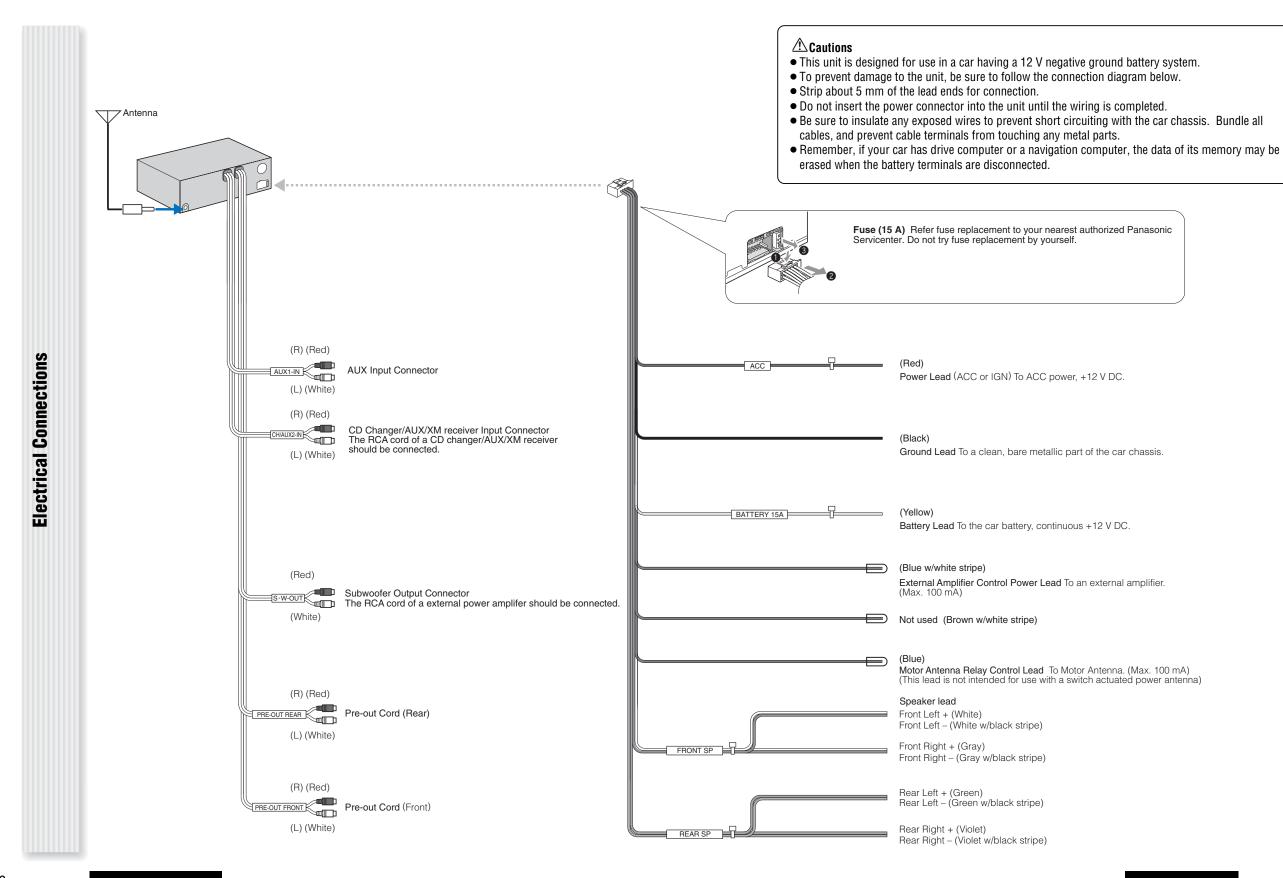


**Speaker Connections** 


- For connection to a CD changer (CX-DP880) or DVD changer (CX-DH801U), refer to the operating instructions of corresponding device.
- For details, consult the shop where you purchased this product.

A CD changer, an XM receiver cannot be connected at the same time.


### System Upgrade Example: Connecting with a CD changer

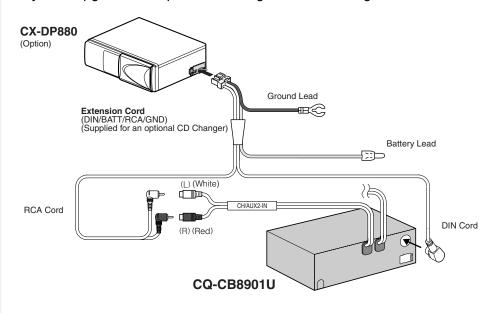


### System Upgrade Example: Connecting with an XM Receiver

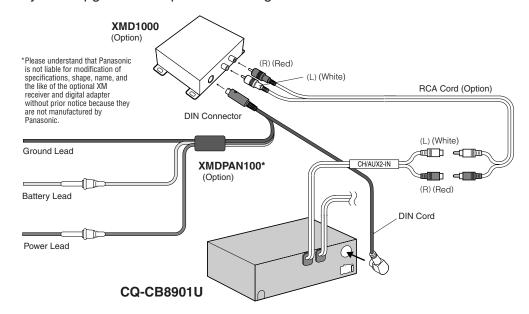
 
<u>^</u> Caution: Please follow the instructions given below. Failure to do so will cause damage to the unit and speakers.



- Use ungrounded speaker only.
- The maximum speaker input should be 50 W or more. (If used with the optional power amplifier, the speaker input should be higher than the maximum amplifier output.)
- The speaker impedance should be 4 8  $\Omega$ .
- This unit uses the BTCL circuit, so each speaker should be connected separately using parallel vinyl insulated cords.
- The speaker cords and the power amplifier unit should be kept away (about 30 cm apart) from the antenna and antenna extension cord.

 

 Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)

52

# **Specifications**

# General

Power Supply	DC 12 V (11 V - 16 V), Test Voltage 14.4 V, Negative Ground
Tone Controls (Bass/Treble)	Bass; ±12 dB at 62 Hz, Treble; ±12 dB at 16 kHz
<b>Equalizer Center Frequency</b>	60, 160, 400, 1 k, 3 k, 6 k, 16 k (Hz)
Variable Range of Equalizer	-12 dB to 12 dB (2 dB step)
<b>Current Consumption</b>	Less than 2.2 A (CD mode, 0.5 W 4-Speaker)
<b>Maximum Power Output</b>	50 W x 4 (at 1 kHz)
Speaker Impedance	4 - 8 Ω
Pre-amp output voltage	5 V
Subwoofer-output voltage	5 V
Pre-amp output impedance	60 Ω
Subwoofer-output impedance	60 Ω
<b>Dimensions (Main Unit)</b>	$178(W) \times 50(H) \times 155(D) \text{ mm } \{7'' \times 1^{15}/_{16}'' \times 6^{1}/_{8}''\}$
Weight (Main Unit)	1.7 kg {3 lbs. 12 oz}

# **CD Player**

Sampling Frequency	8 times oversampling
DA Converter	4 DAC System
Pick-Up Type	Astigma 3-beam
Light Source	Semiconductor laser
Wavelength	790 nm
Frequency Response	20 Hz - 20 kHz (±1 dB)
Signal to Noise Ratio	96 dB
<b>Total Harmonic Distortion</b>	0.01 % (1 kHz)
Wow and Flutter	Below measurable limits
Channel Separation	86 dB

0
7
a
Œ

FM		FM (HD Radio)	
Frequency Range	87.9 MHz - 107.9 MHz	Frequency Range	87.9 MHz - 107.9 MHz
Usable Sensitivity	12.2 dBf. (1.12 μV, 75Ω)	Usable Sensitivity	- 88 dBm (BER<1.0X10 -5)
50 dB quieting Sensitivity	15.2 dBf. (1.59 μV, 75Ω)	Signal to noise ratio	79 dB
Frequency Response	30 Hz - 15 kHz (±3 dB)	Stereo Separation	76 dB
Alternate channel selectivity	75 dB	Total harmonic distortion	0.08 % (1 kHz)
Stereo Separation	40 dB (at 1 kHz)		
Image response ratio	75 dB		
IF response ratio	100 dB		
Signal to noise ratio	62 dB		
AM		AM (HD Radio)	
Frequency Range	530 kHz - 1 710 kHz	Frequency Range	530 kHz - 1 710 kHz
Usable Sensitivity	25 dB/µV (S/N 20 dB)	Usable Sensitivity	21 dB/µV (BER<1.0X10 -5)
		Signal to noise ratio	77 dB
		Stereo Separation	74 dB
		Total harmonic distortion	0.08 % (1 kHz)

Above Specifications comply with EIA standards.

Power Output:

18 W RMS x 4 Channels at 4  $\Omega$  and  $\leq$  1% THD+N

Signal to Noise Ratio: 78 dBA (reference: 1 W into 4  $\Omega$ )



- Specifications and design are subject to modification without notice due to improvements.
  Some figures and illustrations in this manual may be different from your product.