

### Pioneer sound.vision.soul

**DVD MULTIMEDIA AV NAVIGATION SERVER** 

# **AVIC-D3**

# **Quick Start Guide**

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual provided with the product.

 
### **Hardware buttons**

- (1) Disc loading slot
- (2) EJECT button
- (3) MENU button
- (4) MAP button
- (5) VOLUME knob
  Turn to adjust the AV (Audio

and Video) volume or press to change the AV source. Press and hold the **VOLUME** knob to switch the source to mute. (6) I◀◀/▶►I Pressing this


Pressing this button when the AV source is selected skips a track, file or chapter. Press and hold to fast forward/fast reverse a track, file or chapter.






# **Switching the screen**

Press the following buttons and touch keys to display the respective screens.

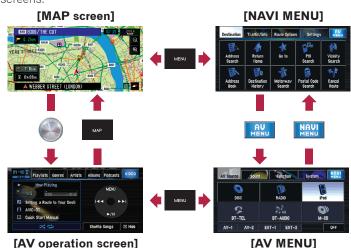

### **Search function overview**

This navigation system has multiple methods for entering your destination. (1) (2) (3) (4) (5)

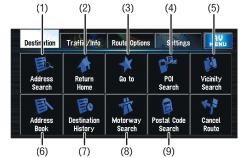

- (1) Search by address
- (2) Shortcut key for home address
- (3) Shortcut key for favourite destination
- (4) Search for stores, restaurants, and other businesses in the points of interest database
- (5) Search for stores, restaurants, and other businesses in your vicinity

Search result list for vicinity



- (6) Select a destination from your address book
- (7) Select a previously routed destination
- (8) Select a route to a motorway entrance or exit
- (9) Search for a destination by postal code number

# Searching for your destination by address

- 1 Display the [NAVI MENU].
- 2 Touch the Destination tab and then touch Address Search.
- 3 Input the street name.



Country key

Touching the country key displays the country selector screen.

4 Select the street name from the list.



If the list screen for city or area is displayed, touch the city or area where your destination is located. 5 Input the house number and then touch OK.



When route calculation is completed, navigation guidance begins.





6 Begin driving in accordance with navigation guidance.

This navigation systems gives you route guidance both visually and by voice.

Published by Pioneer Corporation.
Copyright © 2007 by Pioneer Corporation.
All rights reserved.

<CRB2335-A> EW MAN-AVIC-D3-QSG-EN Printed in Belgium





### **Basic operation on the map screen**

### Switching the view mode



Press the MAP button on the map screen

This navigation system allows vou to select different view modes depending on your pref-

### Scrolling the map



Touch and hold where you would like to scroll to on the map screen. After a few seconds, the scrolling will begin.

#### Zoom in or zoom out



- (1) Direct scale change (2) Gradual scale change

## **Setting the voice guidance volume**



Touch the Settings tab in [NAVI MENU] and then touch Volume.

### Traffic information on the map

Traffic conditions can be overlaid on the map when there is traffic information transmitted by FM radio service through the Radio Data System (RDS-TMC).



(1) Traffic event ---- Stationary traffic

— Slow and queuing traffic Closed/blocked roads

Other event (e.g., accident)

### **Selecting the AV source**

Touch the AV source icon to select the desired AV source.



#### (1)AV source icon

- DISC [CD, ROM, DVD-V, DivX1
- RADIO [Tuner]
- iPod [iPod]

- **BT-TEL** [Bluetooth-Telephone]
- **BT-AUDIO** [Bluetooth-Audio]
- M-CD [Multi-CD player]

(2) OFF [Switch the source off]

In the AV operation screen or the source off screen, press the MENU button to display [AV MENU].

## Operation of AV operation screens

#### CD source screen

**DVD-V** source screen

Title O1 Chap O2 OO1min23sec

Touch the screen to display touch

keys, when you play the DVD-Video.

<⇒► B.Mark ■



#### **Touch kevs**

Playback and Pause

#### 

backward

or backward

CD: Skip the track forward or

**DVD**: Skip the chapter forward

**DVD**: Stop playback

### Playback of video sources

Setting a Route to Your Desti

FI AVIC-D3

Quick Start Manual



1 Display the iPod source screen.

### 2 Touch VIDEO to display the video screen.

Playing your Apple iPod®

(sold separately) to the navigation system.

Playback of music sources

Playlists Genres Artists Albums Podcasts VII

1 Display the [AV MENU].

You can control an iPod by connecting the iPod cable (CD-I200)

2 Touch the iPod icon to display the iPod source screen.

In the video screen, control operations with the iPod's buttons.



(1) Touch keys to operate the video source.

(1) Touch one of the categories

(2) Touch to display the video

(3) Touch keys to operate the

for a song.

music source.

screen.

in which you want to search

(2) Touch to display the music screen.

#### RADIO source screen



### **▲Up/▼Down**

Switch the radio station

#### Seek/Seek

Seek tuning (keep touching for about one second and release)

#### **Band**

Switch between bands: FM1 – FM2 – FM3 – MW/LW

#### Detail

Switch to the Detail information display.



