

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER DANGER

—Any appliance is electrically live, even when the switch is off.

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER WARNING

—To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by,

on, or near children or by individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water.

Return the appliance to service center for examination and repair.

5. Keep the cord away from heated surfaces.

6. Never operate the appliance with the air opening blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked.

Keep the air openings free of lint, hair and the like.

7. Never drop or insert any object into any opening.

8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

9. To disconnect, turn all controls to "off", then remove plug from outlet.


10. Do not place appliance on any surface while it is operating.

11. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur.

12. Avoid skin contact with moving blades.

13. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.

CONAIR®

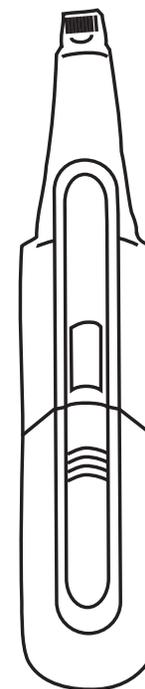


Instruction Booklet

NE150 Models

NOSE & EAR HAIR TRIMMER

Model NE150

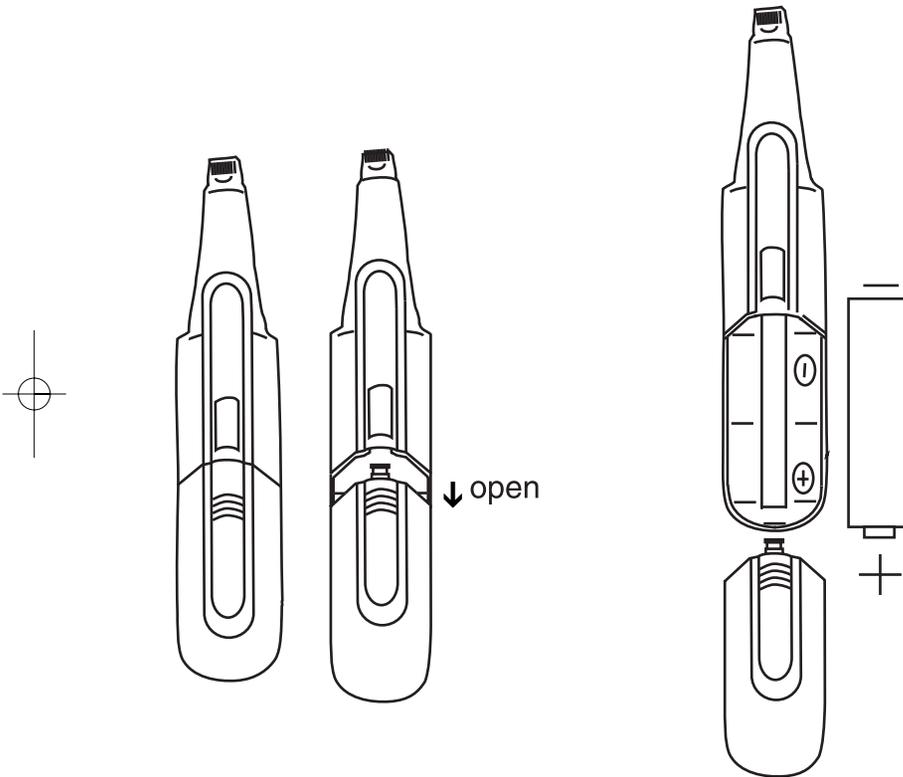

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

©2004 Conair Corporation

Service Center:

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

For shaving tips and information on Conair appliances call: **1-800-3-CONAIR** or visit us on the web at www.conair.com