



INSTANT FLY SETUP INSTRUCTIONS

MODEL 2000010327 2000010328
2000010330 2000010331

Before You Begin

- Ensure the instant tent is set up correctly by carefully reviewing and following all safety and installation instructions provided with the instant tent.
- Take out the instant fly and stakes. (Fig. 1)




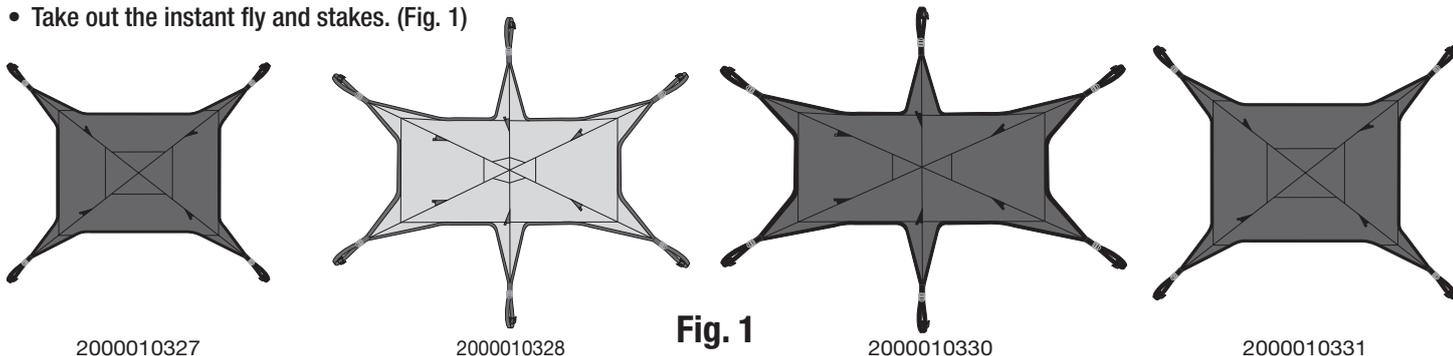


Fig. 1

1 Install The Instant Fly

- Drape rainfly over tent. (Fig. 2)
- Attach the plastic fasteners to the leg poles below the push button. (Fig. 3)
- Pull the webbing to adjust the firmness of rainfly on tent. (Fig. 3)
- Attach and stake out guylines. (Fig. 4)
- Adjust sliders to make guylines tight.

Note: The tent may look different from yours. It is for illustration purposes only.

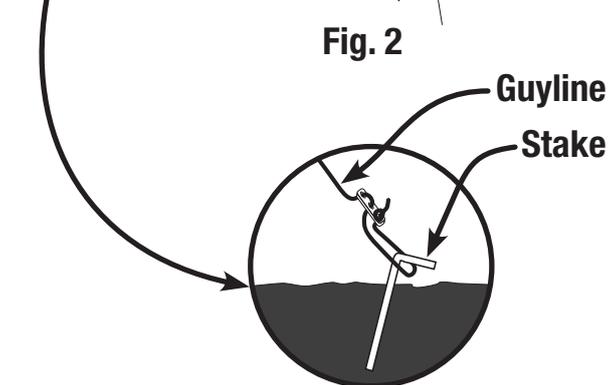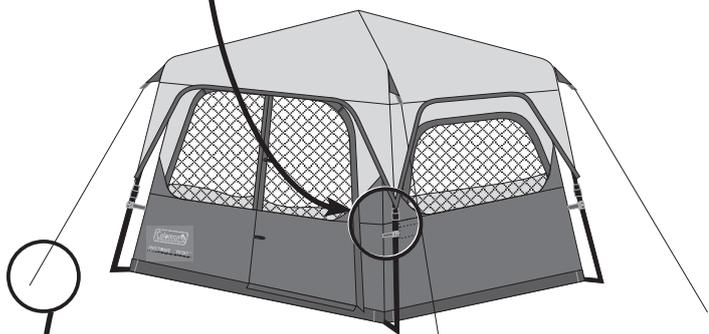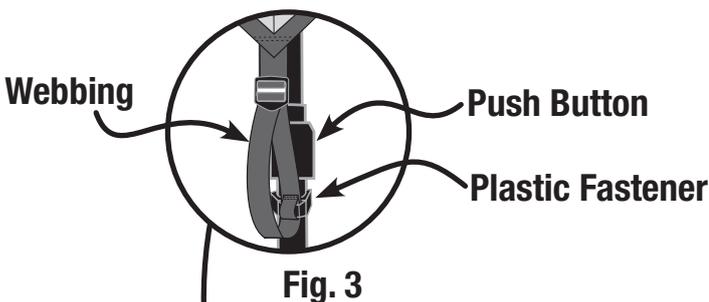

Completed instant tent with fly

2 Disassembly

To take down the tent fly, follow the previous steps and illustrations in the reverse order:

- Take off the plastic fasteners from leg poles. (Fig. 3)
- Remove guylines and stakes. (Fig. 4)
- Remove rainfly from the tent. (Fig. 2)

3 To Store

1. All stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure all components are clean and dry before placing in carry case.
3. Store in a clean, dry area.

To obtain additional instant tent units, see your local retailer or visit www.coleman.com.

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 North Hydraulic • Wichita, Kansas 67219 U.S.A.
1-800-835-3278 • www.coleman.com

MADE IN BANGLADESH

© 2011 The Coleman Company, Inc. All rights reserved.
Coleman®, , and are registered trademarks of The Coleman Company, Inc.

4010015469 (ECN20020024-01)