

NOTE: Attachment comb is designed to work with you may thin out the hair using the attachment comb 7. Once the shape of your eyebrow has been defined, and then remove it from shaver head, the cutter

1. To remove the shaver head from the unit, press the release buttons on both sides of the foil frame
2. When replacing the foils, press the foil frame into position, being careful not to push on the foil.
3. This trimmer comes with two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller blade is ideal for detailing.
4. To outline and shape your eyebrows, use the trimmer without the attachment comb.
5. Move the power switch to the ON position.
6. Use the blades to define the edge of the eye-brow

USING THE EYEBROW TRIMMER

next use.

1. After hair removal, run a comb or brush (not included) through the hair to remove any cut loose hair.
2. When you have finished, move the switch to the OFF position. Clean the blades with the provided brush and then return the handle to the shave, or if you have to go over your leg area more often to get a smooth result, or if you experience skin irritation. Replacement time will depend on how often use your shaver and how quickly your hair grows.
2. When replacing the foils, press the foil frame into position, being careful not to push on the foil.
2. Attach the trimming head as described in "Changing the Heads" section
1. Be sure the unit is fully charged

comb on the cutting blades first, and then snap down on to the back of the trimmer head.

8. Place the comb on the head in the longest position by sliding the comb into the groove on the head closest to the blades.

9. Gently move the comb through the hair in the direction of growth.
10. After you have done this with the longest setting, if you want to make the hair shorter, move to the next lowest position until the desired length of hair is achieved.
10. When finished, move the on/off switch to the OFF position and clean the blades with the supplied cleaning brush.
5. Replace the foil frame.

NOVEDADES FASCINANTES DE CONAIR

LT10PCS cotadora de batería

- Cortadora personal con 2 cabezales intercambiables:
- Cortadora para el bikini
- Cortadora inclinada para las cejas

LWD500CS Rasuradora Infinity by Conair™

- Recargable
- Para uso en seco/mojado
- Cabezal giratorio 360°

Manual de Instrucciones Modelo LTGS40PCS

Para su seguridad y para seguir disfrutando de este producto durante años, siempre lea las instrucciones cuidadosamente antes de usarlo.

07PG10139

IB-7665A

PARTES DE REPUESTO:

Puede ordenar las partes de repuesto siguientes, llamando al 1-800-3-CONAIR.

- Hoja y cuchillas – Modelo CSP26 (\$6.50)
- Cepillo de limpieza – Modelo BRUSH-180 (\$0.50)
- Base de carga – Modelo LTGS40-CB (\$6.00)
- Cortadora para el bikini – Modelo LTGS40 (\$5.00)

7. Once the shape of your eyebrow has been defined, and then remove it from shaver head, the cutter

REPLACING THE CUTTER (INNER BLADES)

1. Place the comb attachment on the bikini trimmer head and press down (see Fig. 5).
2. Push up the comb attachment to release (see Fig. 6).
2. When replacing the foils, press the foil frame into position, being careful not to push on the foil.
2. Attach the trimming head as described in "Changing the Heads" section
1. Be sure the unit is fully charged

REPLACING THE FOILS FRAME

1. After hair removal, run a comb or brush (not included) through the hair to remove any cut loose hair is achieved.
10. When finished, move the on/off switch to the OFF position and clean the blades with the supplied cleaning brush.
5. Replace the foil frame.

9. Gently move the comb through the hair in the direction of growth.


8. Place the comb on the head in the longest position by sliding the comb into the groove on the head closest to the blades.

9. Gently move the comb through the hair in the direction of growth.

10. After you have done this with the longest setting, if you want to make the hair shorter, move to the next lowest position until the desired length of hair is achieved.


- Hoja y cuchillas – Modelo CSP26 (\$6.50)
- Cepillo de limpieza – Modelo BRUSH-180 (\$0.50)
- Base de carga – Modelo LTGS40-CB (\$6.00)
- Cortadora para el bikini – Modelo LTGS40 (\$5.00)

place the bikini trimmer and eyebrow trimmer and maintenance,

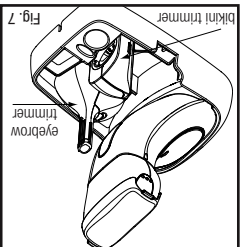

STORAGE STAND

1. Place the comb attachment on the bikini trimmer head and press down (see Fig. 5).

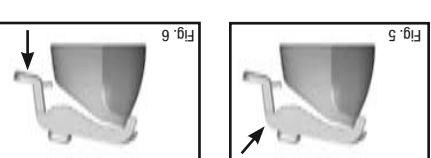

BIKINI TRIMMER COMB ATTACHMENT

2. Hold both sides of the inner blades and pull straight up (Fig. 4).
3. Firmly hold the new inner blade and gently guide it into the inner blade mount.
- Caution: MAKE SURE YOU DO NOT LOSE THE SMALL SPRING UNDER THE CUTTERS.
4. Firmly press the inner blades until they snap into place.
5. Replace the foil frame.

GARANTÍA LIMITADA POR DOS AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque de \$3,00US por gastos de envío y manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIERA GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

CENTRO DE SERVICIO

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para consejos e información sobre los productos de Conair, llame al 1-800-3-CONAIR o visite nuestra página Web www.conair.com

Hecho en la China
©2008 Conair Corporation
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

option or proper disposal.

officials for details in your area for recycling waste stream. Check with your local waste disposal.

NOTE: The product you have purchased contains rechargeable batteries. The batteries are recyclable. At the end of their useful life, under various state and local laws, it may be illegal to dispose of these batteries into the municipal waste stream. Check with your local waste disposal.



NOTE: Never pull on the charging stand cord. Never twist or wrap the cord around the charging stand. Lay it flat in the storage pouch provided with the cord coiled up when not in use.

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.

CAUTION

2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

any implied warranties, obligations, or liabilities, including but not limited to the fitness for a particular purpose, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

into the customized locations for storage (see Fig. 7).

CÓMO LIMPIAR LA RASURADORA

1. Enjuague el conjunto de cuchillas bajo agua corriente fría o tibia. No use agua caliente. También puede usar el cepillo de limpieza provisto.
2. Permita que las hojas y la cortadora interna sequen al aire antes de volverlas a instalar.

PRECAUCIÓN

1. Mantenga el cabezal y el aparato firmemente al sacudir el exceso de agua para evitar que el aparato caiga o que el conjunto de cuchillas se desarme.
2. No seque la rasuradora con secador u otro aparato. Esto podría lastimarlo.

IMPORTANTE: Nunca jale, tuerce o enrolle el cable alrededor de la base. Cuando no use el aparato, permita que el cable repose al lado de la base.



IMPORTANTE: Su aparato contiene baterías recargables de níquel de cadmio, las cuales deben reciclarse al final de su vida útil, según las leyes vigentes. No las tire con el resto de la basura. Comuníquese con las autoridades locales para averiguar las opciones de reciclaje en su localidad.

Made in China
@2008 Conair Corporation
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

NOTE: The product you have purchased contains rechargeable batteries. The batteries are recyclable. At the end of their useful life, under various state and local laws, it may be illegal to dispose of these batteries into the municipal waste stream. Check with your local waste disposal.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.



Fig. 4

IMPORTANTE: Tenga cuidado de no perder el pequeño resorte que se encuentra bajo las cuchillas.

4. Engánchelo en su lugar hasta que calce emitiendo un chasquido.
5. Vuelva a instalar las hojas.

GUÍA PARA LA CORTADORA PARA EL BIKINI



Fig. 5

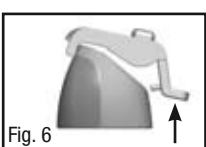


Fig. 6

1. Instale el guía encima de la cortadora y presione hacia abajo (Fig. 5)
2. Empuje el guía hacia arriba para sacarlo (Fig. 6)

BASE DE ALMACENAMIENTO

Dos espacios en la base de almacenamiento fueron diseñados específicamente para guardar la cortadora para el bikini y la cortadora para las cejas. Guarde el aparato y los accesorios en la base después de cada uso (Fig. 7).

Made in China
@2008 Conair Corporation
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

NOTE: The product you have purchased contains rechargeable batteries. The batteries are recyclable. At the end of their useful life, under various state and local laws, it may be illegal to dispose of these batteries into the municipal waste stream. Check with your local waste disposal.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, shall be limited in duration to the 24 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

9. Mueva la cortadora delicadamente. Si desea acortar aún más las cejas, use la posición más corta, deslizando el guía en la ranura más lejana a las cuchillas. Si desea rasurar las cejas, use la cortadora sin guía y rasure las cejas en la dirección opuesta al crecimiento del vello.

10. Después de terminar, apague el aparato ("OFF") y limpie las cuchillas con el cepillo de limpieza provisto.

CÓMO CAMBIAR LAS HOJAS

1. Cambie las hojas cada vez que siente que tiene que forzar la rasuradora o si tiene que rasurar la misma zona varias veces para lograr un resultado suave. También cambie las hojas si irritan su piel. La vida útil de las hojas depende del uso que hace de su aparato y de la rapidez de crecimiento del vello.

2. Oprima los botones de despejo que se encuentran en ambos lados del cabezal. Saque las hojas usadas e instale nuevas, teniendo cuidado de no apretarlas.

CÓMO CAMBIAR LAS CUCHILLAS INTERNAS

PRECAUCIÓN: SIEMPRE REEMPLACE LAS HOJAS Y LAS CUCHILLAS INTERNAS AL MISMO TIEMPO.

1. Oprima los botones de despejo y saque las hojas. Las cuchillas internas quedarán al descubierto.

2. Después de terminar, quite los recortes de pelo con un peine o un cepillo.

12. Apague el aparato ("OFF"). Limpie las cuchillas con el cepillo provisto, luego regrese el agarre en la base hasta el próximo uso.

8. Empiece con la posición más larga, deslizando el botón de ajuste del guía lejos de la parte trasera de la cortadora)

9. Mueva la cortadora delicadamente en la dirección del crecimiento del vello.

10. Acorte el vello poco a poco, usando ajustes más y más cortos hasta conseguir el tamaño deseado.

11. Después de terminar, quite los recortes de pelo con un peine o un cepillo.

12. Apague el aparato ("OFF"). Limpie las cuchillas con el cepillo provisto, luego regrese el agarre en la base hasta el próximo uso.

CONAIR®

For your safety and continued enjoyment of this product, please read instruction booklet prior to using.

Instruction Booklet Model LTGS40PCS



personal beauty groomer

These shavers use the following replacement parts, which can be ordered directly from Conair by calling customer service at 1-800-3-CONAIR.

Replacement Foil and Cutters - CSP26 – \$6.50

Cleaning Brush - BRUSH-180 – \$0.50

Charging Base - LTGS40-CB – \$6.00

Bikini Trimmer Attachment - Bikini-LTGS40 – \$5.00

EXCITING ITEMS FROM CONAIR

2 Interchangeable Blades:

- Angled Trimmer for eye-brows and other types of hair removal
- Rechargeable
- We/Dry
- Full Swivel 360° Head

LWD500CS Infinity by Conair™ Woman's Shaver

07PG10139

IB-7665A

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®

CONAIR®