

Philips
CD lens cleaner

CD and DVD

SAC2560



Clean and protect your CD and DVD player

Regular cleaning of your CD and DVD player's lens ensures optimum performance of your equipment. It is important to keep a CD and DVD player optical laser lens clean and dust free. This dry-brush system safely removes dust and debris.

Maintain original sound quality

- Safe dry brush cleaning system

Easy to use

- Voice instructions in 14 languages

PHILIPS
sense and simplicity

CD lens cleaner
CD and DVD

Specifications

Storage Media

- **Supported formats:** CD-Audio, CD-ROM, DVD-ROM

Accessories

- **User Manual:** 14 languages

Packaging Data

- **Quantity:** 1
- **EAN/UPC/GTIN:** 87 1010198397 6
- **Gross weight:** .12 kg
- **Tare weight:** .04 kg
- **Net weight:** .08 kg
- **Width:** 159 mm
- **Height:** 19 mm
- **Length:** 248 mm

Outer Carton

- **EAN/UPC/GTIN:** 87 1010198399 0

- **Quantity:** 72
- **Gross weight:** 11.08 kg
- **Tare weight:** 1.1 kg
- **Net weight:** 9.98 kg
- **Width:** 395 mm
- **Height:** 290 mm
- **Length:** 549 mm

Inner Carton

- **EAN/UPC/GTIN:** 87 1010198398 3
- **Quantity:** 6
- **Gross weight:** .84 kg
- **Tare weight:** .14 kg
- **Net weight:** .70 kg
- **Width:** 95 mm
- **Height:** 265 mm
- **Length:** 173 mm

SAC2560/97

Product highlights

Dry brush system

The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD players laser lens, leaving it clean and performing optimally.

Voice instructions

The voice instructions on this easy to use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.



Issue date 2008-09-02

Version: 3.0.5

12 NC: 9082 100 09133
EAN: 87 10895 98397 6

© 2008 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com