

Thank you for purchasing the Panasonic Telephone.

Features

- Designed Exclusively for Electronic Modular Switching Systems except KX-T616 and KX-T616D.
- LCD Readout shows date, time and call duration. HELP screenstyle 16-digit display helps you program system features.
- Auto-Answer Speakerphone lets you set intercom for automatic "hands free" answering. Also allows on-hook dialing.
- 12 Soft Buttons (Programmable Feature) for one-touch access to system features such as automatic call-back and paging. Can also store numbers for automatic dialing.

Accessories Extension line cord 1 Handset 1 Handset cord 1

Headset KX-T30890 and DSS console KX-T61640 are provided as option.
See "System Component" described on the reverse of the front cover in INSTALLATION MANUAL.

- Call Transfer switches either outside or internal calls to another extension.
- Call Forwarding automatically reroutes door intercom and internal and external calls to a different extension.
- CO Line BLF indicates status of each CO line and lets you connect to a CO line by pressing a CO line button.
- Power Failure Protection lets you make and receive calls on extensions 11–16 during power failures.
- Optional Headset combines the privacy of a handset with the hands free operation of a speakerphone.
- If you use a DSS console
 KX-T61640, you can access
 another extension by one touch of
 a DSS button instead of pressing
 an extension number, and system
 features of KX-T61610 by one
 touch of PROGRAMMABLE
 FEATURE button on a DSS
 console.

For further details, see OPERATING INSTRUCTIONS of KX-T61640

For further details, see the Installation Manual.

Panasonic

KX-T61630 KX-T61631

Detach this position

Quick Reference Card

•Lift the handset or press the SP-PHONE button first. • After finishing your conversation, hang up the handset or press the SP-PHONE button. INTER OFFICE CALLING Dial extension no. (11 through 26) (Intercom) **OUTWARD DIALING** Dial phone number • You may dial 81 through 86 instead of pressing the Individual Line Access CO button. Automatic Line Access WXY 9 Dial phone number SPEED DIALING Dial speed access code (00 through 99) ONE TOUCH DIALING (Press the PROGRAMMABLE No. FEATURE button.) For doorphone 1 **CALLING DOORPHONE** For doorphone 2

WHEN A LINE IS BUSY				
AUTOMATIC CALL BACK BUSY For Outside Calls	CO Hear a MNO Hang up handset busy tone 6 or press "SP-PHONE"			
For Intercom Calls	Dial extension no. Hear a (11 through 26) busy tone MNO Hang up handset or 6 press "SP-PHONE"			
BUSY STATION SIGNALING	Dial extension no. Hear a (11 through 26) busy tone			
LAST NUMBER REDIAL	Lift handset or press "SP-PHONE"			

	on and a fact of the fact of the control of the fact o	
	TO RECEIVE CAL	L8 ,
ANSWER	Lift handset or SP.PHONE	●You may press the CO or ICM button.
AUTOMATIC ANSWER- INTERCOM	To set AUTO ANS The AUTO ANSWI indicator will be lit.	To cancel
DIAL CALL PICKUP	Lift handset or press "SP-PHONE"	Ore Properties Ore Prop
WHILE	IAVING A CONV	ERSATION
HOLD-CO	To place call on hold	
Call On Hold	HOLD	
	To retrieve at the holding extension co • Press the CO button whose indicator is flashing	To retrieve from another extension co Press the CO button whose indicator is flashing
	slowly (green color).	slowly (red color).
Call on Exclusive Hold	To place call on hold HOLD HOLD	To retrieve co Press the CO button whose indicator is flashing in groups of 2 (green color).
HOLD-INTERCOM	To place call on hold	
Call on Hold	HOLD	
	To retrieve at the holding extension	To retrieve from another extension
	ICM	Dial holding extension no. (11 through 26)
Call on Exclusive Hold	To place call on hold	To retrieve

Panasonic

KX-T61630 KX-T61631

Quick Reference Card

WHILE	HAVING A CONVERSATIO	N
CONFERENCE	Dial 2nd Consult with corporate party 2nd party	
CALL WAITING To Terminate the Original Call and Talk to the New Caller To Place the Original Call on Hold and Talk to the New Caller	Hear a call co or Talk	
	Hear a call HOLD CO OR ICM Waiting tone Consult with new caller while original call is on hold	 If both original and new calls are intercom calls, you need not to press the ICM button.
CALL TRANSFER To Transfer after the Other Extension Answers	TRANSFER Dial extension no. Announce a wait for answer	Hangun
To Transfer without Announcing to the Other Extension	TRANSFER Dial extension no. Hang up (11 through 26)	

	PAGING				
Lift the handset or press the SP-PHONE button first.					
PAGING ALL EXTENSIONS To Access	DEF GHI Hear 1 Page Wait for answer and talk				
PAGING GROUP	For pickup group 1				
To Access	DEF JKL Hear 1 Page Wait for answer 5 beep Page and talk				
	For pickup group 2: At step 1 above, dial 36 instead of 35. For pickup group 3: At step 1 above, dial 37 instead of 35. For pickup group 4: At step 1 above, dial 38 instead of 35.				
PAGING-EXTERNAL To Access	DEF DEF Hear 1 Page Wait for 1 beep and talk				
PAGING AND TRANSFER	THANSFER DEF GHI Hear 1 Page Wait for answer and hang up				
To Transfer Call to Paged Person	 You may dial 35, 36, 37, 38 or 33 instead of 34. You need not to lift the handset or press the SP-PHONE button first. 				
ANSWER	GHI DEF Hear 1 Talk beep				

0 0

OTHER FEATURES

- Lift the handset or press the SP-PHONE button first.
- After hearing confirmation tone (1 or 2 beep), hang up the handset or press the SP-PHONE button.


Of THORE BUILDIN.				
BACKGROUND MUSIC	To enable	To cancel		
	PRS JKL 7 5 1 #	PRS JKL OFER O #		
CALL FORWARDING	Setting	To cancel		
	FWD/DND Dial extension no. FWD/DND OPER 0			
DIAL CALL PICKUP	Setting	To cancel		
DENY	PRS DEF 1 #	PRS DEF OF #		
DO NOT DISTURB	Setting	To cancel		
	FWD/DND 1 0 0 0 0	$\begin{array}{c c} & O \\ \hline & O \\ \hline & O \\ \hline \end{array}$		
FLEXIBLE NIGHT	Setting	To cancel		
SERVICE (extension 11 only)	PRS TUV ABC #	PRS TUV 1 #		
TO CANCEL FEATURES	PRS WXY #			
	•Following features car			
		Disturb, Call Forwarding, ata Line Security, Auto CO		
	Hunting.	ata Line Security, Auto CO		
SAVED NUMBER	AUTO SNR(SAVE) •YC	ou need not to lift the handset		
REDIAL Programming		press the SP-PHONE button.		
Dialing	SNR(SAVE)			
TIME SETTING	PRS PRS Enter "H	our" Enter "Minute"		
(extension 11 only)	7 7 (01 throu	gh 12) (00 through 59)		
	$\begin{bmatrix} 0 \\ 0 \end{bmatrix}$ or $\begin{bmatrix} 1 \\ \end{bmatrix}$	"0": for AM "1": for PM		
AUTO CO HUNTING	Setting	To Cancel		
	PRS 7 ABC 1 #	PRS ABC OFER O #		

Contents

Preparation	7	Detailed Operation	
Location of Controls	8	Use of Other Features Background Music	24
Basic Operation To Make Calls Outward Dialing	9 10 11 11 12	Mute Operation One Touch Access for System Features External Feature Access Switching between Using Handset and Hands-Free Pulse/Tone Conversion Time Setting Intercom Alerting Mode	24 25 26 27 28 29 29
When a Line is Busy Automatic Call Back Busy (Camp-on) Busy Station Signaling Last Number Redial	13 13 13	Flexible CO Button	30 30 31
To Receive Calls Answer Automatic Answer—Intercom Dial Call Pickup Directed Call Pickup Call Park Retrieve Doorphone While Having a Conversation Hold-CO Hold-Intercom	14 14 14 15 15 15	Call Forwarding Data Line Security Dial Call Pickup Deny Do Not Disturb Flexible Night Service Saved Number Redial Station Program Clear System Speed Dialing Entry Example of Operation Busy Lamp Field Liquid Crystal Display	33 34 34 35 36 36 37 39 42 43
Conference Call Waiting Call Splitting—Between CO and Intercom Call Splitting—Intercom Call Transfer	18 19 20 20 21	General Information Troubleshooting Guide Connection to Telephone Line	45 46 47
Paging Paging All Extensions Paging Group Paging-External Paging and Transfer Answer	22 22 23 23 23	Power Failure Wall Mounting Important Information Others Servicenter Directory Accessory Order Information Warranty back co	47 48 49 50 51 51

Preparation

Connect as shown.

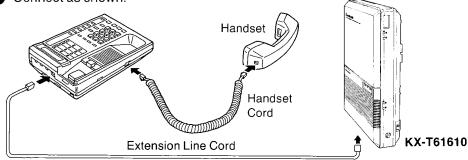

For other connection, see page 47.

Even if a power failure takes place, the unit can be used as a standard telephone if the unit is connected to "EXT11" through "EXT16" of the KX-T61610. For further details, see page 47.

RINGER VOLUME Selector:

Set to "HIGH".

LOW: The ringing sound will be low.

OFF: The telephone will not ring.

- CONTRAST Selector: Set to "L", "M", or "H" to choose the best display intensity.
- DIALING MODE Selector during Power Failure:

TONE: For tone dialing PULSE: For pulse dialing

POWER FAILURE Switch: Set to "OFF".

For further details, See page 47.

- MEMORY Switch: Set to "SET".
- HANDSET/HEADSET Selector: Set to "HANDSET".

If you use the optional headset KX-T30890, set to "HEADSET".

















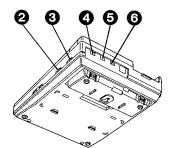

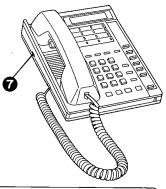

If the unit does not operate properly, disconnect the unit from the extension line cord and then connect again.

Location of Controls

For your convenience, keep this page open when you read the following instructions. CALL FORWARDING/DO NOT PAUSE Button DISTURB (FWD/DND) Button TRANSFER/CLEAR Button and Indicator -----**PROGRAMMABLE FEATURE Buttons** CONFERENCE Button and Card and Indicator ----LIQUID CRYSTAL (LC) Display NUMBER Card -TELEPHONE (Write your telephone number.) NUMBER Card and Card Cover After writing numbers` on the card, place the Card Cover from the side of the ICM button again. Twist the cover a little and place the two hooks which exist in the middle of the cover. You can also use the reverse side to write the desired CO line numbers. CENTRAL OFFICE (CO) LINE Buttons and Indicators SAVED NUMBER SPEAKER VOLUME REDIAL (SNR or CONTROL SAVE) Button-AUTO/MEMORY Button **LAST NUMBER** and Indicator REDIAL (LNR or REDIAL) Button-AUTO ANSWER/ MUTE Button and Indicator FLASH Button -INTERCOM(ICM) Button HOLD Buttonand Indicator MEMORY Cards -**SPEAKERPHONE** Write Speed Dialing (SP-PHONE) Button numbers. Quick reference and Indicator cards can be found under the Memory cards.

To Make Calls

When the unit is not in use, the Liquid Crystal Display will show the month, day and the present time. The unit will also show the corresponding mode activated. See pages 43 and 44.

Outward Dialing

Any of the 6 CO's may be directly selected.

■ Individual Line Access











LIFT THE HANDSET

PRESS "CO"

WAIT FOR THE DIAL THE PHONE C.O. DIAL TONE NUMBER

HANG UP WHEN THE CONVERSATION IS COMPLETED

or









PRESS "CO"

WAIT FOR THE DIAL THE PHONE C.O. DIAL TONE NUMBER

"SP-PHONE"
WHEN THE
CONVERSATION
IS COMPLETED

You may dial 9 or 81 through 86 instead of CO button. In this case, you must lift the handset or press the SP-PHONE button first.

9: Each extension can automatically select an idle CO (Central Office) line within the KX-T61610. 81 through 86:

Any of the 6 CO lines may be selected by dial access.

81: line access number of CO 1

82: line access number of CO 2

83: line access number of CO 3

84: line access number of CO 4

85: line access number of CO 5

86: line access number of CO 6

- You can not use the CO button whose indicator has been already lighting (red color) since anyone is using the CO line.
- The CO indicator will be lit (green color) at your extension and lit (red color) at other extensions.

Each extension can access new CO line without hanging up.

While having a conversation;



PRESS ANOTHER "CO"

•The original conversation will be terminated and new CO line can be accessed.

Inter Office Calling (Intercom)

Station to station dialing within the KX-T61610 system.

Using the Handset



LIFT THE HANDSET



DIAL THE EXTENSION NUMBER (11 through 26)



TALK



HANG UP

Hands-free



PRESS
"SP-PHONE"



DIAL THE EXTENSION NUMBER (11 through 26)



TALK



PRESS
"SP-PHONE"

- You may press the ICM button instead of the first SP-PHONE button.
- The ICM indicator will be lit (green color) while using the unit.

To Make Calls (cont.)

Speed Dialing

There are 100 memory locations of system speed dialing available.

For programming, refer to "System Speed Dialing Entry" on page 37.



LIFT THE HANDSET OR PRESS ''SP-PHONE''



PRESS "AUTO"



DIAL THE SPEED ACCESS CODE (00 through 99)

You may press the CO button to select the CO line directly after lifting the handset or pressing the SP-PHONE button.

One Touch Dialing

There are 12 memory locations for automatic dialing available.
Up to 32 digits can be stored into each memory location.

For your convenience, program private phone numbers into the KX-T61630/KX-T61631.

Programming

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- •Set the MEMORY switch of the KX-T61630/KX-T61631 to "PROGRAM".

■ Storage





DIAL "9"





PRESS
"PROGRAMMABLE
FEATURE"

DIAL THE PHONE NUMBER

PRESS "MEMORY"

- You may dial 81 through 86 instead of 9.
 - 9...Each extension can automatically select an idle CO line.
 - 81 through 86...Each extension can select a CO line designated.
- 9 or 81 through 86 must be dialed for storage.
- You may program "★", "#", "-", "FLASH" and "PAUSE". The SNR button is used as the "-" button.

■ To Correct an Error while Programming



PRESS "CLEAR (TRANSFĚŘ) INSTEAD OF "MEMORY"

- After pressing the CLEAR button, re-program the correct number.
- The TRANSFER button is used as the CLEAR button.

■ To Change a Stored Number

Repeat "Storage" on page 11.

■ To Erase after Programming



PRESS "PROGRAMMABLE "CLEAR FEATURE"



PRESS (TRANSFER)"



PRESS "MEMORY"

The TRANSFER button is used as the CLEAR button.

After programming all the numbers, return the MEMORY switch to "SET".

Delline



LIFT THE HANDSET PRESS OR PRESS "SP-PHONE"



"PROGRAMMABLE FEATURE"

■ You may press the CO button to select the CO line directly after lifting the handset or pressing the SP-PHONE button.


Calling Doorphone

Up to two doorphones (KX-T30865) can be connected to the KX-T61610.

Doorphone 1



 LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "31"

■ Doorphone 2

At step 2 left, dial 32 instead of 31.

When a Line is Busy

Automatic Call Back Busy (Camp-on)

If the intercom extension or outside line (CO line) you have dialed is busy, you will be automatically called back when the extension or the outside line (CO line) becomes free using this function.

This feature is also known as camp-on.

For outside (CO line) calls



PRESS "CO"



YOU WILL HEAR A BUSY TONE



DIAL "6"



CONFIRMATION TONE OF 2 BEEPS PRESS WILL BE HEARD



HANG UP OR "SP-PHONE"

For intercom calls



DIAL THE EXTENSION NUMBER (11 through 26)



YOU WILL HEAR A BUSY TONE



DIAL "6"



CONFIRMATION TONE



HANG UP OR **PRESS** "SP-PHONE"

When hearing the ring back on intercom calls or an outside call, lift the handset or press the SP-PHONE button.

■ If you make or receive a call during camp-on mode, the camp-on mode will be canceled.

Busy Station Signaling

If the extension you have dialed is busy, you can inform that extension that another intercom call is reaching by three beeps. For use of this feature, the other extension is required to be set this feature beforehand in the KX-T61610.



DIAL THE **EXTENSION** NUMBER



HEAR A BUSY TONE



AND WAIT FOR AN ANSWER

- To answer your signal, see "Call Waiting" on page 19.
- While the other party is using a data terminal equipment, you may not be able to use this feature.
- •If a busy tone is heard after dialing 1, it indicates that the other party has not set this feature.

Last Number Redial

The last phone number dialed on an outgoing CO can be rediated.

In case of the KX-T61631, press the REDIAL button instead of the LNR button.



LIFT THE HANDSET OR PRESS "SP-PHONE"



PRESS "LNR" (or "REDIAL")

■ You may press the CO button to select the CO line directly after lifting the handset or pressing the SP-PHONE button

To Receive Calls

Answer



or



LIFT THE HANDSET

PRESS
"SP-PHONE"

- When "Automatic Answering Selection" feature is selected "manual" mode in the KX-T61610 and outside call reaches, lift the handset and then press the CO button whose indicator is flashing (red color) quickly.
- When an intercom call reaches, you may press the ICM button whose indicator is flashing quickly and talk.
- When an outside call reaches, you may press the CO button whose indicator is flashing (red color) quickly and talk.

Automatic Answer-Intercom

Allows an extension user to answer an intercom call in the automatic handsfree mode without any operation.

This feature is required to be set beforehand while the unit is not in use.



PRESS "AUTO ANS" The AUTO ANSWER indicator will be lit.

■ To Cancel



 
PRESS "AUTO ANS" ◆The AUTO ANSWER indicator will go out.

Dial Call Pickup

Through the use of this feature, an extension user can answer any ringing extension within their own pickup group.



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "40"

To Receive Calls (cont.)

Directed Call Pickup

An extension may answer an incoming call that is ringing at another extension regardless of the pickup group.



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "4"



DIAL THE RINGING EXTENSION NUMBER

Call Park Retrieve

Allows extension user to retrieve a call (intercom or outside) on hold at any extension.

■ To Park a Call







REPLACE THE HANDSET OR PRESS "SP-PHONE"

See "Call on Hold" on pages 16 and 17.

■ To Retrieve a Parked Call at Any Extension



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "5"



DIAL PARKED EXTENSION NUMBER

In case parked call is outside call, you may dial parked CO line number (81 through 86) instead of parked extension number.

Doorphone

This feature is required to be set beforehand in the KX-T61610. For programming, see page 3-32 in INSTALLATION MANUAL.

■ For Answering Doorphones



LIFT THE HANDSET



PRESS "SP-PHONE"

When you want to make an outside call while an outside call is reaching, press the CO button.

While Having a Conversation

Hold-CO

Call on Hold

If you wish to leave your phone unattended but want the caller you are in conversation with to wait, call hold may be used. Outside calls may be placed on hold.



PRESS "HOLD"



CONFIRMATION TONE OF 2 BEEPS WILL BE HEARD

- The indicator of the CO button which is on hold will flash. slowly (green color).
- The indicator of the CO button which is on hold will flash. slowly (red color) at other extensions.

■ To Retrieve a Call on Hold



PRESS "CO"

 Press the CO button whose indicator is flashing slowly (green color).

■ To Retrieve a Call on Hold from Another Extension







PRESS "CO"

"SP-PHONE"

 Press the CO button whose indicator is flashing slowly (red color).

or



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL ''5'



DIAL THE HOLDING **EXTENSION** NUMBER

While Having a Conversation (cont.)

Hold-CO

Call on Exclusive Hold

Calls on exclusive hold can not be released by any extensions other than the phone which placed the call on hold.



"HOLD"





PRESS AGAIN

- The indicator of the CO button which is on hold will flash in groups of 2 (green color).
- The indicator of the CO button which is on hold will light (red color) at other extensions.

■ To Retrieve



"CO"

 Press the CO button whose indicator is flashing in groups of 2 (green color).

Hold-Intercom

Call on Hold

Extension user can place an intercom call on hold. An Intercom hold can be activated on one extension only.



PRESS "HOLD"



•The ICM indicator will flash slowly.

■ To Retrieve a Call on Hold



PRESS "ICM"

•The ICM indicator will be on.

■ To Retrieve a Call on Hold from Another Extension



LIFT THE HANDSET OR PRESS ''SP-PHONE''



DIAL "5"



DIAL THE HOLDING EXTENSION NUMBER

Hold-Intercom Call on Exclusive Hold

Calls on exclusive hold can not be released by any extensions other than the phone which placed the call on hold. An Intercom hold can be activated on one extension only.







AGAIN

The ICM indicator will flash in groups of 2.

■ To Retrieve



Conference

Allows for up to a three party conference, (2-outside/1-inside), (1-outside/2-inside) or (3-inside).



PRESS "CONF" A 1st party is placed on hold.



DIAL 2ND PARTY



CONSULT WITH THE 2ND PARTY



PRESS "CONF" A 3-party conference is now established.

- You may press the HOLD button instead of the CONFERENCE button first.
- To Terminate One Caller and Talk to the **Another Caller**
- •If both the conference parties are on the CO line: Press the CO button to talk to the desired party.
- If both the conference parties are on the extension; Press the ICM button.
 - You will be connected to the first participant.
- If the conference parties are on the CO line and extension:

To talk to the CO party, press the CO button. To talk to the extension party, press the ICM button.

While Having a Conversation (cont.)

Call Waiting

 
Call Waiting Tone during a conversation indicates there is a new incoming CO call or Intercom call. This feature is required to be set beforehand in the KX-T61610. For programming, see page 3-28 in INSTALLATION MANUAL.

• If a call waiting tone is heard and the CO or ICM indicator does not flash. this tone indicates a call waiting tone by special company service. In this case, see "Call Waiting-Outside Line" on page 26.

■ To Terminate the Original Call and Talk to the **New Caller**



WILL HEAR A **CALL WAITING** TONE



PRESS "CO" OR "ICM" WHOSE INDICATOR IS FLASHING QUICKLY The original call is \

now terminated.



TALK

■ To Place the Original Call on Hold and Talk to the New Caller

■ If both original call and new call are intercom calls: (The ICM indicator will change lighting into flashing quickly when new call reaches.)



WILL HEAR A CALL WAITING TONE



PRESS "HOLD" The dial tone \ is not heard. /



CONSULT WITH THE NEW CALLER WHILE THE ORIGINAL CALL IS RETURN TO THE ON HOLD



PRESS "ICM" TO TERMINATE THE 2ND CALL AND TO ORIGINAL CALL

■ If original call is CO call, and new call is CO call or intercom call: or

 
If original call is intercom call and new call is CO call:



WILL HEAR A CALL WAITING TONE




PRESS "HOLD" The dial tone \ is heard.



PRESS "CO" OR "ICM" WHOSE INDICATOR IS FLASHING QUICKLY



 CONSULT WITH THE NEW CALLER WHILE THE ORIGINAL CALL IS ON HOLD



PRESS "CO" OR "ICM" WHOSE INDICATOR IS FLASHING SLOWLY TO TERMINATE THE 2ND CALL AND TO RETURN TO THE ORIGINAL CALL

Call Splitting—Between CO and Intercom

Allows an extension user to alternate between a CO party and an Intercomparty.



PRESS "HOLD" TO PLACE 1ST PARTY ON HOLD



 
DIAL 2ND PARTY



CONSULT WITH THE 2ND PARTY WHILE THE 1ST PARTY IS ON HOLD



PRESS "HOLD" TO PLACE THE 2ND PARTY ON HOLD




PRESS "CO" OR "ICM" WHOSE INDICATOR IS FLASHING SLOWLY



CONSULT WITH THE 1ST PARTY



 PRESS "HOLD" TO PLACE THE 1ST PARTY ON HOLD



PRESS "ICM" OR "CO" WHOSE INDICATOR IS FLASHING SLOWLY



CONSULT WITH THE 2ND PARTY

 To release the call splitting mode, press the CO or ICM button without pressing the HOLD button.
 Conversation will be terminated and call on hold will be

returned to conversation. Call Splitting—Intercom

Allows an extension user to alternate between two intercom parties.



PRESS "HOLD" TO PLACE 1ST PARTY ON HOLD



DIAL 2ND PARTY



CONSULT WITH THE 2ND PARTY WHILE THE 1ST



PRESS "HOLD" TO PLACE THE 2ND PARTY ON HOLD



CONSULT WITH THE 1ST PARTY



PRESS "HOLD"
TO PLACE THE
1ST PARTY ON
HOLD



CONSULT WITH THE 2ND PARTY

To release the call splitting mode, press the ICM button instead of the HOLD button.

Conversation will be terminated and call on hold will be returned to conversation.

While Having a Conversation (cont.)

Call Transfer

Outside calls or intercom calls may be transferred to any extension manually.

■ To Transfer after the Other Extension Answers









PRESS
"TRANSFER"

DIAL THE EXTENSION NUMBER (11 through 26)

ANNOUNCE AND WAIT FOR AN ANSWER

HANG UP OR PRESS ''SP-PHONE''

- When busy, you may access the other extension by dialing 1. Also you may return to the calling party by pressing the CO or ICM button whose indicator is flashing slowly (green color).
- To Transfer without Announcing to the Other Extension







DIAL THE EXTENSION NUMBER



HANG UP OR PRESS "SP-PHONE"

■ To Retrieve the Call

If the other extension did not receive the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:

Outside call



PRESS "CO"
TO RETURN TO THE CALLING PARTY
(The CO indicator is flashing slowly.

Intercom call



PRESS "ICM"
TO RETURN TO THE
CALLING PARTY
(The ICM indicator
(is flashing slowly.)

- To change the party to whom a call is transferred before hanging up: Press the CO or ICM button whose indicator is flashing slowly to retrieve the call, then repeat the procedure of Call Transfer.
- •The time that the transferred call which is not received returns to you, may be set to 15 seconds. For changing, see page 3-53 in INSTALLATION MANUAL.

Paging

Paging All Extensions

Allows paging to all extensions.

The page can only be heard from a proprietary telephone such as KX-T61630/KX-T61631.

■ To Access



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "34"



CONFIRMATION TONE OF 1 BEEP WILL BE HEARD



PAGE



WAIT FOR AN ANSWER AND TALK





Paging Group

Allows paging to one of four groups.

The page can only be heard from a proprietary telephone such as KX-T61630/KX-T61631.

■ To Access

For Pickup Group 1



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "35"



CONFIRMATION TONE OF 1 BEEP WILL BE HEARD



PAGE



WAIT FOR AN ANSWER AND TALK

Page will be heard from built-in speaker.



- For Pickup Group 2: At step 2 above, dial 36 instead of
- For Pickup Group 3: At step 2 above, dial 37 instead of
- For Pickup Group 4: At step 2 above, dial 38 instead of 35.

If the dial tone (continuous tone) changes to a reorder tone (intermittent tone) or a mistake is made, hang up and start again.

Paging (cont.)

Paging-External

Allows access to external paging equipment.

■ To Access



LIFT THE HANDSET OR PRESS 'SP-PHONE"



DIAL "33"



CONFIRMATION TONE



PAGE



WAIT FOR CONFIRMATION TONE AND TALK





Paging And Transfer

■ To Transfer a Call to the Paged Person



WHILE HAVING A CONVERSATION



PRESS "TRANSFER"



DIAL "34"



CONFIRMATION



PAGE



WAIT FOR AN ANSWER



HANG UP OR PRESS "SP-PHONE"



38 or 33 instead of 34.

Answer

A page from built-in speaker or external paging equipment can be answered from any extension.



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "43"



CONFIRMATION TONE



TALK

•If a call and CO number has been paged and transferred, you may answer by pressing the CO button whose number has been paged and indicator is flashing slowly (red color), instead of dialing 43.

Use of Other Features

Background Music

Music from an external source (e.g. radio) can be listened to on the built-in speaker of the telephone.

■ To Enable



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "751#"



HANG UP OR PRESS "SP-PHONE"

 


WILL HEAF MUSIC

■ To Cancel



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "750#"

Mute Operation

Use when you do not want your voice to be heard by the other party.

This feature can be activated in speakerphone mode only.

■ To Enable

Be sure the SP-PHONE indicator is on.



PRESS "MUTE" ◆The MUTE indicator will flash.

■ To Cancel



PRESS AGAIN ●The MUTE indicator will go out.

Use of Other Features (cont.)

One Touch Access for System Features

Features that can be accessed by using the Dialing button also can be programmed into memory. (e.g. Paging All Extensions, Background Music.)

■ To Program

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T61630/KX-T61631 to "PROGRAM".

Example:

Paging All Extensions (Dial 34)







PRESS ["PROGRAMMABLE FEATURE"

PRESS
"MEMORY"

- System features described in the table on page 45 can be programmed into memory.
- After programming all the system features, return the MEMORY switch to "SET".

■ To Access



LIFT THE HANDSET OR PRESS "SP-PHONE"



PRESS
"PROGRAMMABLE
FEATURE"

External Feature Access

access features of the central office or host PBX. (e.g. CALL WAITING FEATURE can be

Allows extension user to

supplied by Central Office.)

The external feature (e.a. CALL WAITING FEATURE) can only be accessed when engaged on an outside call. The following example shows you one of the procedures.

■ Call Waiting—Outside Line



WILL HEAR A CALL WAITING TONE



PRESS "FLASH"



CONSULT WITH THE NEW CALLER WHILE THE ORIGINAL CALL IS ON HOLD



PRESS "FLASH"



CONSULT WITH THE ORIGINAL CALLER WHILE THE 2ND CALL IS ON HOLD If the calling party on hold hangs up, the line is terminated.

- "Flash" can be stored into memory in the same way as "Storage" on page 11.
- You may access some features of host PBX using the FLASH button.

If KX-T61610 is connected to host PBX and flash operation is required, follow the procedure of flash operation which is required in the host PBX.

Use of Other Features (cont.)

Switching between Using Handset and Hands-free

You may choose the handset or hands-free.

■ To Use the Handset

While having a conversation using speakerphone



LIFT THE HANDSET

■ To Use Hands-free

While having a conversation using the handset



PRESS "SP-PHONE"



 
HANG UP TH HANDSET

- When the other party finds it difficult to hear your voice:
 Lower the sound level using the SPEAKER VOLUME
 CONTROL or speak louder.
- Absorbing echoes:
 Use in a room which has curtains or carpeting.
- To avoid lost conversations:
 If some part of the conversation is lost while talking, speak alternately.

Pulse/Tone Conversion

When the dialing mode is required to change a pulse mode to a tone mode in one dialing sequence, this feature is used.


(e.g. computer-accessed long distance service)



 When you dial using this feature, you must use the line set to a pulse mode.
 Phone number after dialing "**#" will be changed to tone mode.

■Example:(Computer-accessed long distance service)

 - Local access telephone number of the alternate long distance service company 765-4321, Authorization no. 0123456, Long distance no. 543-210-9876
- Pulse mode is required by local access telephone number of the alternate long distance service company.
- Service of MCI, SPRINT, METRO or other systems is used.



Use of Other Features (cont.)

Time Setting (extension 11 only)

When the present time is out of order, you can adjust by following procedure.



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "77"



ENTER THE HOUR (01 through



ENTER THE MINUTE (00 through 59)





"0": for AM "1": for PM



Intercom Alerting Mode

"Voice alerting" (through built-in speaker) that is established at the called party's extension, can be switched to "Tone alerting" (ringing). This feature is required to

be set beforehand in the KX-T61610.

For programming, see page 3-31 in INSTALLATION MANUAL.

Switching to "Tone Alerting" Activation when "Voice Alerting" has been Established on the Called Party's Extension



LIFT THE HANDSET DIAL THE OR PRESS "SP-PHONE"



EXTENSION NUMBER



WAIT UNTIL A CONFIRMATION TONE IS HEARD



DIAL "*"



RING BACK TONE

Flexible CO Button

Allows each CO button to change into CO number which is different from printed CO number.

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T61630/KX-T61631 to "PROGRAM".

■ Setting



PRESS "CO" WHICH IS CHANGED INTO DIFFERENT CO NUMBER



DIAL THE CO NUMBER WHICH IS SET NEWLY (1 through 6)



PRESS ''MEMORY''

After programming all CO buttons, return the MEMORY switch to "SET".

Auto CO Hunting

Can access any CO line which is not in use directly by picking up the handset or the speakerphone on and tell an extension user which line is accessing by lighting the CO line indicator.

■ Setting











HANG UP OR PRESS "SP-PHONE"

LIFT THE HANDSET OR PRESS ''SP-PHONE'' DIAL "721#"

■ To Cancel













LIFT THE HANDSET OR PRESS "SP-PHONE"

PRESS "ICM"

DIAL "720#"



HANG UP OR PRESS "SP-PHONE"

Use of Other Features (cont.)

Dialing through CO Line



LIFT THE HANDSET OR PRESS "SP-PHONE"



WAIT FOR THE C.O. DIAL TONE



DIAL THE PHONE NUMBER

When you access an extension in the Auto CO Hunting Mode, press the ICM button after lifting the handset or pressing the SP-PHONE button.

Account Code

This feature gives each message of the SMDR an account code of the called or calling party. (Station Message Detail Recording—SMDR is cost saving feature that records all incoming and outgoing calls through CO line.) This feature has two modes-"Forced" and "Option". In the "Forced" mode, the account code must be entered every time the extension user dials. In the "Option" mode, the account code may be entered when a record of the account code is needed. When setting to the "Forced" mode, see page 3-34 in INSTALL ATION MANUAL.

Forced Mode

■ Making a Call



LIFT THE HANDSET OR PRESS "SP-PHONE"



PRESS "CO"
The FWD/DND
indicator
flashes.



PRESS
"FWD/DND"

The FWD/DND
indicator
lights. And an
intermittent
tone is
heard.



DIAL THE ACCOUNT CODE Account \ code is required 4 digits.



WAIT FOR THE C.O. DIAL TONE



DIAL THE PHONE NUMBER

- You may dial 9 or 81 through 86 instead of pressing the CO button.
- If the account codes are programmed with the telephone numbers for one touch dialing or system speed dialing, you need not dial the account code when making a call. Program as follows.







Account code (4 digits)

Telephone number

■ Receiving a Call

If you want to record a calling party's account code in the SMDR, follow the below-mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,





PRESS "FWD/DND"

DIAL THE ACCOUNT CODE

 Dialing the account code must be done before hanging up.

Option Mode

■ Making or Receiving a Call

If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.

Within 30 seconds of finishing your conversation or while having a conversation,



PRESS "FWD/DND"



ACCOUNT CODE

Account code is required 4 digits. Dialing the account code must be done before hanging up.

If you enter the wrong account code, press the FWD/ DND button and enter the correct code.

Station Programming

Call Forwarding

Intercom or outside calls to your extension can be automatically forwarded to any extension within the system.

■ Setting



LIFT THE HANDSET FOR PRESS
"SP-PHONE"



PRESS "FWD/DND"



DIAL THE EXTENSION NUMBER TO WHOM THE CALL IS FORWARDED



HANG UP OR PRESS "SP-PHONE"

- •The FWD indicator will flash slowly.
- To Cancel



LIFT THE HANDSET OR PRESS "SP-PHONE"



PRESS ''FWD/DND''



DIAL ''0''



HANG UP OR PRESS "SP-PHONE"

•The FWD indicator will go out.

Data Line Security

This feature provides security when transmitting data through an extension of the KX-T61610.

The parallel connection of the KX-T61630/ KX-T61631 and a data terminal equipment is impossible.

■ Setting



LIFT THE HANDSET

OR PRESS

"SP-PHONE"

PRS 7







DIAL ''741#''

HANG UP OR PRESS "SP-PHONE"

■ To Cancel



LIFT THE HANDSET OR PRESS "SP-PHONE"



OPER

DIAL "740#"





HANG UP OR PRESS "SP-PHONE"

Dial Call Pickup Deny

Allows you to prohibit any other extension user from answering calls directed to you.













HANG UP OR **PRESS** "SP-PHONE"

LIFT THE HANDSET OR PRESS "SP-PHONE"

■ To Cancel







OPER



LIFT THE HANDSET OR PRESS "SP-PHONE"

DIAL "730#"

DIAL "731#"

HANG UP OR **PRESS** "SP-PHONE"

Do Not Disturb

Each extension can be individually programmed from receiving intercom or outside calls.



"SP-PHONE"

LIFT THE HANDSET PRESS OR PRESS



"FWD/DND"



DIAL"10"



HANG UP OR **PRESS** "SP-PHONE"

•The DND indicator will be lit.

■ To Cancel



LIFT THE HANDSET PRESS OR PRESS "SP-PHONE"



"FWD/DND"



DIAL "0"

HANG UP OR **PRESS** "SP-PHONE"

Station Programming (cont.)

Flexible Night Service (extension 11 only)

Normal system operation is set for day time. Night service allows for the CO assignments to be rearranged via programming. Night service is enabled or disabled through extension 11 using this feature, at any time. Without activating this feature, the day/night services are automatically switched (default times are 9:00 AM and 5:00 PM) by the internal clock if the Switching Mode (Day/ Night Service) is selected "Auto" mode in the KX-T61610.

■ To Enable Night Service







DIAL "782#"



PRESS
"SP-PHONE"

LIFT THE HANDSE OR PRESS "SP-PHONE"

■ To Disable Night Service











LIFT THE HANDSET OR PRESS "SP-PHONE"

DIAL "781#"

HANG UP OR PRESS "SP-PHONE"

When the unit is not in use, the present mode selected will be shown by pressing the # button.

Saved Number Redial

The phone number of an outgoing call to the CO when dialing, can be stored and then redialed.

In case of the KX-T61631, press the SAVE button instead of the SNR button.

Programming

■ When the Called Line is Busy or while You are Speaking on the CO Line





PRESS "AUTO"

PRESS "SNR" (or "SAVE")

Dialing



LIFT THE HANDSET OR PRESS "SP-PHONE"



PRESS "SNR' (or "SAVE")

 
 You may press the CO button to select the CO line directly after lifting the handset or pressing the SP-PHONE button.

Station Program Clear

Dialing (79#) will clear station programs on that extension.



LIFT THE HANDSET OR PRESS "SP-PHONE"



DIAL "79#"



HANG UP OR PRESS "SP-PHONE"

- The following feature can be canceled.
 - Dial Call Pickup Deny
 - Background Music
 - Data Line Security
- Do Not Disturb
- Call Forwarding
- Auto CO Hunting

Station Programming (cont.)

System Speed Dialing Entry (extension 11 only)

100 phone numbers each with up to 32 digits may be stored for speed dialing. All speed dial entries must be entered at Extension 11 (KX-T61630/ KX-T61631) with the System Program Switch set to the PROGRAM position within the KX-T61610.

For your convenience. program common phone numbers into the KX-T61610.

Be sure the handset is in the cradle and the SP-PHONE button is off.

■ Storage



PRESS "AUTO"



"NEXT"

DIAL THE SPEED



ACCESS CODE (00 through 99)

DIAL ''9'



PHONE NUMBER



"MEMORY"

To advance to the next speed access code:



PRESS "SELECT"



DIAL THE SPEED

ACCESS CODE

(00 through 99)



DIAL THE



PHONE NUMBER


"MEMORY"

- To program the next speed access code continuously, press the NEXT button instead of pressing the SELECT button and dialing the speed access code.
- •To program the previous speed access code, press the PREVIOUS button instead of pressing the SELECT button and dialing the speed access code.
- You may dial 81 through 86 instead of 9.
 - 9... Each extension can automatically select an idle CO line.
 - 81 through 86... Each extension can select CO line designated.
- After programming all the numbers, return the System Program Switch to the SET position. (For more information see page 3-5 in INSTALLATION MANUAL.)


■ To Change a Stored Number

Repeat "Storage" on page 37.

■ To Erase after Programming

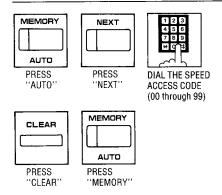

 ■ To advance to the next speed access code;



 You may use the NEXT button or the PREVIOUS button instead of pressing the SELECT button and dialing the speed access code.

Example of Operation

■ To Place a Call on Hold, and to Make Another Call

Example (CO line):

 Call in progress
 CO 1

 New call
 CO 2



PRESS "HOLD"



PRESS "CO 2"



MAKE A CONSULT WITH NEW CALL THE NEW CALLER WHILE THE

CALL ON CO 1

IS ON HOLD



PRESS "CO 1"
TO TERMINATE
THE CALL ON
CO 2 AND TO
RETURN TO
THE CALL
ON CO 1

Example (Intercom):

Call in progress on extension 12
New call on extension 13



PRESS "HOLD"



DIAL THE EXTENSION NUMBER 13



CONSULT WITH THE NEW CALLER WHILE EXTENSION 12 IS ON HOLD



PRESS "ICM"
TO TERMINATE
THE CALL ON
EXTENSION 13
AND TO RETURN
TO THE CALL ON
EXTENSION 12

■ To Make a Call and Transfer a Called Party to Another Extension

Example:

Call in progress CO 1

Extension to whom a call is transferred .. Extension 12



PRESS "CO 1"



MAKE A CALL



PRESS
"TRANSFER"



DIAL THE EXTENSION NUMBER 12



ANNOUNCE AND WAIT FOR AN ANSWER



PRESS
"SP-PHONE"
TO TERMINATE
A CALL

-39-

■ To Place One Call on Hold and Transfer the New Call to an Extension

Example:

Call in progress	CO 1
New call	CO 2
Extension to whom a call is transferred Extens	ion 12



PRESS "HOLD"



PRESS "CO 2"



MAKE OR RECEIVE A NEW CALL



THE NEW
CALLER
WHILE THE
CALL ON CO 1
IS ON HOLD



PRESS "TRANSFER"



DIAL THE EXTENSION NUMBER 12



HANG UP OR PRESS "SP-PHONE"

- CO 2 call is now transferred to extension 12.
- CO 1 call is still on hold.

■ To Place Three Calls on Hold, Transfer Two of the Calls to Extensions and Talk to Call on Hold

Example:



PRESS "HOLD"



PRESS "CO 2"



MAKE OR RECEIVE A NEW CALL



CONSULT WITH THE NEW CALLER WHILE THE CALL ON CO 1

IS ON HOLD



PRESS "HOLD"

Example of Operation (cont.)



PRESS "CO 3"



MAKE OR RECEIVE A NEW CALL



CONSULT WITH THE NEW CALLER WHILE THE CALL ON CO 2 IS ON HOLD



PRESS "HOLD"



PRESS "CO 1"



CONSULT WITH THE CALLER ON CO 1 WHILE THE CALLER'S ON CO 2 AND CO 3 ARE ON HOLD



PRESS "TRANSFER"



DIAL THE EXTENSION NUMBER 14



PRESS "CO 2"



CONSULT WITH THE CALLER ON CO 2 WHILE THE CALLER ON CO 3 IS ON HOLD



PRESS "TRANSFER"



DIAL THE EXTENSION NUMBER 15



PRESS "CO 3"



TALK

- •The call on CO 1 is now transferred to extension 14.
- •The call on CO 2 is now transferred to extension 15.
- •The call on CO 3 is now returned into conversation.
- You can transfer a desired call on CO to an extension in desired order regardless of order of placing on hold.

Busy Lamp Field

The indicators corresponding to the ICM (Intercom) and the CO buttons will indicate the status of the extensions.

ICM indicator light

Light	Status	
off	idle	
on	in use for intercom	
slow flashing	on hold	
flashing in groups of 2	on exclusive hold	
quick flashing	receiving	

Notes:

- If a call reaches through the CO line to which the CO line number is not assigned, the ICM indicator will flash quickly.
 - And the CO call can be received by pressing the ICM or the SP-PHONE button or lifting the handset.
- If a call on CO line to which the CO line number is not assigned, is placed on hold, the ICM indicator will flash.

CO indicator light

Light	Status	
off	idle	
on (green color)	in use	
slow flashing (green color)	on hold	
flashing in groups of 2 (green color)	on exclusive hold	
on (red color)	in use at another extension	
slow flashing (red color)	on hold at another extension	
quick flashing (red color)	receiving	

Liquid Crystal Display

When the unit is not in use, the LC Display will show the month, day and the present time. Also the LC Display will show the year, month, day and the day of the week for about 5 seconds by pressing the $\boxed{*}$ key.

DISPLAY TYPE	WHEN THE DISPLAY SHOWS	
DURATION 2:15'30	While you are in conversation through a CO line. • "2:15'30" indicates that the length of time that you have been speaking is about 2 hours 15 minutes and 30 seconds.	
PROGRAM MODE	When the MEMORY switch is set to "PROGRAM".	
MØ1: NOT STORED	When memory location 01 is stored no telephone number.	
CAMP ON EXT12	When "Camp-on" is set for an extension 12.	
CAMP ON CO-1	When "Camp-on" is set for the CO 1.	
D00R 1	When "Doorphone 1" is called.	
EXT-11	When an intercom call reaches from the extension 11.	
CO 1	When an outside call reaches the CO 1.	
CONF EXT13 CO-2	When "Conference" has been established among you and the extension 13 and the CO 2.	
PAGING(ALL)	When all extensions are paged.	
PAGING(GRP2)	When group 2 is paged.	
EXTERNAL PAGING	When a page has been accessed from an external paging equipment.	
BGM ON	When "Background Music" is set on.	
BGM OFF	When "Background Music" is canceled.	

DISPLAY TYPE	WHEN THE DISPLAY SHOWS	
FORWARDING EXT18	When "Call Forwarding" is set for an extension 18	
FWD/DND CANCEL	When "Call Forwarding" is canceled.	
C.PICKUP DENY	When "Dial Call Pickup Deny" is set.	
C.PICKUP ALLOW	When "Dial Call Pickup Deny" is canceled.	
DO NOT DISTURB	When "Do Not Disturb" is set.	
NIGHT MODE	When "Flexible Night Service" is set.	
DAY MODE	When "Flexible Night Service" is canceled.	
ENTER PGM CODE	When the SYSTEM PROGRAM switch in the KX-T61610 is set to "PROGRAM".	
SPEED DIALING	When the AUTO button is pressed to program a speed dialing number.	
ENTER SPEED CODE	When the NEXT button or SELECT button is pressed to program a speed dialing number after the AUTO button is pressed.	
RESTRICTED	When "Toll Restriction" is set.	
ENTER ACCNT CODE	When the FWD/DND button is pushed to enter an account code.	
AUTO CO HUNT ON	When "Auto CO Hunting" is set.	
AUTO CO HUNT OFF	When "Auto CO Hunting" is canceled.	
BACK CO-1 EXT15	When the CO1 call that is transferring to extension 15 is returned.	

Table of System Features

The following system features can be programmed into memory.

Dial Plan Code	es can be programmed into memory. System Features
Extension no. (11 through 26)	Individual Inter Office Calling
DEF Or DEF ABC 2	Calling Doorphone 1 or Doorphone 2
DEF 3	Paging-External
DEF GHI 4	Paging All Extensions
DEF PRS Or DEF TUV 8	Paging Group 1, 2, 3 or 4
GHI OPER O	Dial Call Pickup
Extension no. 4 (11 through 26)	Directed Call Pickup
GHI DEF 4 3	Paging Answer
Extension no. (11 through 26)	Call Park Retrieve
MNO 6	Camp-on
PRS 0°EP #	Cancelling Call Forwarding or Do Not Disturb
PRS 1 Extension no. (11 through 26)	Call Forwarding
PRS 1 1 0°EE #	Do Not Disturb
PRS DEF OF #	Cancelling Dial Call Pickup Deny
PRS DEF 1 #	Dial Call Pickup Deny
PRS JKL OFF. O #	Cancelling Background Music
PRS JKL 1 #	Background Music
PRS TUV 1 #	Flexible Night Service—Day Mode
PRS TUV ABC #	Flexible Night Service—Night Mode



Troubleshooting Guide



Problem

Cause & Remedy

The unit does not ring.

Ringer Volume Selector is set to "OFF". Set to "HIGH" or "LOW".

The unit does not operate during power interruption.

The unit is used as extension 17 through 26. Use another KX-T61630/KX-T61631 which is used as extension 11 through 16 and switch the POWER FAILURE switch to "ON".

Then the unit can be used as a standard telephone.

The unit does not operate in spite of using the optional headset KX-T30890.

The HANDSET/HEADSET selector is set to "HANDSET".

Switch the selector to "HEADSET".

System programming can not be done into the KX-T61610.

You may have programmed without using an extension 11. The system programming can be done by using an extension 11 only.

I have transferred a call to the different party by mistake.

Press the CO or ICM button whose indicator is flashing slowly to retrieve the call, then repeat the procedure of Call Transfer.

Power failure does not take place but the unit does not operate except in manual dialing and receiving.


The POWER FAILURE switch may be set to the ON position. Change the switch to the OFF position.

I placed a call on hold and hung up once, then seized a line and tried to place a call on exclusive hold, but I can not.

Retrieve a call once and place a call on exclusive hold again.

Connection to Telephone Line

The KX-T61630/KX-T61631 may be connected to a telephone line. But will only operate in Manual Dialing and Receiving.

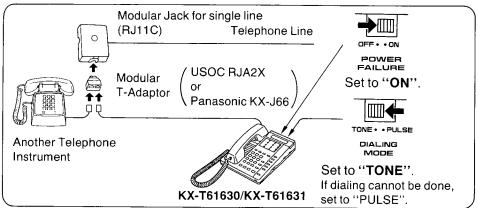

- In this case, if you are required from the telephone company, inform the followings.

 - •Ringer Equivalence; 1.0 B
 - The particular line to which the equipment is connected.
- Do not use any handset other than Panasonic handset for model KX-T61630/KX-T61631 use.
- This unit must not be connected to a coin operated line. If you are on a party line, check with your local telephone company.

■ Ringer Equivalence Number (REN):

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

Power Failure

In the event of a power failure, each CO line will be connected to assigned extension if the KX-T61630/KX-T61631 is used as an extension 11, 12, 13, 14, 15 or 16.

CO 1 will be assigned to extension 11

CO 2 will be assigned to extension 12

CO 3 will be assigned to extension 13

CO 4 will be assigned to extension 14

CO 5 will be assigned to extension 15 CO 6 will be assigned to extension 16

In this case, set the POWER FAILURE switch to "ON".

If dialing cannot be done, switch the DIALING MODE selector to the other position ("PULSE" or "TONE").

 


Wall Mounting


This unit can be mounted on a wall phone plate.

To rotate the handset guide for wall mounting

- 1. Pull up in the direction of arrow (A).
- Set by rotating as shown.




To temporarily place the handset down during a conversation, hook as shown.

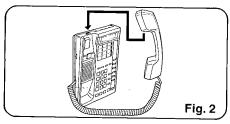



To mount the unit on a wall phone plate

- 1. Remove the rest by pulling in the direction of the arrow (B) while pushing the two snap tabs simultaneously in the direction of the arrow (A), as shown in Fig. 3.
- 2. Insert the hooks of the rest into the hole of the unit then replace the rest by pushing it in the direction of the arrow (©), as shown in Fig. 4.
- 3. Connect the telephone cord to the unit.

 - **4.** Mount the unit to the wall phone plate then seat securely by hooking as shown in Fig. 5.
- **5.** Connect the cord to the telephone line jack.



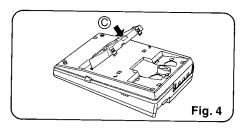

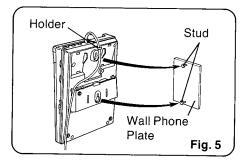

When you want to connect the unit to a wall phone plate using a short telephone cord, have a house-wiring installed by the telephone company or a qualified installer, purchase a short telephone cord of 4-conductor and connect the cord to a wall phone plate.

Important Information

In the event terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

- (a) Promptly notify the customer.
- (b) Give the customer an opportunity to correct the problem with their equipment.
- (c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in F.C.C. Rules and Regulations Subpart E of Part 68.

The Telephone Company may make changes in its communications facilities, equipment, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in F.C.C. Part 68. If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

This telephone does not provide magnetic coupling to hearing aids.

FCC rules prohibit the use of nonhearing aid-compatible telephones in the following locations or applications:

- All public or semipublic coinoperated or credit card telephones.
- (2) Elevators, highways and tunnels (automobile, subway, railroad or pedestrian) where a person with impaired hearing might be isolated in an emergency.
- (3) Places where telephones are specifically installed to alert emergency authorities such as fire, police or medical assistance personnel.
- (4) Hospital rooms, residential health care facilities, convalescent homes, and prisons.
- (5) Workstations for hearing impaired personnel.
- (6) Hotel, motel, apartment lobbies; in stores where telephones are used by patrons to order merchandise; in public transportation terminals where telephones are used to call taxis, or to reserve lodging or rental automobiles.
- (7) Hotel and motel rooms. (At least ten percent of the rooms must contain hearing aid-compatible telephones; or contain jacks for plug-in hearing aid-compatible telephones which will be provided to hearing impaired customers upon request.)

Others

- •If there is any trouble, disconnect the unit from the extension line and connect a known working phone. If the known working phone operates properly, have it repaired by one of the specified Panasonic Factory Service Centers. If the known working telephone does not operate properly, check the Electronic Modular Switching System (KX-T61610).
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.



 The unit should be kept free of dust, moisture and vibration, and should not be exposed to direct sunlight.



 Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.



WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

"This equipment has been tested and found to comply with the limits for a Class B computing device in accordance with the specifications set forth in Subpart J of Part 15 of the FCC Rules. If this equipment does cause interference to radio or television reception which can be determined by turning the equipment on and off, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver."

For your fut	ure reference	
SERIAL NO(found on the bottom of the unit)	DATE OF PURCHASE	
NAME OF DEALER		
DEALER'S ADDRESS		

Limited Warranty

Panasonic Company, PHI or PSC will repair this product with new or rebuilt parts, free of charge. in the U.S.A. or Puerto Rico for one (1) year from the date of original purchase in the event of a defect in materials or workmanship.

Batteries (if included)—New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days from the date of original purchase. Non-rechargeable batteries are not warranted.

Carry-in or mail-in service in the continental U.S.A. can be obtained during the warranty period from a Matsushita Services Company (MSC) Factory Servicenter listed in the Servicenter Directory, Or call 1-800-447-4700, toll free, to locate an authorized MSC Servicenter, Carry-in or mail-in service in Puerto Rico or Hawaii can be obtained during the warranty period by calling the telephone numbers listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

This warranty only covers failures due to defects in materials or workmanship which occur during normal use. It does not cover damage which occurs in shipment or failures which are caused by products not supplied by Panasonic Company, PHI or PSC or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, modification, or service by anyone other than a MSC Factory Servicenter or authorized MSC Servicenter or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

PANASONIC COMPANY, PHI AND PSC SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

ALL EXPRESS AND IMPLIED WARRANTIES. INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Division at the company address indicated below.

Panasonic Company Division of Matsushita Electric Corporation of America

One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Hawaii, Inc. ("PHI")

91-238 Kauhi St. Ewa Beach, Honolulu, Hawaii 96808-0774

Panasonic Sales Company ("PSC"), Division of Matsushita Electric of Puerto Rico, Inc.

-PANUG-019 Ave. 65 De Infanteria, KM 9.7 Victoria Industrial Park, Carolina, Puero Rico 00630

Printed in Japan

PQQX5343YA F1087H1127

Servicenter Directory

To locate an Authorized Servicenter in Your Area within the Continental U.S.A.

DIAL TOLL FREE: 1-800-447-4700

24 Hours a Day, 7 Days a Week

Requests for assistance in obtaining repairs or technical information...contact any one of the following Service Administration offices:

EASTERN

50 Meadowland Parkway Secaucus, NJ 07094 201-348-7460

MIDWEST

425 East Algonquin Road Arlington Heights, IL 60005 312-981-4842

WESTERN

6550 Katelia Avenue Cypress, CA 90630 714-895-7438

SOUTHERN

1854 Shackle-Ford Court, Suite 105 Norcross, GA 30093 404-925-6860

Correspondence requesting product information should be sent to:

Panasonic Consumer Affairs, Matsushita Services Company, Division of Matsushita Electric Corporation of America, 50 Meadowland Parkway, Secaucus, NJ 07094

Service in Puerto Rico MATSUSHITA ELECTRIC OF PUERTO RICO, INC.

MATSUSHITA ELECTRIC OF PUERTO RICO, INC Panasonic Sales Company Factory Servicenter

Calle Rosarito, Edif
D Ceramica Industrial Park
Carolina, Puerto Rico 00630
809-750-5135, 809-750-5235

Service in Hawaii

91-238 Kauhi Street, Ewa Beach P.O. Box 774 Honolulu, Hawaii 96808-0774 808-682-1521

Service in the Continental U.S.A....

Factory Servicenters

1575 NORTHSIDE DRIVE SUITE 325 ATLANTA, GA 30318 (404) 351-8978

MATSUSHITA SERVICES COMPANY

Division of Matsushita Electric Corporation of America 50 Meadowland Parkway, Secaucus, New Jersey 07094

Accessory Order Information

- Replacement parts and accessories are available through your local authorized parts distributor.
- For the authorized distributor in your area, call toll free: 1-800-447-4700.

Part No.	Picture	Description	Comment
KX-J07G		Handset cord	7 feet
KX-J15G			15 feet
KX-J25G		(gray)	25 feet
KX-J66		T adaptor	Parallel connection for single line

بور و