

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT BOSTON RCC45. You'll find the answers to all your questions on the BLAUPUNKT BOSTON RCC45 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT BOSTON RCC45
User guide BLAUPUNKT BOSTON RCC45
Operating instructions BLAUPUNKT BOSTON RCC45
Instructions for use BLAUPUNKT BOSTON RCC45
Instruction manual BLAUPUNKT BOSTON RCC45





## Manual abstract:

[ TA (priority for traffic announcements) If "TA" is displayed, the system will play traffic stations only. TA on/off: Press button. = FMT - FM, Travelstore To switch between the FM memory banks I, II and "T" (Travelstore). To switch over: Press FMT as many times until the desired bank is indicated in the display. To store the six most powerful stations automatically with Travelstore: Store: Press FMT; seek tuning starts. Cassette operation: When playing a tape, the display shows "TAPE". : DSC (Direct Software Control) Use the DSC function to customise certain programmable, basic settings to suit your personal needs and preferences. See chapter "DSC programming" for more information. 16 Installation/Connection Your new car radio is equipped with security coding. To switch the anti-theft protection on or off it is necessary that the set is connected to permanent 12 V supply.

If you would like to install this equipment yourself or add any new components, please read the enclosed installation and connection instructions carefully. Do not connect the loudspeaker outputs to ground! Use only the accessory and replacement parts approved by Blaupunkt. 17 PORTUGUÊS This car radio is optionally available with or without the QuickOut release bracket. With the QuickOut handle you can easily pull the unit out of the installation compartment in order to take your Blaupunkt with you when ESPAÑOL QuickOut SVENSKA NEDERLANDS ITALIANO? Code LED May flash for additional theft protection when the car radio is switched off (see DSC CODE-LED). As the driver of a motor vehicle, it is your responsibility to pay attention to the traffic situation at all times.

Never use your car radio in a way that could distract you. Please keep in mind that you travel a distance of 14 m per second at a speed of only 50 km/h. Should the traffic situation become particularly demanding, we advise you not to use the radio. Always make sure that you are still able to hear any warning signals coming from outside of the vehicle, such as police or fire engine sirens, so that you can react accordingly. Always select a moderate volume for playing your car radio while you are driving.

FRANÇAIS ] M·L To select the MW or LW waveband. Press button as many times until the desired band is adjusted. Traffic safety ENGLISH Recall: Press FMT as many times until the display shows "T". Then briefly press one of the preset buttons 1, 2, 3, 4, 5, or 6. Precautions Before starting to use your new car radio, please read the information on "Traffic safety" and "Anti-theft coding" carefully. you leave your car. The preset stations will remain stored even for a longer period of time. To remove the set, ·press knob ("a") and pull the radio out with handle ("b"). To re-install the unit, ·insert the radio until it stops and move the handle back to the front panel. If the security coding system is switched off, the set will be ready for use immediately.

If the security coding system is active, proceed as described under "Re-start following an interruption of the power supply" each time the set is re-inserted. DEUTSCH Important notes Anti-theft coding This car radio is supplied with inactive code protection. In order to switch the anti-theft coding system on, proceed as described in the following. If the coding system is active while the power supply to the system is interrupted (e.g. theft, disconnection of the car battery), the set will be electronically blocked. In such a case it can only be made operable again by entering the correct code number given in the car radio passport. - Press preset button 2 five times; the display shows "2500". - Press preset button 3 twice; the display shows "2520". - Press preset button 4 once; the display shows "2521".

· To confirm the code number: Press the rocker button. Now the security coding system is active. After having turned on the set, the display will briefly show a "C" before "REG ON" or "REG OFF". Re-start following an interruption of the power supply (coding system is activated) · · Turn on the radio. The display shows "CODE".

