
CID3292


1




ENG Quick Start Guide

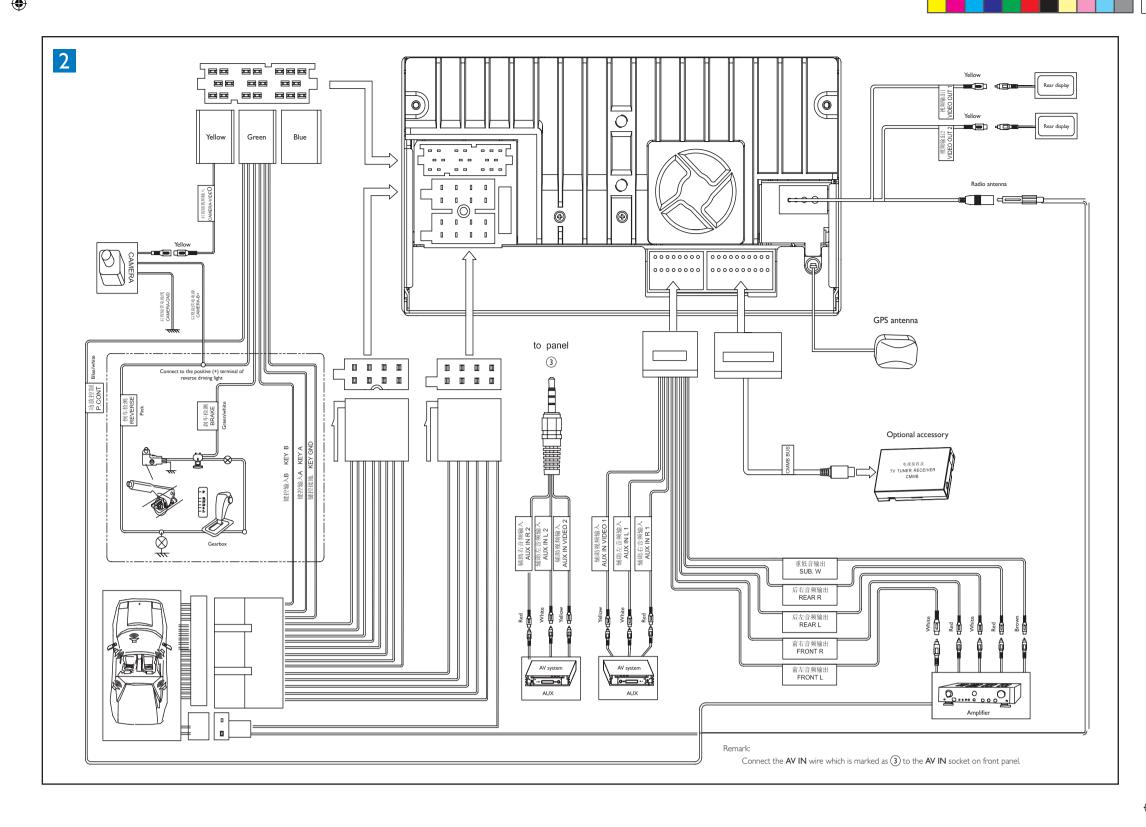

# **PHILIPS**

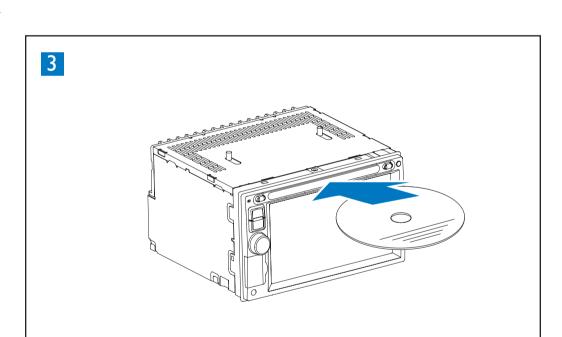

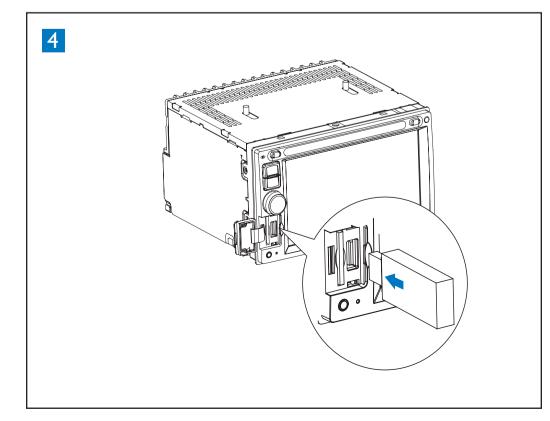

#### Install the car audio 1


- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
- 2 Take out the original car audio and keep the screws.
- 3 Mount the supplied mounting brackets onto the unit with the supplied screws. a
- 4 Connect wires 2.
- 5 Take off the two screws on the top side of the unit. 🕒
- 6 Slide the unit into the dashboard until a click sound is heard. **©**
- 7 Fix the unit onto the dashboard with screws. d
- 8 Reconnect the negative terminal of the car battery.

# Turn on

# Caution

 Risk of road accidents! Never watch video or adjust settings while you drive.

- 1 Press & to turn on the unit.
  - → The available OSD (On-Screen Display) languages are displayed.

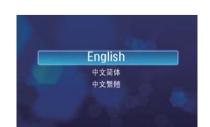

- 2 Tap a language.
  - → The OSD language is changed to the selected language immediately.

# Set date and time

- → The main menu is displayed.



- 2 Tap [Settings].
- **3** Tap **[Time]**.
- → The date/time setup menu is displayed.



# Set date

- 1 Tap [**Date**].
- 2 Tap the displayed date information.
- → A submenu is displayed.
- 3 Tap ♠ or ♥ to set year, month and day.

#### Set time mode 1 Tap [Time mode].

- 2 Tap [12H] or [24H] to select time mode.

#### Set time

- **1** Tap **[Time]**.
- 2 Tap the displayed time. → A submenu is displayed.
- 3 Tap ♠ or ♥ to set hour and minute.

#### Adjust screen

# To turn off the screen

- 1 Press **DISP** for over 2 seconds
- To adjust screen brightness
- 1 Press **DISP**.
- 2 Rotate **VOL** to adjust brightness.

### Use map

- You may need to upgrade the map (sold separately) before using it (see "Upgrade the map'' section)
- 1 Tap the upper left corner to display home
- 2 Tap [Navigation].
- few seconds.
- Refer to the map manual to operate the navigation tool.

# Listen to Radio

- 1 Tap ♠ to display home menu.
- 2 Tap [Radio].
- → Band and frequency information is displayed.



- 3 Tap on **FM** or **AM** to select band:
- 4 Briefly tap ◀ or ▶ to tune to a radio station by step.

#### Play disc 3

### You can play video, audio or images stored on the

- following discs:
- DVD video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW
- 1 Insert the disc into the disc slot with label side facing up.
- → Play starts automatically.
- → To remove the disc, press the **b**utton.

## Connect USB device 4

- 1 Open the USB door.
- 2 Insert the USB device to the USB socket.

# Note

• To remove the USB device, switch to disc, radio or other source first.

→ Play starts automatically.

 
#### Play with Bluetooth device

#### Pair the Bluetooth-enabled devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once.

- You can pair up to eight devices.
- 1 Search for Bluetooth device with the device.
- 2 Select "CID3292" in the pairing list.

- 3 Enter default password "0000".
- → if pairing succeeds. phone call record is displayed.




### Make a call

- 1 Pair the phone with the unit.
- 2 Tap ♠ to display the home menu.
- 3 Tap [Bluetooth].
  - → The Bluetooth menu is displayed.



- 4 Tap ♠ or ♥ to select the paired phone, then
- 5 Tap ♠ or ♥ to search for phone number from the following list:

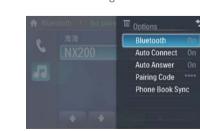

Or tap III to dial number directly, then tap

# Receive call

By default, all incoming calls are received automatically.

1 If there is incoming call, [Incoming call...] flashes on the screen. Speak into the



When conversation ends, tap • (red) to terminate the call.



© 2010 Koninklijke Philips Electronics N.V. All rights reserved. CID3292\_00\_QSG\_V2.0

CID3292\_00\_QSG\_V2.0.indd 1 6/4/2010 4:18:58 PM