HEAT CONTROLLER, INC.



Room Air Conditioner

MODELS: RAD-183A

RAD-243A



SERVICE MANUAL

CAUTION

- BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.
- ONLY FOR AUTHORIZED SERVICE PERSONNEL

TABLE OF CONTENTS

Safety Precautions	3
Dimensions	5
Symbols Used in this Manual	5
Outside Dimensions	5
Product Specifications	6
Installation	7
Select the Best Location	7
Installation Check	7
How to Secure the Drain Pipe	7
Window Requirements	8
Installation Kits Contents	8
Suggested Tool Requirements	9
Cabinet Installation	10
Operation	12
Features	12
Control Locations Function of Controls	12
Disassembly	14
Mechanical Parts	14
Air Handling Parts	15
Electrical Parts	16
Refrigerating Cycle	18
Schematic Diagram	21
Electronic Control Device	21
Wiring Diagram	22
Components Lation	23
Troubleshooting Guide	24
Piping System	24
Troubleshooting Guide	
Room Air Conditioner Voltage Limits	31

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

■ Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

AWARNING This symbol indicates the possibility of death or serious injury.

ACAUTION This symbol indicates the possibility of injury or damage to property only.

■ Meanings of symbols used in this manual are as shown below.

	Be sure not to do.
0	Be sure to follow the instruction.




■ Installation


Do not use damaged power cord plugs, or a loose socket.

• There is risk of fire or electric shock.

Always use the power plug and socket with the ground terminal.


• There is risk of electric shock.

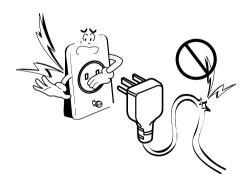

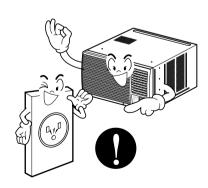


Do not modify or extend the power cord.

• There is risk or fire or electric shock.

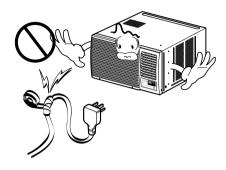


Be cautious when unpacking and installing the product.

• Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.

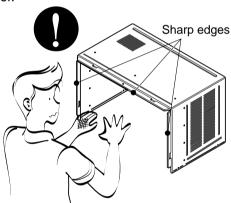


Be sure the installation area does not deteriorate with age.

• If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

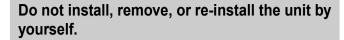

• There is risk of fire, electric shock, explosion, or injury.

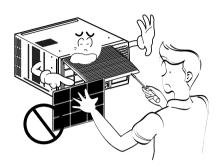

Do not store or use flammable gas or combustibles near the air conditioner.

• There is risk of fire or failure of product.



Dimensions

Symbols Used in this Manual



This symbol alerts you to the risk of electric shock.





This symbol alerts you to hazards that could cause harm to the air conditioner.

NOTICE

This symbol indicates special notes.

Outside Dimensions

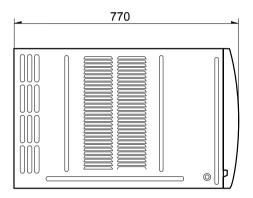

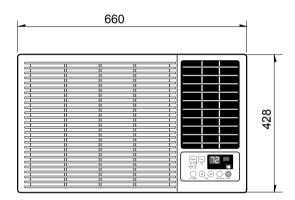

	Model	18K Btu	24K Btu
Dimension			
W	mm(inch)	660(26")	660(26")
Н	mm(inch)	428(16 ²⁷ / ₃₂ ")	428(16 ²⁷ / ₃₂ ")
D	mm(inch)	770(30 ⁵ / ₁₆ ")	770(30 ⁵ / ₁₆ ")

Product Specifications

Table -1

ITEMS		MODELS	RAD-183A	
POWER SUPPLY	POWER SUPPLY		1Ø, 208/230V, 60Hz	
COOLING CAPAC	ITY		17,500/18,000	
INPUT			1,800/1,850	
E.E.R			9.0/8.3	
REFRIGERANT (R	-22) C	HARGE(g)	720g(25.4oz)	
OPERATING	IN	DOOR(°C)	27(DB),19(WB)	
TEMPERATURE	OU ⁻	TDOOR(°C)	35(DB),24(WB)	
EVAPORATOR			2 ROW 15 STACKS	
			LOUVERED-FIN TYP	
CONDENSER			2 ROW 19 STACKS,LOUVERED-FIN TYPE L-BENDING TYPE	
FAN, INDOOR			TURBO	
FAN, OUTDOOR			PROPELLER TYPE FAN WITH SLINGER-RING	
FAN SPEEDS, FAN	N/COC	DLING	3/3	
FAN MOTOR			6 POLES	
OPERATION CON	TROL		WIRELESS REMOCN	
ROOM TEMP. COI	NTRO	L	THERMISTOR	
AIR DIRECTION C	R DIRECTION CONTROL VERTICAL LOUVER(RIGHT & LEFT)		VERTICAL LOUVER(RIGHT & LEFT)	
			HORIZONTAL LOUVER(UP & DOWN)	
CONSTRUCTION			SLIDE IN-OUT CHASSIS	
PROTECTOR	CON	MPRESSOR	INTERNAL OVERLOAD PROTECTOR	
	FA	N MOTOR	INTERNAL THERMAL PROTECTOR	
POWER CORD	POWER CORD 3 WIRE WITH GROUNDING		3 WIRE WITH GROUNDING	
			CORD-CONNECTED TYPE(ATTATCHMENT PLUG:OPTION)	
DRAIN SYSTEM	DRAIN SYSTEM		DRAIN PIPE OR SPLASHED BY FAN SLINGER	
NET WEIGHT		(lbs/kg)	137/62	
OUTSIDE DIMENS	SION	(inch)	26 x 16 27/32 x 30 5/16	
(W x H x D) (mm)		(mm)	660 x 428 x770	

Product Specifications

Table -1

MODELS		MODELS	RAD-243A		
POWER SUPPLY	POWER SUPPLY		1Ø, 208/230V, 60Hz		
COOLING CAPAC	ITY		23,500/23,000		
INPUT			2,760/1,850		
E.E.R			8.5/8.5		
REFRIGERANT (R	(-22) C	HARGE(g)	830g(29.3oz)		
OPERATING	IN	DOOR(°C)	27(DB),19(WB)		
TEMPERATURE	OU ⁻	TDOOR(°C)	35(DB),24(WB)		
EVAPORATOR			3 ROW 15 STACKS		
			LOUVERED-FIN TYP		
CONDENSER			2 ROW 19 STACKS,LOUVERED-FIN TYPE		
			L-BENDING TYPE		
FAN, INDOOR			TURBO		
FAN, OUTDOOR			PROPELLER TYPE FAN WITH SLINGER-RING		
FAN SPEEDS, FAN	V/COC	DLING	3/3		
FAN MOTOR			6 POLES		
OPERATION CON	TROL		WIRELESS REMOCN		
ROOM TEMP. COI	NTRO	L	THERMISTOR		
AIR DIRECTION C	AIR DIRECTION CONTROL VERTICAL LOUVER(RIGHT & LEFT)		VERTICAL LOUVER(RIGHT & LEFT)		
			HORIZONTAL LOUVER(UP & DOWN)		
CONSTRUCTION			SLIDE IN-OUT CHASSIS		
PROTECTOR	CON	MPRESSOR	INTERNAL OVERLOAD PROTECTOR		
	FA	N MOTOR	INTERNAL THERMAL PROTECTOR		
POWER CORD	,		3 WIRE WITH GROUNDING		
			CORD-CONNECTED TYPE(ATTATCHMENT PLUG:OPTION)		
DRAIN SYSTEM	STEM DRAIN PIPE OR SPLASHED BY FAN SLINGER		RAIN SYSTEM		DRAIN PIPE OR SPLASHED BY FAN SLINGER
NET WEIGHT		(lbs/kg)	146/66		
OUTSIDE DIMENS	SION	(inch)	26 x 16 27/32 x 30 5/16		
(W x H x D) (mm)		(mm)	660 x 428 x770		

Installation

Select the Best Location

- 1.To prevent vibration and noise, make sure the unit is installed securely and firmly.
- 2.Install the unit where the sunlight does not shine directly on the unit.
- 3. The outside of the cabinet must extend outward for at least 30cm and there should be no obstacles, such as a fence or wall, within 50cm from the back of the cabinet because it will prevent heat radiation of the condenser. Restriction of outside air will greatly reduce the cooling efficiency of the air conditioner.



CAUTION: All side louvers of the cabinet must remain exposed to the outside of the structure.

- 4.Install the unit a little slanted so the back is slightly lower than the front (about 10~15mm). This will help force condensed water to the outside.
- 5.Install the unit from the bottom about 75~150cm above the floor level.

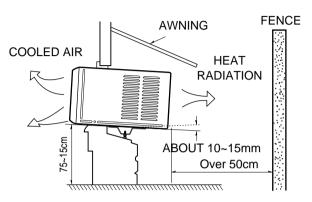


Figure 1

Installation Check


The setting conditions must be checked prior to initial starting.

The following items are especially important checking points when the installation is finished.

- 1. Grounding wire (Green or Green and Yellow) is provided in the power cord. The green wire must be grounded.
- 2. Connect to a single-outlet 15A circuit. (or 20A circuit for Electric Heater Model)
- 3. To avoid vibration or noise, make sure the air conditioner is installed securely.
- 4 Avoid placing furniture or draperies in front of the air inlet and outlet.


How to Secure the Drain Pipe

In humid weather, excess water may cause the BASE PAN to overflow. To drain the water, remove the DRAIN CAP and secure the DRAIN PIPE to the rear hole of the BASE PAN. Press the drain pipe into the hole by pushing down and away from the fins to avoid injury.

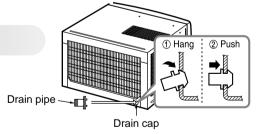

Optional


- 1. Install the drain pan over the corner of the cabinet where you removed the plug with 4 (or 2) screws.
- 2. Connect the drain hose to the outlet located at the bottom of the drain pan. You can purchase the drain hose or tubing locally to satisfy your particular needs. (Drain hose is not supplied).
- 3. Select the most appropriate connection from among the following figures (by considering the hole of the unit) to fit drain pan to your own unit.

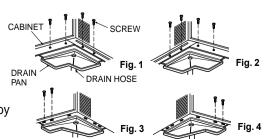


Window Requirements

NOTICE All supporting parts should be secured to firm wood, masonry, or metal.

- 1. This unit is designed for installation in standard double hung windows with actual opening widths from 26" to 41".
 - The top and bottom window sashes must open sufficiently to allow a clear vertical opening of 18" from the bottom of the upper sash to the window stool.
- 2. The stool offset (height between the stool and sill) must be less than 1 1/4".

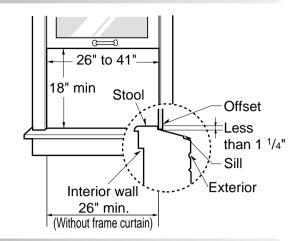


Installation Kits Contents

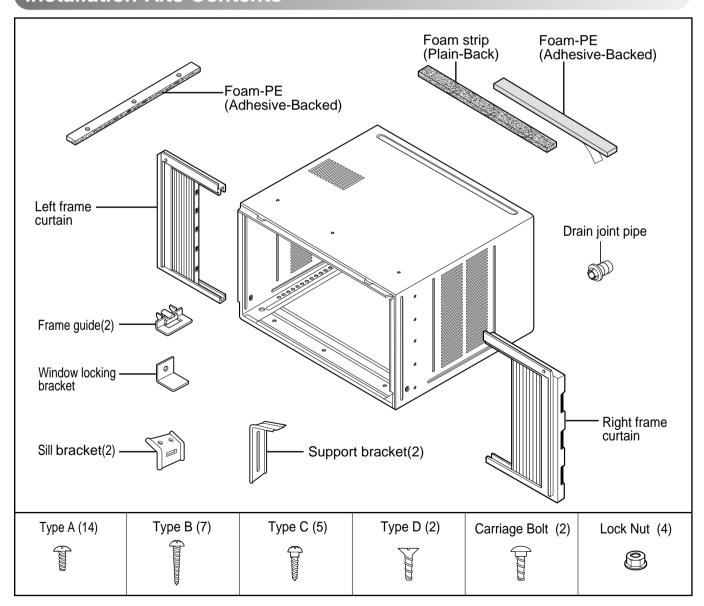


Suggested Tool Requirements

PREPARATION OF CHASSIS


1. Remove the screws which fasten the cabinet at both sides and at the back.

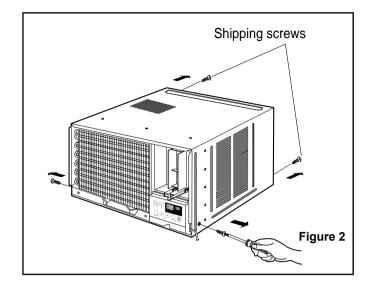


- 2. Slide the unit out from the cabinet by gripping the base pan handle and pulling forward while bracing the cabinet.
- 3. Cut the window sash seal to the proper length. Peel off the backing and attach the Foam-PE to the underside of the window sash.

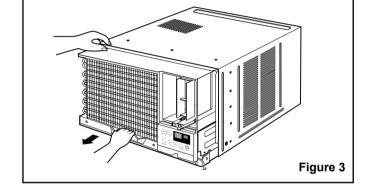


- 4. Remove the backing from Foam-PE with 3 holes and attach it to the bottom of the Top retainer bar.
- 5. Attach the Top retainer bar on the top of the cabinet with 3 screws (Type A).

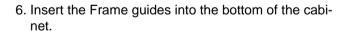

- 7. Insert the Frame Curtain into the Top retainer bar and Frame guides.
- 8. Fasten the curtains to the unit with 10 screws (Type A) at both sides.

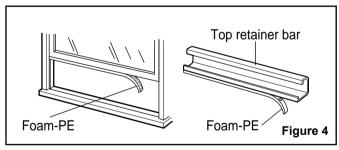

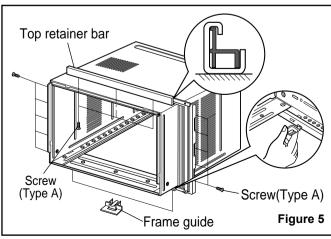

Cabinet Installation

1. Open the window. Mark a line on the center of the window stool between the side window stop moldings.

Loosely attach the sill bracket to the support bracket using the carriage bolt and the lock nut.

2. Attach the sill bracket to the window sill using the screws (Type B).

Carefully place the cabinet on the window stool and align the center mark on the bottom front with the center line marked window stool.

3. Using the M-screw and the lock nut, attach the support bracket to the cabinet track hole. Use the first track hole after the sill bracket on the outer edge of the window sill. Tighten the carriage bolt and the lock nut. Be sure the cabinet slants outward.





CAUTION: Do not drill a hole in the bottom pan. The unit is designed to operate with approximately 1/2" of water in bottom pan.


4. Pull the bottom window sash down behind the Top retainer bar until they meet.


NOTICE


- 1. Do not pull the window sash down so tightly that the movement of Frame curtain is restricted. Attach the cabinet to the window stool by driving the screws (Type B) through the cabinet into window stool.
- 2. The cabinet should be installed with a very slight tilt downward toward the outside.

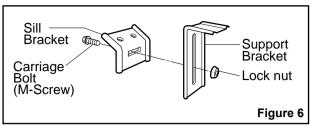

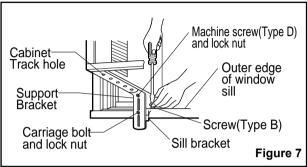

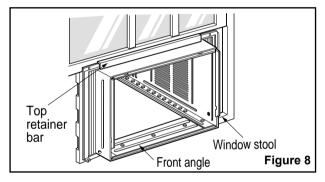

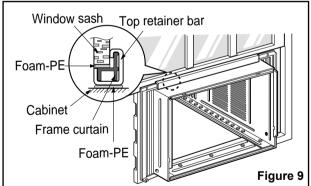


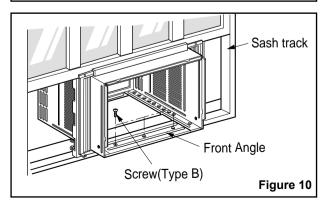


- 5. Pull each Frame curtain fully to each window sash track, and pull the bottom window sash down behind the Top retainer bar until it meets.
- 6. Attach each Frame curtain the window sash by using screws (Type C.) (See Fig. 11)
- 7. Slide the unit into the cabinet. (See Fig. 12)





CAUTION: For security purpose, reinstall screws(Type A) at cabinet's sides.

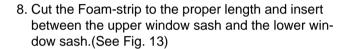


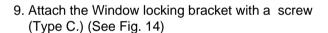



- 10. Attach the front grille to the cabinet by inserting the tabs on the grille into the tabs on the front of the cabinet. Push the grille in until it snaps into place.(See Fig.15)
- 11. Lift the inlet grille and secure it with a screw (Type A) through the front grille. (See Fig. 15)
- 12. Window installation of room air conditioner is now completed. See ELECTRICAL DATA for attaching power cord to electrical outlet.

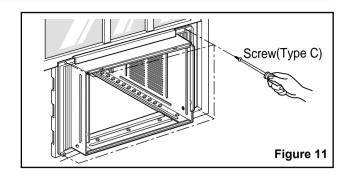


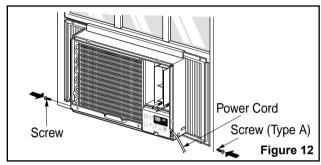

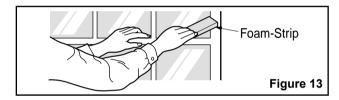

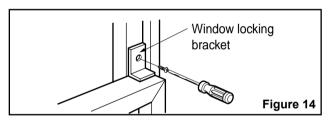

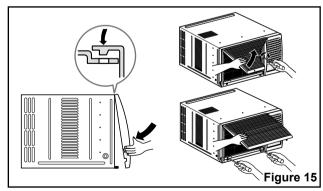

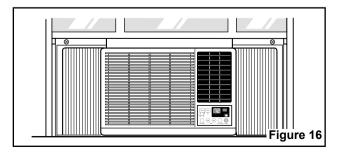

Operation

Features

- Designed for COOLING ONLY.
- · Powerful and whispering cooling.
- Slide-in and slide-out chassis for the simple installation and service.
- Side air-intake, side cooled-air discharge.
- Built-in adjustable THERMOSTAT
- Washable one-touch filter
- Compact size
- Reliable and efficient rotary compressor

Control Locations Function of Controls

1. Cooling Only Model

VENTILATION

The ventilation lever must be in the CLOSE position in order to maintain the best cooling conditions. When a fresh air is necessary in the room, set the ventilation lever OPEN position.

The damper is opened and room air is exhausted.

NOTICE Before using the ventilation feature, make the lever, as shown. First, pull down part (A) to horizontal line with part (B).

THERMOSTAT

Thermostat will automatically control the temperature of the room. Select a higher number for a cooler temperature in the room. The temperature is selected by positioning the knob to the desired position.

The **5** or **6** position is a normal setting for average conditions.

OPERATION

OFF : Turns the air conditioner off.

MED FAN : Permits the medium fan speed operation

without cooling.

LOW FAN : Permits the low fan speed operation

without cooling.

HIGH COOL: Permits cooling with the high fan speed

operation.

MED COOL: Permits cooling with the medium fan

speed operation.

LOW COOL: Permits cooling with the low fan speed


operation.


AUTO SWING

ON : Air swing is operated while OPERATION knob is

set to the COOL position.

OFF: Stops the operation of air swing.

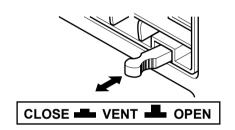


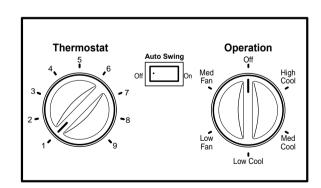

2. Cooling Only Model with Remote Control and Touch Type


DISPLAY

RAD-183A, RAD-243A

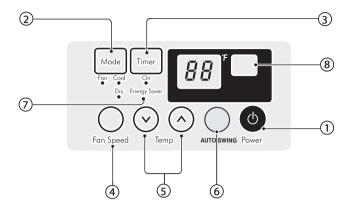

REMOTE CONTROL

RAD-183A RAD-243A

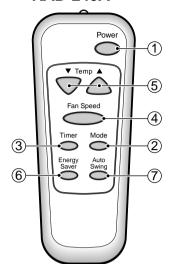



PRECAUTION: The Remote Control unit will not

function properly if bright light strikes the sensor window of the air conditioner or if there are obstacles between the Remote Control unit and the air conditioner.

/ POWER BUTTON

Operation starts, when this button is pressed and stops when you press the button again.

2 OPERATION MODE SELECTION BUTTON

Select Cooling, or Fan or Dehumid mode with button. (Dehumid mode is not to all models.)

3 ON/OFF TIMER BUTTON

Set the time of starting and stopping operation. The timer is set by 1 hour.

FAN SPEED SELECTOR

Select the fan speed in three steps.

- High [F3] → Low[F1] → Med[F2] → High[F3]....

5 ROOM TEMPERATURE SETTING BUTTON

Control the room temperature within a range of 60°F to 86°F by 1°F.

6 ENERGY SAVER(Available In some models)

The fan stops when the compressor stops cooling.

Approximately every 3 minutes the fan will turn on and check the room air to determine if cooling is needed.

7 AUTO SWING BUTTON

Control the horizontal air direction by air swing system.

AUTO RESTART

In case the power comes on again after a power failure, the unit runs as previous setting operation.

Disassembly

— Before the following disassembly, **CONTROL BOX** set to OFF and disconnect the power cord.

Mechanical Parts

1. Front Grille

- 1. Open the Inlet grille upward.
- 2. Remove the screw that fastens the front grille.
- 3. Pull the front grille from the right side.
- 4. Remove the front grille.
- 5. Re-install the component by referring to the removal procedure, above. (See Figure 17)


NOTICE Mark " \triangle "of inlet grille means opening direction.



- 1. After disassembling the FRONT GRILLE, remove the 2 screws that fasten the cabinet at both sides.
- 2. Remove the 2 screws that fasten the cabinet at back.
- 3. Pull the base pan forward. (See Figure 18)
- 4. Remove the cabinet.
- 5. Re-install the component by referring to the removal procedure, above.

3. Control Box

- 1. Remove the front grille. (Refer to section 17)
- 2. Remove the cabinet. (Refer to section 18)
- 3. Remove the 2 screws that fasten the control box cover.
- 4. Remove two housings that connect compressor wire and motor wire in the control box.
- 5. Discharge the capacitor by placing a 20,000 ohm resistor across the capacitor terminals.
- 6. Remove the 2 screws that fasten the control box.
- 7. Pull the control box forward completely.
- 8. Re-install the components by referring to the removal procedure, above. (See Figure 19) (Refer to the circuit diagram found on page 23 in this manual and on the control box.)

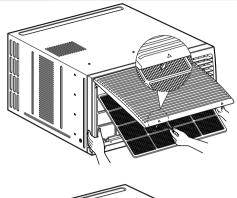

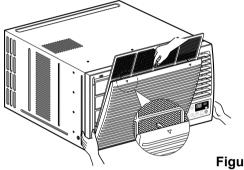


Figure 17


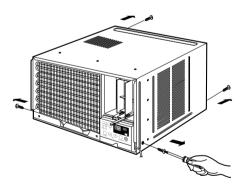


Figure 18

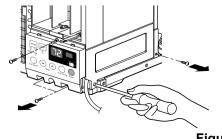

Air Handling Parts

4. Cover (at the top)

- 1. Remove the front grille. (Refer to section 17)
- 2. Remove the cabinet. (Refer to section 18)
- 3. Remove 11 screws which fasten the brace and covers.
- 4. Remove the covers and the brace. (See Fig. 20)
- 5. Re-install the components by referring to the removal procedure, above.

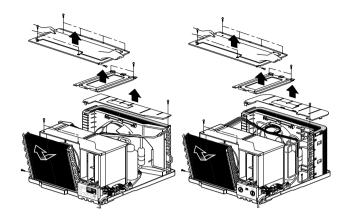


Figure 20

5. Blower

- 1. Remove the cover. (Refer to section 20)
- 2. Remove the 3 screws which fasten the evaporator at the left side and the top side.
- 3. Move the evaporator sideward carefully.
- 4. Remove the orifice from the air guide carefully.
- 5. Remove the clamp which secures the blower with plier. (See Fig. 21)
- 6. Remove the blower with plier or your hand without touching blades. (See Fig. 22)
- 7. Re-install the components by referring to the removal procedure, above.

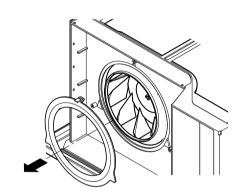


Figure 21

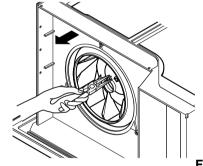


Figure 22

6. Fan

- 1. Remove the cabinet. (Refer to section 18)
- 2. Remove the brace and shroud cover. (Refer to section 20)
- 3. Remove the 5 screws which fasten the condenser.
- 4. Move the condenser sideways carefully.
- 5. Remove the clamp which secures the fan.
- 6. Remove the fan. (See Figure 23)
- 7. Re-install the components by referring to the removal procedure, above.

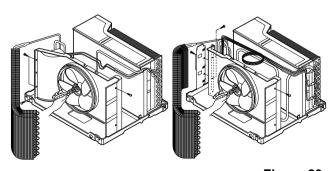


Figure 23

6. Shroud

- 1. Remove the fan. (Refer to section 21)
- 2. Remove the screw that fastens the shroud.
- 3. Remove the shroud. (See Figure 24)
- 4. Re-install the component by referring to the removal procedure, above.


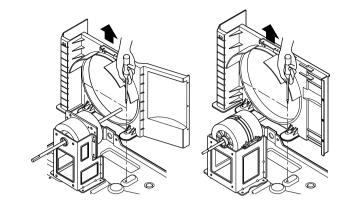


Figure 24

Electrical Parts

7. Motor

- 1. Remove the cabinet. (Refer to section 18)
- 2. Remove the cover control and disconnect a wire housing in control box. (Refer to section 19)
- 3. Remove the blower. (Refer to section 21)
- 4. Remove the fan. (Refer to section 22)
- 5. Remove the 4 screws which fasten the motor. (See Figure. 25)
- 6. Remove the motor.
- 7. Re-install the components by referring to the removal procedure, above.

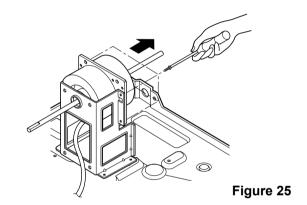

8. Compressor

- 1. Remove the cabinet. (Refer to section 18)
- Discharge the refrigerant system using Freon[™] Recovery System.
 - If there is no valve to attach the recovery system, install one (such as a WATCO A-1) before venting the Freon™. Leave the valve in place after servicing the system.
- 3. Disconnect the 3 leads from the compressor.
- 4. After purging the unit completely, unbrace the suction and discharge tubes at the compressor connections.
- 5. Remove the 3 nuts and the 3 washers which fasten the compressor.
- 6. Remove the compressor. (See Figure 26)
- 7. Re-instill the components by referring to the removal procedure, above.

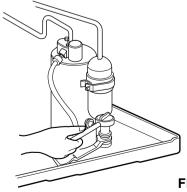


Figure 26

9. Capacitor

- 1. Remove the control box. (Refer to section 19)
- 2. Remove the knobs and the screw that fasten control panel from control box.
- 3. Remove the screw that located in the front.
- 4. Open the bottom side of control box.
- 5. Remove the screw and the clamp that fastens the capacitor.
- 6. Disconnect all the leads of capacitor terminals.
- 7. Re-install the components by referring to the removal procedure, above. (See Figure 27)

10. Power Cord


- 1. Remove the control box. (Refer to section 19)
- 2. Open the control box. (Refer to section 25)
- 3. Disconnect the grounding screw from the control box.
- 4. Disconnect the 2 receptacles.
- 5. Remove a screw which fastens the clip cord. (See Figure 28)
- 6. Remove the power cord.
- 7. Re-install the component by referring to the above removal procedure, above. (Use only one ground-marked hole (4) for ground connection.)
- 8. If the supply cord of this appliance is damaged, it must be replaced by the special cord. (The special cord means the cord that has the same specification marked on the supply cord attached at the unit.)

11. Thermistor

- 1. Remove the control box. (Refer to section 19)
- 2. Unfold the control box. (Refer to section 25)
- 3. Disconnect the themistor terminals from main P.W.B Assembly.
- 4. Remove the thermistor.
- 6. Re-install the components by refereing to the above removal procedure above. (See Figure 29)

12. Synchronous Motor

- 1. Remove the control box. (Refer to section 19)
- 2. Unfold the control box. (Refer to section 25)
- 3. Remove the crankshaft.
- 4. Disconnect all the leads of the synchronous motor.
- 5. Remove the 2 screws which fasten the synchronous motor. (See Figure. 30)
- 6. Re-install the components by referring to the above removal procedure above.

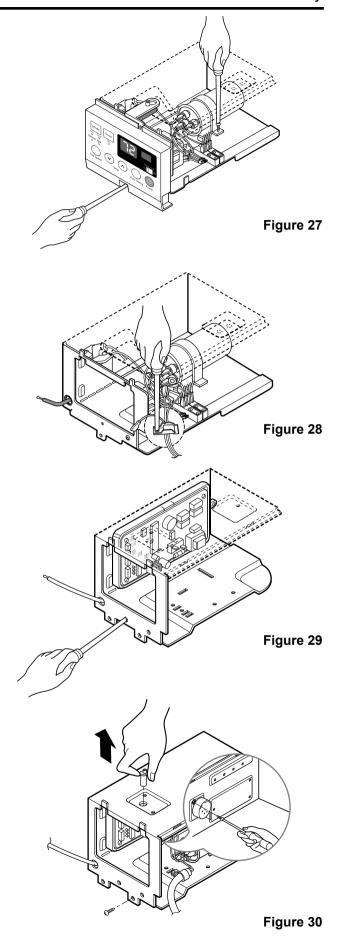


Refrigerating Cycle

CAUTION: Discharge the refrigerant system using a Freon™ Recovery System. If there is no valve to attach the recovery system, install one (such as a WATCO A-1) before venting the Freon™. Leave the valve in place after servicing the system.

13. Condenser

- 1. Remove the cabinet. (Refer to section 18)
- 2. Remove the 4 screws that fasten the brace.(Refer to section 20)
- 3. Remove the 5 screws that fasten the condenser and shroud.
- After discharging the refrigerant completely, unbraze the interconnecting tube at the condenser connections.
- 5. Remove the condenser.
- 6. Re-install the component by referring to notes. (See Figure 31)

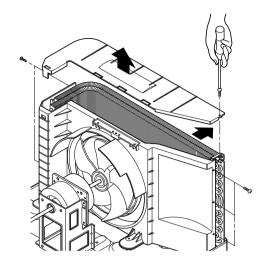

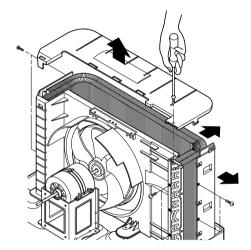



Figure 31

14. Evaporator

- 1. Remove the cabinet. (Refer to section 18)
- 2. Remove the 2 screws that fasten the evaporator.
- 3. Move the evaporator sideways carefully. (Refer to section 20)
- After discharging the refrigerant completely, unbraze the interconnecting tube at the evaporator connections.
- 5. Remove the evaporator.
- 6. Re-install the component by referring to notes. (See Figure 32)

15. Capillary Tube

- 1. Remove the cabinet. (Refer to section 18)
- 2. After discharging the refrigerant completely, unbraze the interconnecting tube at the capillary tube.(See caution above)
- 3. Remove the capillary tube.
- 4. Re-install the component by referring to notes.

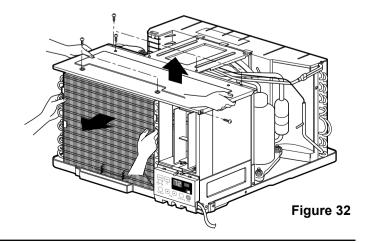

NOTICE


- Replacement of the refrigeration cycle.
- 1. When replacing the refrigeration cycle, be sure to Discharge the refrigerant system using a Freon™ recovery System.
 - If there is no valve to attach the recovery system, install one (such as a WATCO A-1) before venting the Freon™. Leave the valve in place after servicing the system.
- 2. After discharging the unit completely, remove the desired component, and unbraze the pinch-off tubes.
- 3. Braze service valves into the pinch-off tube ports, leaving the valves open.
- 4. Braze the pinch-off tubes with Service valves.
- 5. Evacuate as follows.
 - 1) Connect the vacuum pump, as illustrated figure 33A.
- 2) Start the vacuum pump, slowly open manifold valves A and B with two full turns counterclockwise and leave the valves open.
 - The vacuum pump is now pulling through valves A and B up to valve C by means of the manifold and entire system.

CAUTION: If high vacuum equipment is used, just crack valves A and B for a few minutes, then open slowly with the two full turns counterclockwise. This will keep oil from foaming and being drawn into the vacuum pump.

- 3) Operate the vacuum pump vaccum for 20 to 30 minutes, until 600 microns of vaccum is obtained. Close valves A and B, and observe vacuum gauge for a few minutes. A rise in pressure would indicate a possible leak or moisture remaining in the system. With valves A and B closed, stop the vacuum pump.
- 4) Remove the hose from the vacuum pump and place it on the charging cylinder. See figure 33B. Open valve C.
 - Discharge the line at the manifold connection.
- 5) The system is now ready for final charging.


- 6. Recharge as follows:
- 1) Refrigeration cycle systems are charged from the High-side. If the total charge cannot be put in the High-side, the balance will be put in the suction line through the access valve which you installed as the system was opened.
- 2) Connect the charging cylinder as shown in figure With valve C open, discharge the hose at the mani
 - fold connection.
- 3) Open valve A and allow the proper charge to enter the system. Valve B is still closed.
- 4) If more charge is required, the high-side will not take it. Close valve A.
- 5) With the unit running, open valve B and add the balance of the charge.
 - a. Do not add the liquid refrigerant to the Low-
 - b. Watch the Low-side gauge; allow pressure to rise to 30 lbs (0.2Mp).
 - c. Turn off valve B and allow pressure to drop.
 - d. Repeat steps b. and c. until the balance of the charge is in the system.
- 6) When satisfied the unit is operating correctly, use the pinch-off tool with the unit still running and clamp on to the pinch-off tube. Using a tube cutter, cut the pinch-off tube about 2 inches from the pinch-off tool. Use sil-fos brazing rod and braze pinch-off tube closed. Turn off the unit, allow it to set for a while, and then test the leakage of the pinch-off connection.

Equipment needed: Vacuum pump, Charging cylinder, Manifold gauge, Brazing equipment. Pin-off tool capable of making a leak-proof seal, Leak detector, Tubing cutter, Hand Tools to remove components, Service valve.

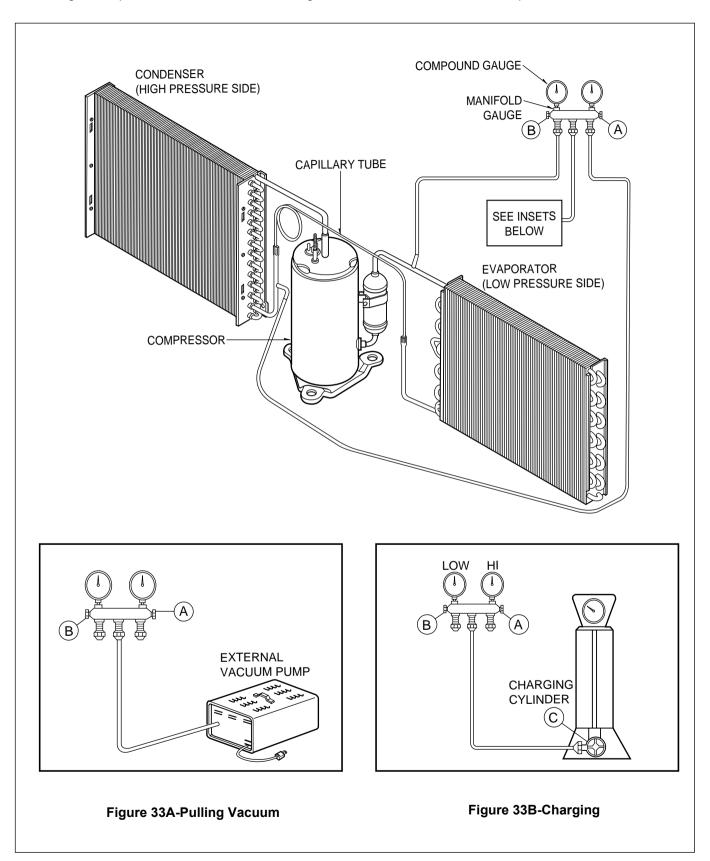


Schematic Diagram

Electronic Control Device

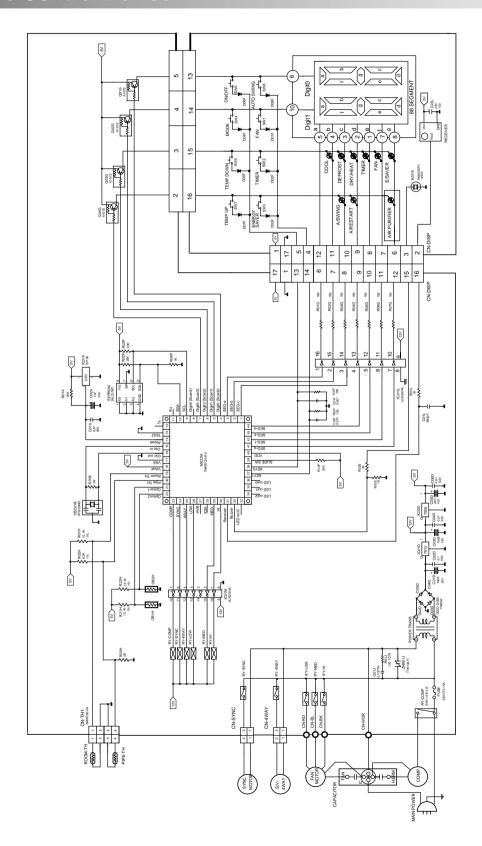


Wiring Diagram

• MODEL: RAD-183A and RAD-243A

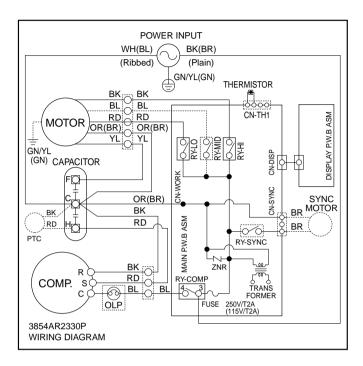


Components Location

Main P.W.B Assembly

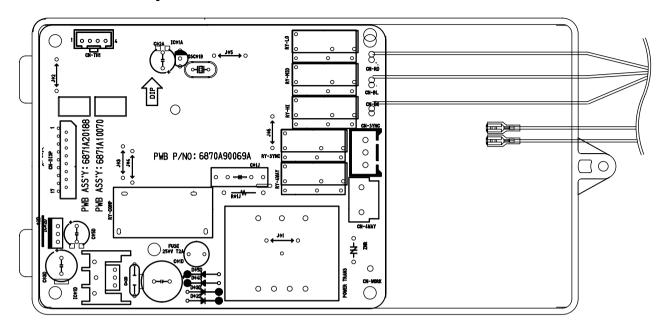

Display P.W.B Assembly

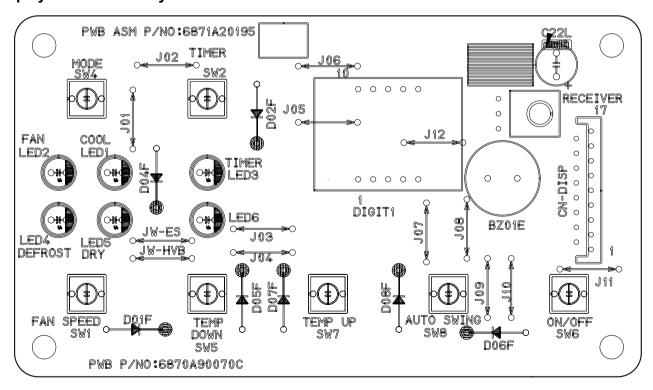

Troubleshooting Guide

Piping System


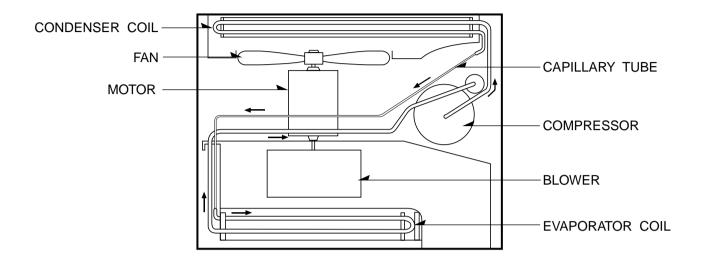


Figure 34 is a brief description of the important components and their function in what is called the refrigeration system. This will help you to understand the refrigeration cycle and the flow of the refrigerant in the cooling cycle.

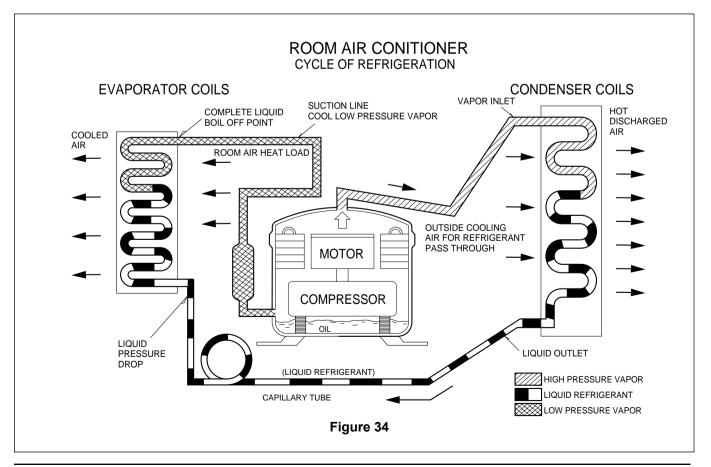



Troubleshooting Guide

In general, possible trouble is classified in two kinds.

The one is called Starting Failure which is caused from an electrical defect, and the other is ineffective Air Conditioning caused by a defect in the refrigeration circuit and improper application.


Unit runs but poor cooling.

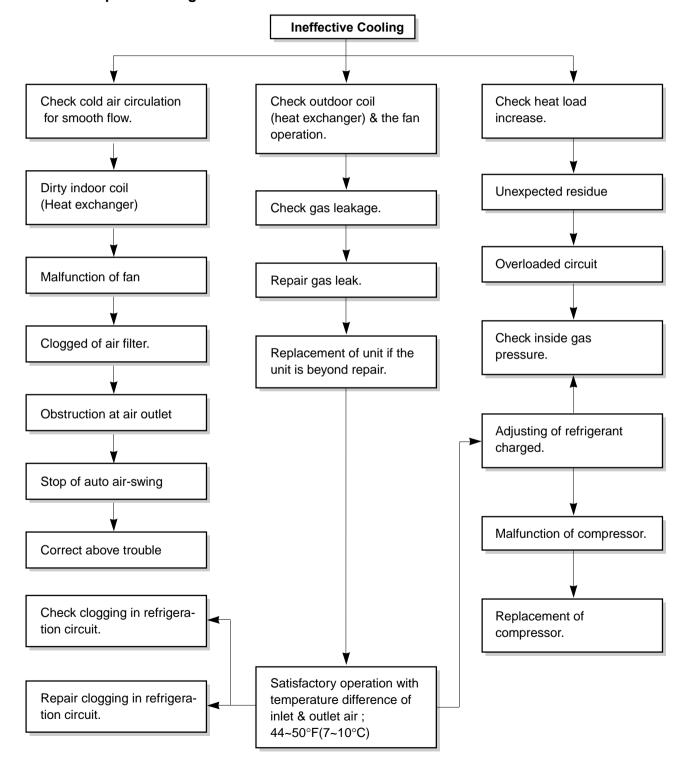

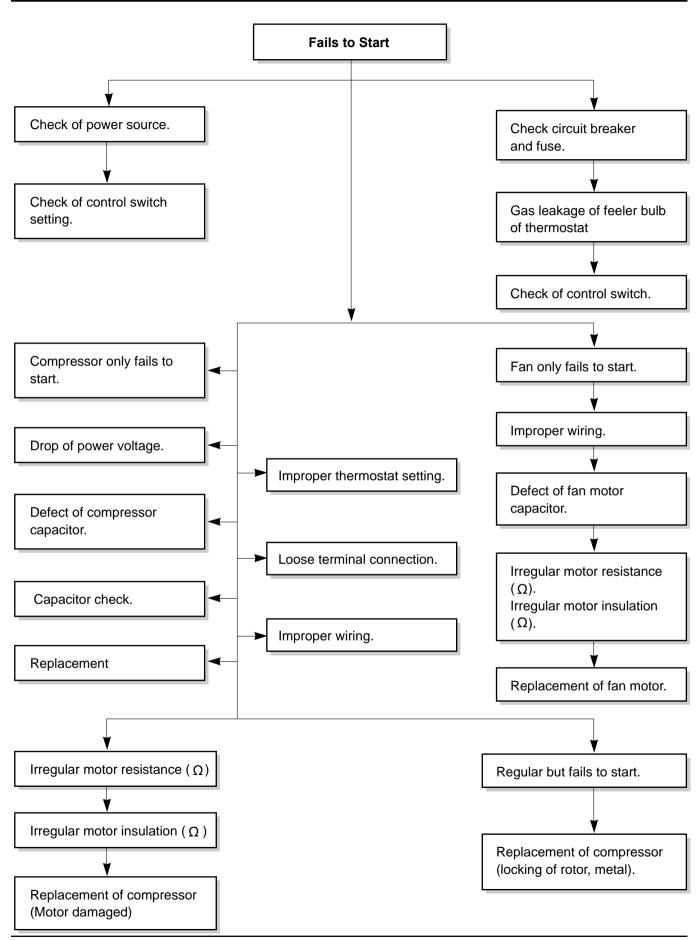


Electrical Parts Troubleshooting Guide

Possible Trouble 1 The unit does not operate.

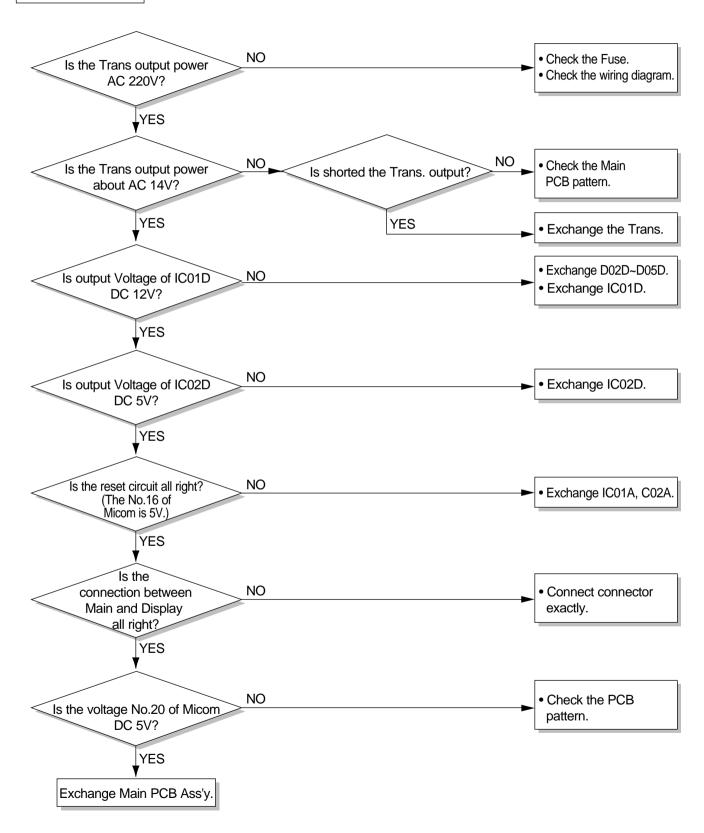


Possible Trouble 2 The compressor does not operate.

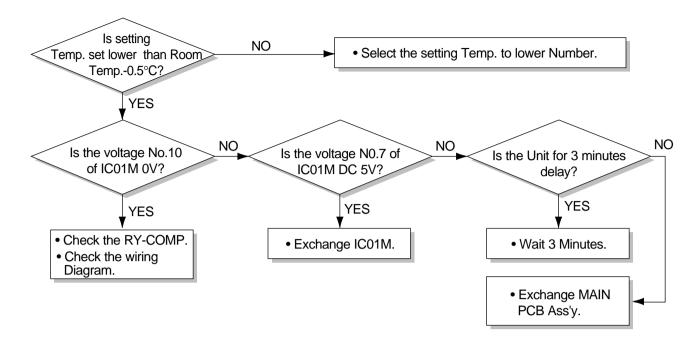


Possible Trouble 3 The compressor always operate.




Possible Trouble 4 FAN does not operate.

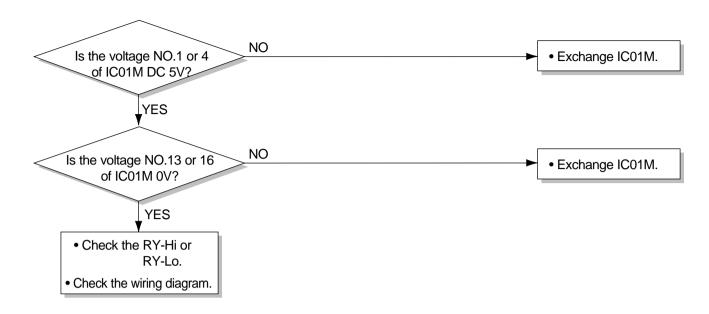


Possible Trouble 5 Auto Swing does not operate.

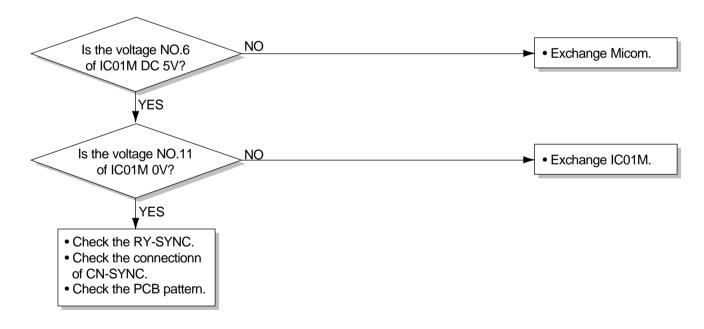

Possible Trouble 6 Remote controller does not operate.

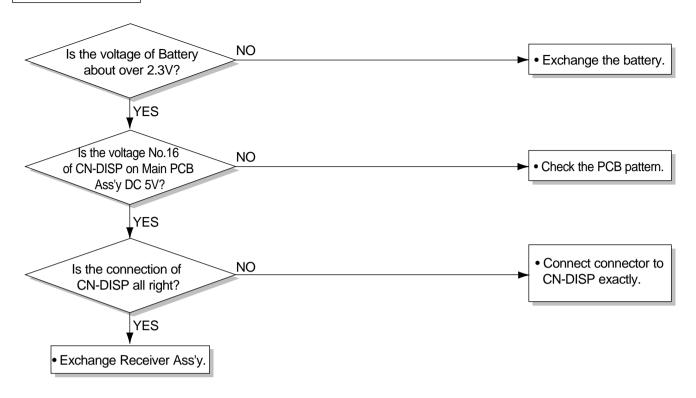

Possible Trouble 7 It displays abnormally on display PCB Ass'y.

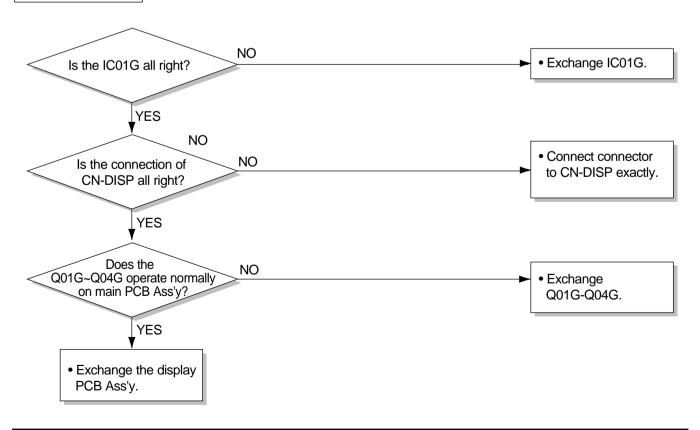

Room Air Conditioner Voltage Limits

NAME PLATE RATING	MINIMUM	MAXIMUM
208~230±10%	187V	253V
115±10%	104V	126V


COMPLAINT	CAUSE	REMEDY	
Fan motor will not run.	No power	Check voltage at outlet. Correct if necessary.	
	Power supply cord	Check voltage to rotary switch. If none, check power supply cord. Replace cord if circuit is open.	
	Rotary switch	Check switch continuity. Refer to wiring diagram for terminal identification. Replace switch if defective.	
	Wire disconnected or con- nection loose	Connect wire. Refer to wiring diagram for terminal identification. Repair or replace loose terminal.	
	Capacitor (Discharge capacitor before testing.)	Test capacitor. Replace if not within ±10% of manufacturer's rating. Replace if shorted, open, or damaged.	
	Will not rotate	Fan blade hitting shroud or blower wheel hitting scroll. Realign assembly.	
		Units using slinger ring for condenser fan must have ¹ / ₄ to ⁵ / ₁₆ inch clearance to the base. If it hits the base, shim up the bottom of the fan motor with mounting screw(s).	
		Check fan motor bearings; if motor shaft will not rotate, replace the motor.	
Fan motor runs	Revolves on overload.	Check voltage. If not within limits, call an electrician.	
intermittently		Test capacitor. Check bearings. Does the fan blade rotate freely? If not, replace fan motor.	
		Pay attention to any change from high speed to low speed. If the speed does not change, replace the motor.	
Fan motor noise.	Fan	If cracked, out of balance, or partially missing, replace it.	
	Turbo	If cracked, out of balance, or partially missing, replace it.	
	Loose clamper	Tighten it.	
	Worn bearings	If knocking sounds continue when running or loose, replace the motor. If the motor hums or noise appears to be internal while running, replace motor.	
Compressor will not run, but fan motor runs.	Voltage	Check voltage. If not within limits, call an electrician.	
	Wiring	Check the wire connections, if loose, repair or replace the terminal. If wires are off, refer to wiring diagram for identification, and replace. Check wire locations. If not per wiring diagram, correct.	
	Rotary	Check for continuity, refer to the wiring diagram for terminal identification. Replace the switch if circuit is open.	

COMPLAINT	CAUSE	REMEDY
Compressor will not run, but fan motor runs.	Thermostat	Check the position of knob If not at the coldest setting, advance the knob to this setting and restart unit. Check continuity of the thermostat. Replace thermostat if circuit is open.
	Thermistor	Check the TEMP control. If not at the lowest number, set TEMP control to this setting and restart the unit. Check the continuity of the thermistor. Replace the thermistor if the circuit is open.
	Capacitor (Discharge capacitor before servicing.)	Check the capacitor. Replace if not within ±10% of manufacturers rating. Replace if shorted, open, or damaged.
	Compressor	Check the compressor for open circuit or ground. If open or grounded, replace the compressor.
	Overload	Check the compressor overload, if externally mounted. Replace if open. (If the compressor temperature is high, remove the overload, cool it, and retest.)
Compressor cycles on overload.	Voltage	Check the voltage. If not within limits, call an electrician.
	Overload	Check overload, if externally mounted. Replace if open. (If the compressor temperature is high, remove the overload, cool, and retest.)
Compressor cycles on overload.	Fan motor	If not running, determine the cause. Replace if required.
	Condenser air flow restriction	Remove the cabinet. inspect the interior surface of the condenser; if restricted, clean carefully with a vacuum cleaner (do not damage fins) or brush. Clean the interior base before reassembling.
	Condenser fins (damaged)	If condenser fins are closed over a large area on the coil surface, head pressures will increase, causing the compressor to overload. Straighten the fins or replace the coil.
Compressor cycles on	Capacitor	Test capacitor.
overload.	Wiring	Check the terminals. If loose, repair or replace.
	Refrigerating system	Check the system for a restriction.
Insufficient cooling or heat-	Air filter	If restricted, clean of replace.
ing	Exhaust damper door	Close if open.
	Unit undersized	Determine if the unit is properly sized for the area to be cooled.
Excessive noise	Turbo or fan	Check the set screw or clamp. If loose or missing, correct. If the turbo or fan is hitting air guide, rearrange the air handling parts.
	Copper tubing	Remove the cabinet carefully and rearrange tubing not to contact cabinet, compressor, shroud, and barrier.

COMPLAINT	CAUSE	REMEDY
Compressor cycles	Capacitor	Test capacitor.
on overload.	Wiring	Check the terminals. If loose, repair or replace.
	Refrigerating system	Check the system for a restriction.
Insufficient cooling or heat-	Air filter	If restricted, clean of replace.
ing	Exhaust damper door	Close if open.
_	Unit undersized	Determine if the unit is properly sized for the area to
		be cooled.
Excessive noise.	Turbo or fan	Check the set screw or clamp. If loose or missing,
		correct. If the blower or fan is hitting air guide,
		rearrange the air handling parts.
	Copper tubing	Remove the cabinet and carefully rearrange tubing
		not to contact cabinet, compressor, shroud, and bar-
		rier.
Auto air-swing fails.	Rotary switch.	Set the knob to HIGH COOL or LOW COOL while
		rocker switch is ON.
	Wiring	Check terminals. If loose, repair or replace.
	Synchronous motor.	Check the synchronous motor for open circuit.

Exploded View

Cooling Model

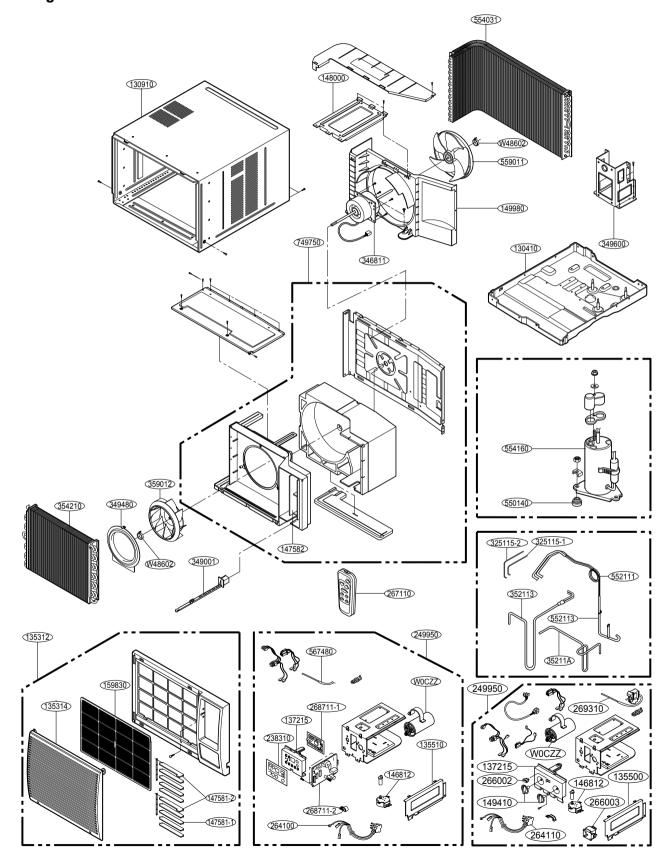

	ı	Replacement Parts List	
RΔD-183Δ			
LocNo	P/NO	DESCRIPTION	REMARK
130410	3041A30001H	BASEASSEMBLY,SINGLE	R
130910	3091AR6056P	CABINETASSY,SINGLE	R
135312	AEB30969401	Grille,ASSY,Front(SINGLE)	R
135314	3530AR1604A	Grille,ASSY,INLET	R
135510	3551A30001A	COVER,CONTROL(INDOOR)	R
146812	2H01102J	MotorAssembly,SYNC	R
147581-1	4758AR7264A	LOUVER,HORIZONTAL	R
147581-2	4758AR7278A	LOUVER,HORIZONTAL	R
147582	4758AR6157A	LOUVER, VERTICAL	R
148000	4800AR7271A	BRACE	R
149980	4998AR1597B	SHROUD	R
159830	5231AR6159A	FILTERASSY,A/C	R
137215	3720AR6163A	PANEL,CONTROL	R
238310	3831A20032L	ESCUTCHEON	R
249950	4995A20613Y	CONTROLBOXASSEMBLY,SINGLE	R
567480	6323A20003S	Thermistor ASSEMBLY	R
264100	6411A20056P	POWER CORD ASSEMBLY	R
267110	6711A20035A	REMOTECONTROLLER	R
268711-1	6871A20611A	PWB(PCB) ASSEMBLY,DISPLAY	R
268711-2	6871A10193N	PWB(PCB) ASSEMBLY,MAIN	R
346811	4681A20081T	MOTOR ASSEMBLY, SINGLE	R
349001	4900AR7265A	DAMPER, VENTILAYION	R
349480	4948A20016A	ORIFICE	R
349600	4960AR1596A	MOUNT,MOTOR	R
552113	5211AR7059A	TUBE ASSEMBLY, CONDENSER OUT	R
352113	5211A25040B	TUBE ASSEMBLY, DISCHARGER SINGLE	R
35211A	5211A10247P	TUBE ASSEMBLY, SUCTIONSINGLE	R
749750	5239A20001W	AIR GUIDE ASSEMBLY	R
354210	5421A20248G	EVAPORATOR ASSEMBLY,FIRST	R
359012	5900A20027A	FAN,TURBO	R
552111	5210A24956H	Tube,BENDING	R
554031	5403A20062F	CONDENSER ASSEMBLY,BEND	R
554160	2520UCBJ002	COMPRESSOR	R
559011	5900AR1508B	FANASSEMBLY,AXIAL	R
W0CZZ	0CF1042856A	CAPACITOR	R
W48602	3H02932C	CLAMP,SPRING	R
325115-1	5210A21083B	TUBE,EVAPORATOR	R
325115-2	5210A21083C	TUBE,EVAPORATOR	R
550140	4H00982C	ISOLATOR, COMP	R

	ı	Replacement Parts List	
LocNo	P/NO	RAD-243A	REMARK
LOCINO	F/NO	DESCRIPTION	IVEIMAIVIV
130410	3041A30001F	BASE ASSEMBLY,SINGLE	R
130910	3091AR6056P	CABINET ASSY,SINGLE	R
135312	AEB30969401	Grille ASSY,Front(SINGLE)	R
135314	3530AR1604A	Grille ASSY,INLET	R
135510	3550AR7046D	COVER,CONTROL(INDOOR)	R
146812	2H01102J	Motor Assembly,SYNC	R
147581-1	4758AR7264A	LOUVER,HORIZONTAL	R
147581-2	4758AR7278A	LOUVER,HORIZONTAL	R
147582	4758AR6157A	LOUVER,VERTICAL	R
148000	4800AR7271A	BRACE	R
149980	4998AR1597B	SHROUD	R
159830	5231AR6159A	FILTER ASSY,A/C	R
137215	3720AR6163A	PANEL,CONTROL	R
238310	3831A20032L	ESCUTCHEON	R
249950	ABQ32895801	CONTROL BOX ASSEMBLY, SINGLE	R
567480	6323A20003S	Thermistor ASSEMBLY	R
264100	6411A20056Q	POWER CORD ASSEMBLY	R
267110	6711A20035A	REMOTE CONTROLLER	R
268711-1	6871A20611A	PWB(PCB) ASSEMBLY,DISPLAY	R
268711-2	6871A10193N	PWB(PCB) ASSEMBLY,MAIN	R
346811	4681A20081W	MOTOR ASSEMBLY, SINGLE	R
349001	4900AR7265A	DAMPER, VENTILAYION	R
349480	4948A20016A	ORIFICE	R
349600	4960AR1596A	MOUNT,MOTOR	R
552113	5211AR7059E	TUBE ASSEMBLY, CONDENSER OUT	R
352113	5211A21526J	TUBE ASSEMBLY, DISCHARGER SINGLE	R
35211A	5211A10094P	TUBE ASSEMBLY, SUCTION SINGLE	R
749750	5239A20001W	AIR GUIDE ASSEMBLY	R
354210	5421A20248F	EVAPORATOR ASSEMBLY,FIRST	R
359012	5900A20027A	FAN,TURBO	R
552111	5210A24956J	Tube,BENDING	R
554031	5403A20062F	CONDENSER ASSEMBLY,BEND	R
554160	5416A20045B	COMPRESSOR	R
559011	5900AR1508B	FAN ASSEMBLY,AXIAL	R
W0CZZ	0CF1042856A	CAPACITOR	R
W48602	3H02932C	CLAMP,SPRING	R
325115-1	5210A30144U	TUBE,EVAPORATOR	R
325115-2	5210A30144V	TUBE,EVAPORATOR	R
550140	4022A30008A	ISOLATOR, COMP	R

Specifications and performance data subject to change without notice.

HEAT CONTROLLER, INC.

1900 WELLWORTH AVENUE • JACKSON, MICHIGAN 49203

THE QUALITY LEADER IN CONDITIONING AIR