

AUDIOVOX®

OWNER'S MANUAL



VBP4000

**VIDEO IN A BAG SYSTEM WITH
DETACHABLE 5.6" LCD MONITOR & DVD PLAYER**

A. Introduction

Thank you for selecting this “Video in a Bag” System. The system's main features include a 5.6" Liquid Crystal Display (LCD) Monitor and a DVD Player. The system utilizes the latest state of the art electronics and is designed for use in vehicles, hotels, offices or your home. The “Video in a Bag” System is constructed to provide years of reliable, trouble-free service. The system is compact so that you can take it with you anywhere and is designed for quick and easy installation. The LCD monitor is detachable and can be utilized and stored separately from the main unit. Two additional monitors can be purchased and added to the system setup allowing you to utilize three monitors at once (two external and one attached). The connection of the additional monitor is plug and play.

Please read the entire instruction manual supplied with this product prior to operation. The documentation will assist you in installing the system properly to obtain the best equipment performance. All manuals should be stored for later use.

B. Cautions and Warnings

1. Placement

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not place the set on an unstable cart, stand, tripod, bracket or table to prevent it from falling. Keep the unit away from strong magnets, heat sources, direct sunlight, excessive dust. If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit. When you move it from a cold to a warm location, wait for about one hour before operating the unit, or remove the disc and leave the unit turned on until the moisture evaporates.

2. Installation

Ensure that the LCD Monitor, DVD Player, Bag and Pouch are installed in accordance with the instructions and illustrations provided in this manual. When the main unit is in the bag, ensure the inside Velcro straps of the bag are fastened to prevent the unit

from falling. The “S” hooks and all straps must be fastened correctly to secure the system in the vehicle in the event of an accident. Operate the “Video in a Bag” System with the Bag open to ensure proper ventilation of the monitor and the DVD Player. The system is intended to be mounted for rear seat viewing only. Do not use the system in the front seat while operating your vehicle.

3. Power

This system **MUST** be powered from the type of switched (Accessory) power indicated on the marking label (i.e. not directly from the car battery). Power should be applied to the unit when the ignition key is in the Run and/or Accessory positions. To prevent battery discharge, disconnect the “Video in a Bag” System jack from the cigarette lighter socket when the unit is not in use. Use only the supplied power cable matching this set to avoid electric hazards. Always disconnect the power source first and then the jack from the system.

4. Object and Liquid

Do not push objects of any kind into the system through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.

5. Disassemble

To avoid harm from the inside laser beam to eyes, and to reduce the risk of electric shock, do not attempt to disassemble the cabinet. Contact qualified service personnel if your system is in need of repair.

6. Cleaning Unit

When cleaning, make sure the system is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

7. Disc

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper, tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources such as hot air ducts. Do not touch the surface of disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

C. Contents

1. 1 x Detachable Monitor & DVD Player Combo
2. 1 x DIN Cable
3. 1 x AC to DC Adapter
4. 1 x Cigarette Lighter Adapter
5. 1 x Remote Control
6. 1 x Pouch
7. 1 x Travel Bag with 4 Straps
8. 1 x Instruction Manual
9. 1 x Gift Box

D. Power Source

1. ***Powering the system indoors*** (Refer to Figure 1)



Figure 1

Unzip the lower compartment of the bag and take out the AC to DC adapter. Plug one end of the AC to DC adapter into the DC 12V jack on the left side of the main unit, then plug other end into the 110V AC power receptacle.

2. Powering the system in the vehicle (Refer to Figure 2)

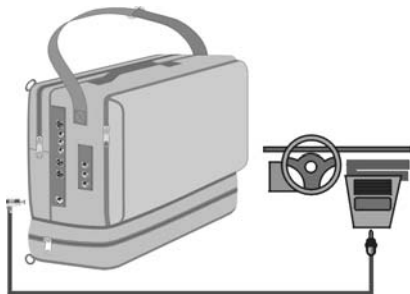


Figure 2

Unzip the lower compartment of the bag and take the cigarette lighter adapter. Plug one end into the DC 12V jack on the left side of the main unit, then plug other end into the cigarette lighter socket.

3. Powering the detached monitor indoors (Refer to Figure 3)



Figure 3

The monitor can be detached from the system by depressing the button below the screen with one hand and removing the monitor with the other hand. Take the AC to DC adapter from the lower compartment, plug one end into the DC 12V jack on the right side of the monitor, then plug the other end into the 110V AC power receptacle.

4. Powering the detached monitor in the vehicle (Refer to Figure 4)

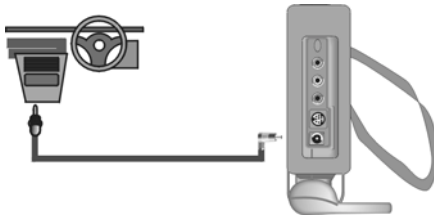


Figure 4

Take the cigarette lighter adapter from the lower compartment, plug one end into the DC 12V jack on the right side of the monitor, then plug the other end into the cigarette lighter socket.

Note:

- 1). When the monitor is combined with the main unit, the inside signals including DC 12V power will be supplied from the main unit to the monitor, so there is no need for another power source to be connected to the DC 12V jack on the right side of the monitor.
- 2). Refer to Figure 5 and 6. When the monitor is detached from the main unit, you can connect the PORT on the right side of the monitor to either MONITOR 1 port or MONITOR 2 port on the left side of the main unit with the supplied DIN cable. When the monitor is connected to the main unit with the DIN cable, DC 12V power, Audio/Video and IR signals will all be sup-

plied through the DIN cable to the connected monitor. So there is no need for another power source to be connected to the DC 12V jack on the right side of the detached monitor.

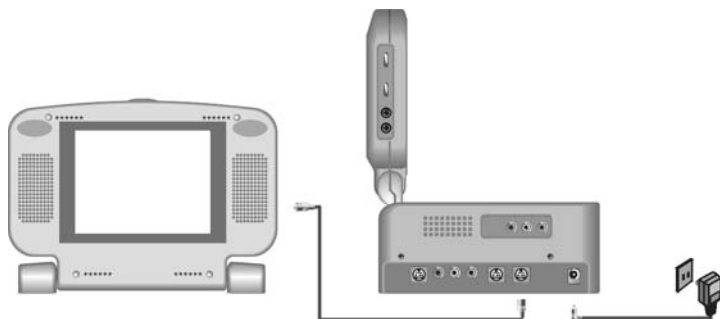


Figure 5

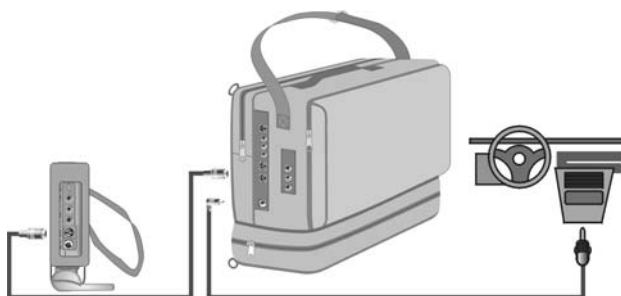


Figure 6

E. Installation

1. *Installing the system onto the seat back in a car* (Refer to Figure 7)

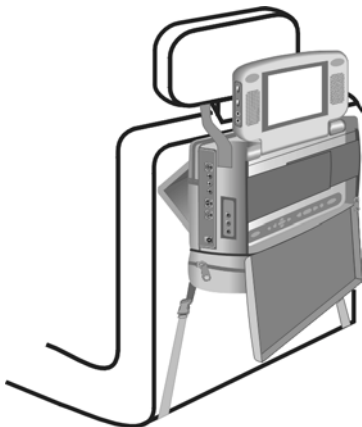


Figure 7

- 1). Unfasten the rear Velcro straps of the bag. Fold inwards the rear piece of the bag and attach its end velcro strap to the middle Velcro strap on the back of the bag to form a triangle.
- 2). Hang the bag onto the seat back by looping the shoulder strap of the bag around the headrest of the seat.
- 3). Take one of the supplied straps from the lower compartment of the bag, and connect the latch to the lower metal ring on the left side of the bag. Attach the "S" hook to the same ring after looping the strap around the driver's seat rail. Repeat this process for the right side. In some vehicles, it may be necessary to attach the "S" connector to the rail directly, as it may not be long enough to reach back to the ring.
- 4). Adjust the straps tightly so that the bag is secured.
- 5). Unzip the bag and flip down the front flap. Ensure the inside Velcro straps of the bag is fastened to prevent the unit from falling. Swing the monitor upwards and adjust the screen for the desired viewing angle.

2. Installing the system between the driver/passenger seat
(Refer to Figure 8)

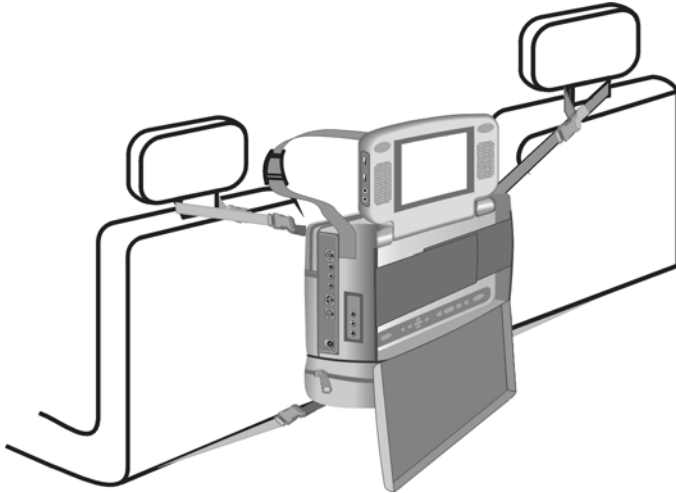


Figure 8

- 1). Take one of the supplied straps from the lower compartment of the bag, and connect the latch to the upper metal ring on the left side of the bag. Attach the "S" hook to the same ring after looping the strap around the headrest of the driver's seat. Repeat this process for the right side (Passenger Seat).
- 2). Take another strap and connect the latch to lower metal ring on the left side of the bag. Attach the "S" hook to the same ring after looping the strap around the driver's seat rail. Repeat this process for the right side. In some vehicles, it may be necessary to attach the "S" connector to the rail directly, as it may not be long enough to reach back to the ring.
- 3). Adjust the straps tightly so that the bag is secured.
- 4). Unzip the bag and flip down the front flap. Ensure the inside Velcro strap of the bag is fastened to prevent the unit from falling. Swing the monitor upwards and adjust the screen for the desired viewing angle.

3. Installing the system on the back seat in a car (Refer to Figure 9)

There is no need to remove the four straps from the bag as they are not used in this installation.

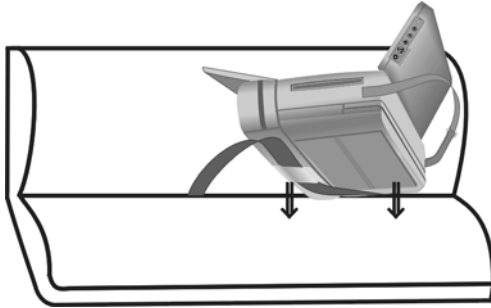


Figure 9

Carefully place the system (front facing up) on the back seat. Guide the vehicle's safety belt through the short strap sewn on the back of the bag. Then secure and adjust the safety belt so that the system is not free to move around. Finally uncover the bag, swing the monitor upward and adjust the screen for a desired viewing angle. Ensure the inside Velcro strap of the bag is fastened to prevent the unit from falling.

4. Installing the detached monitor onto the seat back in a car (Refer to Figure 10)

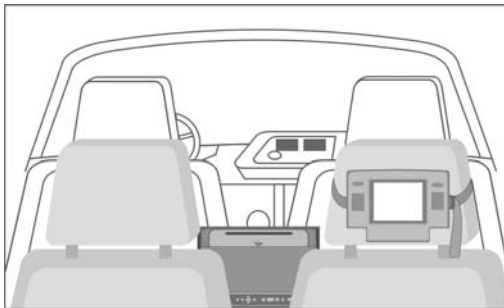


Figure 10

- 1). Follow the installation instruction shown in Item 1, 2 or 3.
- 2). Detach the monitor from the main unit by depressing the button below the screen with one hand and remove the monitor with the other hand. Take the pouch from the rear compartment of the bag. Slide the monitor into the pouch, and make sure to feed the bottom piece of the pouch into the long slot at the bottom of the monitor and attach the Velcro strap to fasten the monitor in the pouch. Then loop the strap of the pouch around the headrest and pull the end of the strap while holding the buckle until the pouch is tightly secured.
- 3). Insert one end of the DIN cable into the PORT on the right side of the detached monitor, and the other end into either MONITOR 1 port or MONITOR 2 port on the left side of the main unit.

5. Placing the system in a hotel/office/home (Refer to Figure 11)

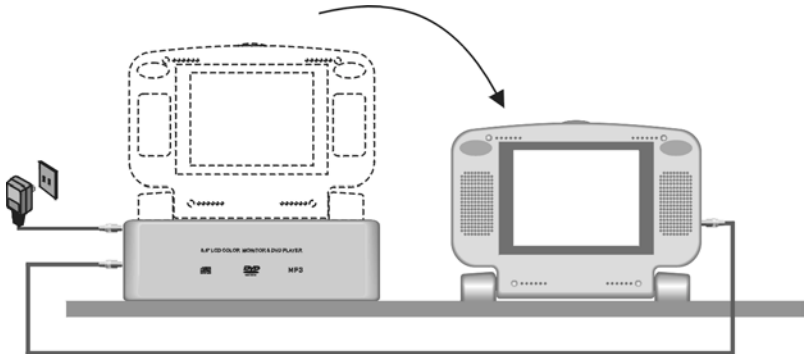


Figure 11

- 1). Just place the system on a table or other level surface with the system bottom facing down. Uncover the monitor and adjust the screen for the desired viewing angle. This can be done with or without the unit inside its bag. You can remove the main unit from the bag by unfastening the inside Velcro strap of the bag.

2). You can detach the monitor from the main unit by depressing the button below the screen with one hand and removing the monitor with the other hand. Rotate the base of the monitor backward so that it may be placed on a table or other level surface. Adjust the screen for the proper viewing angle. This can be done with or without the monitor inside its pouch. Insert one end of the DIN cable into the PORT on the right side of the detached monitor, and the other end into either MONITOR 1 or MONITOR 2 port on the left side of the main unit.

F. Controls, Indicators, and Connectors

1. Unit View (Refer to Figure 12)

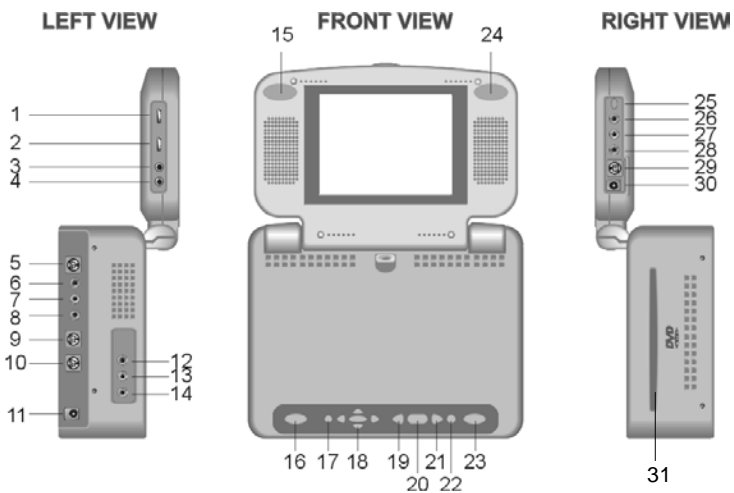


Figure 12

- 1). Brightness Up/Down Thumbwheel
- 2). Volume Up/Down Thumbwheel
- 3). Headphone Input Jack # 2
- 4). Headphone Input Jack # 1
- 5). S Video Output Jack
- 6). DVD Video Output Jack
- 7). DVD Audio L Output Jack
- 8). DVD Audio R Output Jack
- 9). Monitor Port # 1 (Output)
- 10). Monitor Port # 2 (Output)
- 11). DC 12V Input Jack for Main Unit
- 12). Video Input Jack for Main Unit
- 13). Audio L Input Jack for Main Unit
- 14). Audio R Input Jack for Main Unit
- 15). Power LED Indicator for Monitor
- 16). Power Button for Main Unit
- 17). DVD Menu Button
- 18). Up/Down/Left/Right/Enter Buttons
- 19). Previous Button
- 20). Play Button
- 21). Next Button
- 22). Stop Button
- 23). Eject Button
- 24). Remote Control Sensor
- 25). Power On/Off Button for Monitor
- 26). Audio R Input Jack for Monitor
- 27). Audio L Input Jack for Monitor
- 28). Video Input Jack for Monitor
- 29). Monitor Port (Input)
- 30). DC 12V Input Jack for Monitor
- 31). DVD Slot

2. Remote Control View (Refer to Figure 13)

- 1). Power Button
- 2). Display Button
- 3). Angle Button
- 4). Subtitle Button
- 5). Audio Button
- 6). Zoom Button
- 7). Up/Down/Left/Right/Enter Buttons
- 8). Menu Button
- 9). Return Button
- 10). A-B Button
- 11). Slow Button
- 12). Pause Button
- 13). Stop Button
- 14). Eject Button
- 15). Number Buttons
- 16). Setup Button
- 17). Repeat Button
- 18). Previous Button
- 19). Next Button
- 20). Reverse Button
- 21). Forward Button
- 22). Play Button

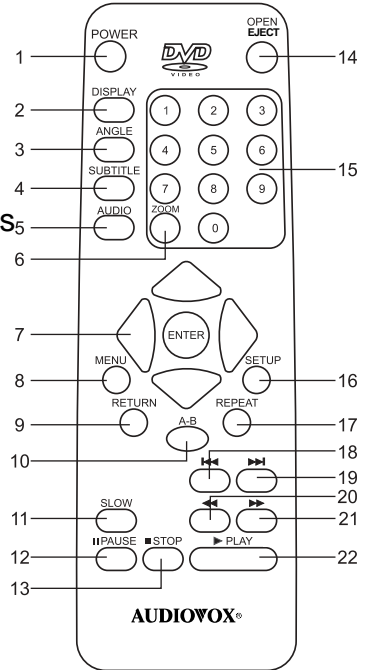


Figure 13

G. Playing A DVD

After connecting power to the unit, press the power button on the main unit momentarily and press the power button on the side of the monitor. Insert the disc into the slot on the right side of the main unit, the unit will load the disc and start playing automatically; if there's a disc inside unit, press the POWER button, the unit will start playing automatically.

1. Basic Operation

POWER	Turn on/off the unit
OPEN/CLOSE	Eject/load the disc
PLAY	Start Play
SLOW	Play at 1/2, 1/4, or 1/8 times speed
PAUSE	Still Picture
STOP	(1 time) Stop at the present playing point / (2 times) Stop playing
NEXT	Go to the next chapter, track or scene during play back
PREVIOUS	Go back to the preceding chapter, track or scene during play back
FORWARD	Scan forward at 2, 4, 6, or 8 times speed
REVERSE	Scan backward at 2, 4, 6, or 8 times speed
UP/DOWN/LEFT /RIGHT	Used for Menu Navigation
ENTER	Execute item or setting
NUMBERS	Select item or setting
Return	Return to the previous selection
MENU	Display the root menu of the disc
REPEAT	Repeat playing title or chapter
A-B	Repeat a specific portion from point to point B of the disc
DISPLAY	Display information (title, chapter, track, time, etc.).
ANGLE	Change the angles on the scene
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language and listen
ZOOM	Enlarge an image to 1.5, 2, or 4 times the original
SETUP	Display the setup menu to select and set items, and exit the setup menu.

2. Menu


A DVD is divided into sections called title and chapter. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playing to display the menu, and press ENTER or PLAY to start playing. Some DVDs allow you to select disc play back options using the DVD menu.

3. Display (The contents vary from disc to disc.)

1). Playing time and remaining time


a. During play back press DISPLAY to display the current title number (1), the total number of titles (2), the current chapter number (3), the total number of chapters (4), and the playing time for the title (5). The heading will disappear automatically in about 3 seconds.

(Menu 1)

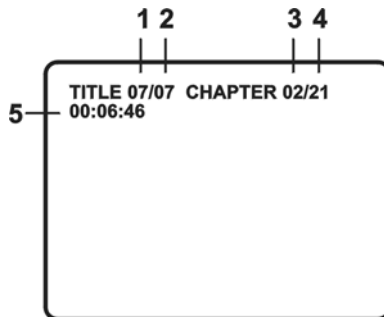


b. Press DISPLAY again to display the remaining time for the title. The heading will disappear automatically in about 3 seconds.

(Menu 2)

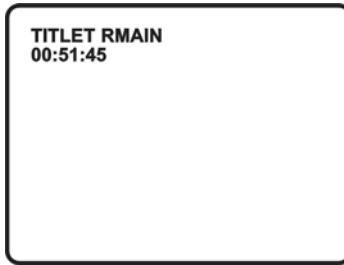


- c. Press DISPLAY the 3rd time to display the elapsed time for the chapter. The heading will disappear automatically in about 3 seconds.

(Menu 3)

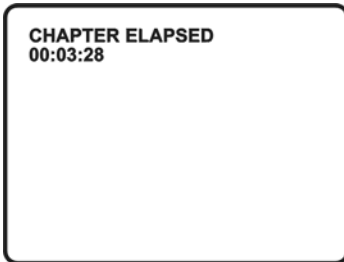

Press DISPLAY the 4th time to display the remaining time for the chapter. The heading will disappear automatically in about 3 seconds.

(Menu 4)

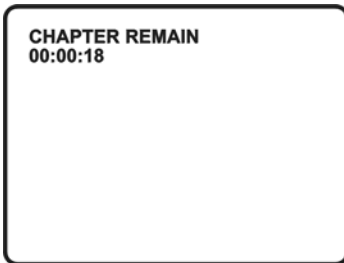


Press DISPLAY the 5th time to exit.

2). Angle

During play back press ANGLE to view angles for discs containing multi-angles, with the current angle number (1) and the total number of angles (2) displaying. Go on to press ANGLE to select other angle, and finally exit to return to normal viewing angle. The angle display will disappear automatically if the ANGLE button isn't pressed again in about 3 seconds.


(Menu 5)

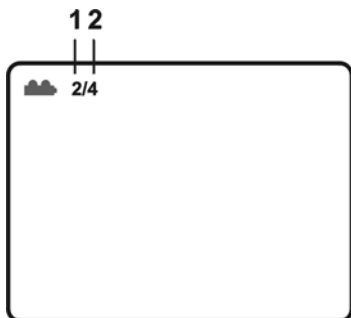

3). Subtitle

During playing press SUBTITLE to select the subtitle language you desire, with the current subtitle language number (1) and the total number of subtitle languages (2) displayed. If there are multiple languages press SUBTITLE again to select another subtitle language. To turn subtitles off, press the subtitle button until SUBTITLE OFF is displayed. The subtitle display will disappear automatically if the SUBTITLE button isn't pressed again for 3 seconds.


(Menu 6)

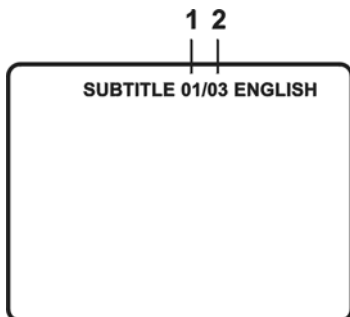

4). Audio

During play back press AUDIO to select the audio language you desire, with the current audio channel number (1) and the total number of audio channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the AUDIO button isn't pressed again for 3 seconds.


(Menu 7)

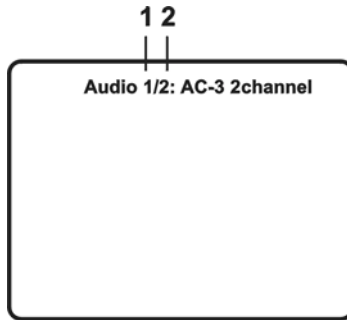

5). Zoom


During play back press ZOOM to enlarge the picture by 1.5, 2, or 4X with the current zoom multiple (1) displaying. Press Up/Down/Left/Right to move the zoomed picture. Press ZOOM again to select other zoom multiple or until ZOOM OFF is displayed and the picture will return to normal size. The zoom display will disappear automatically if the ZOOM button isn't pressed again for 3 seconds.

(Menu 8)

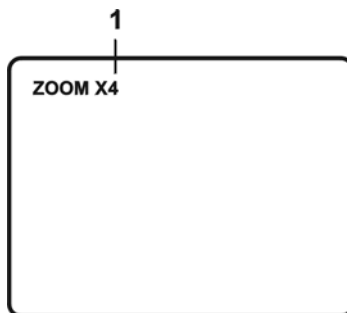


6). A-B Repeat


- a. During play back press A-B to set the starting point A.
(Menu 9)

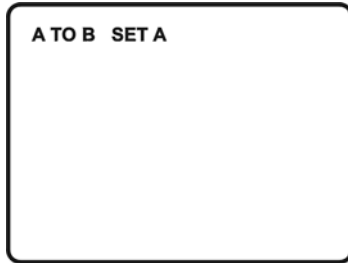

- b. Press A-B to set the ending point B and the player will repeatedly play the part between Point A and Point B.
(Menu 10)

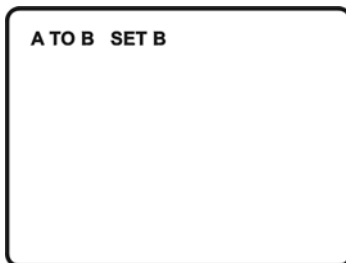


- c. Press A-B a 3rd time to cancel A-B repeat. Normal play back will resume from Point A.
(Menu 11)

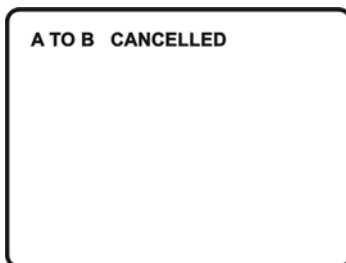

7). Repeat


- a. During play back press REPEAT to repeatedly play the current chapter.

(Menu 12)

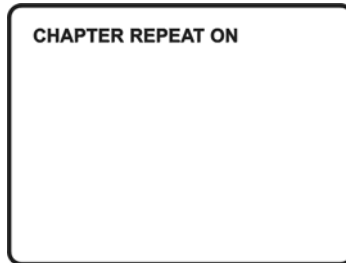


- b. During play back press REPEAT again to repeatedly play the current title.

(Menu 13)

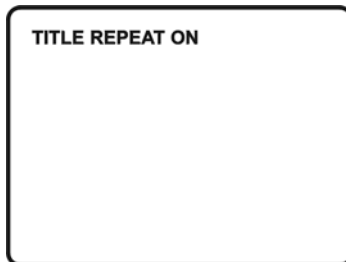

3. During play back press REPEAT a 3rd time to cancel the repeated playing and resume normal play back. The repeat display will disappear automatically if the REPEAT button isn't pressed again for 3 seconds.


(Menu 14)

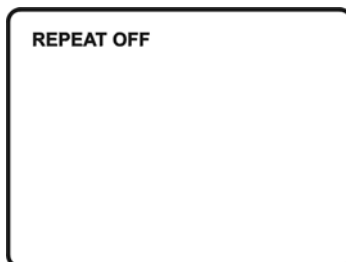

4. Setup (The contents vary from disc to disc.)


Press **SETUP** to display the main page of the setup menu on the screen. Press **SETUP** again to exit the **SET UP** menu and the unit will resume last play back or stop mode.

(Menu 15)

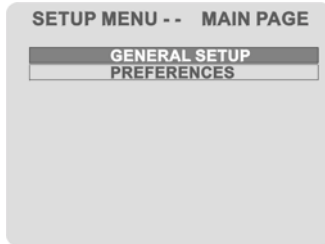

- 1). Select **GENERAL SETUP** using **UP/DOWN**, and then press **ENTER** to enter the general page.

(Menu 16)

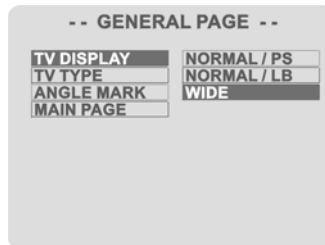


- a. Select **TV DISPLAY** using **UP/DOWN**, and then press **RIGHT** to enter the submenu. Select the TV display mode on the screen using **UP/DOWN**, and press **ENTER** to confirm the setting. Press **LEFT** to return.

* **NORMAL/PS**: When the player is connected to a normal TV, and a wide picture is shown on the full screen, with a portion may be cut off automatically.

* **NORMAL/LB**: When the player is connected to a normal TV, and a wide picture is shown on the screen, with black strip at both top and bottom of the screen.

* **WIDE**: When the player is connected to a wide screen TV, a wide picture is shown on the full screen.


- b. Select TV TYPE using UP/DOWN, and then press RIGHT to enter the submenu.
(Menu 17)

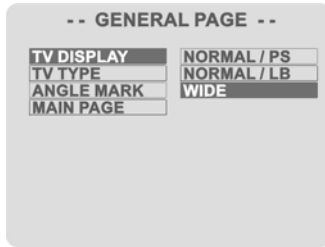

Select the video system on the screen using UP/DOWN, and press ENTER to confirm the setting. Press LEFT to return.


- * MULTI: The connected TV is multi system.
- * NTSC: The connected TV is NTSC system.
- * PAL: The connected TV is PAL system.

- c. Select ANGLE MARK using UP/DOWN, and then press RIGHT to enter the submenu. Choose if to show angle mark on the screen using UP/DOWN and then press ENTER to confirm the setting. Press LEFT to return.
(Menu 18)

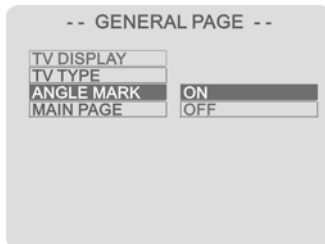


- * ON: The screen will show angle mark. (If angle option is available)
- * OFF: the screen won't show angle mark.

- d. Select MAIN PAGE using UP/DOWN, and then press ENTER to return to the main page.
(Menu 19)

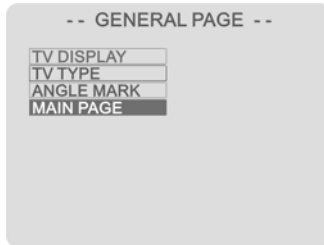


- 2). When there's no disc inside the player, select PREFERENCES using UP/DOWN, and then press ENTER to enter the preferences page.
(Menu 20)

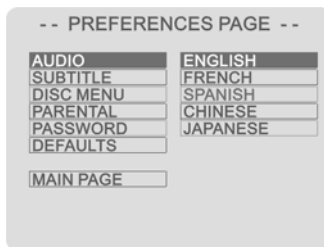


- a. Select AUDIO using UP/DOWN, and then press RIGHT to enter the submenu. Select the audio language you desire using UP/DOWN, and then press ENTER to confirm the setting. Press LEFT to return.
- b. Select SUBTITLE using UP/DOWN, and then press RIGHT to enter the submenu. Select the subtitle language or SUBTITLE OFF you desired using UP/DOWN, and then press ENTER to confirm the setting. Press LEFT to return.

(Menu 21)

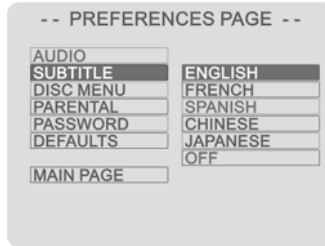

- c. Select DISC MENU using UP/DOWN, and then press RIGHT to enter the submenu. Select the disc menu language you desire using UP/DOWN, and then press ENTER to confirm the setting. Press LEFT to return.


(Menu 22)

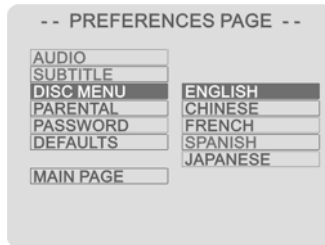

Note: Language selection is only available for discs recorded in above listed languages. If not, the player will play and display on the screen the original recorded language contained in the disc.

- d. Select PARENTAL using UP/DOWN, and then press RIGHT to enter the submenu.

(Menu 23)

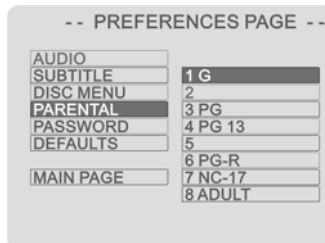

Select the parental level you desired using UP/DOWN for discs with lock-out function or multiple rating levels. It's listed from the lowest level (1 Child) to the highest level (8 Adult). Press ENTER to enter the password verify page.

(Menu 24)




PASSWORD VERIFY PAGE
INPUT PASSWORD X X X X

Input the password in 4 digits, and then press ENTER to confirm the parental level setting. NOTE: for 1st time use, the default password 3308.

- e. Select PASSWORD using UP/DOWN, and then press RIGHT to enter the submenu.

(Menu 25)

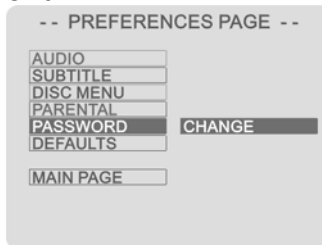

-- PREFERENCES PAGE --
AUDIO
SUBTITLE
DISC MENU
PARENTAL
PASSWORD CHANGE
DEFAULTS
MAIN PAGE

Press ENTER to enter the password change page. Input the old password or the default password, the new password, and the confirmed new password. Press ENTER to confirm the change.

(Menu 26)




PASSWORD CHANGE PAGE
OLD PASSWORD: X X X X
NEW PASSWORD:
CONFIRM PWD:

Note: The default password is 3308 and this password is always effective whether you've changed it to another new one or not, in case that you forget the new password. To avoid others using it to set the parental level and change the password, you may note this default password by other means and delete it from this manual. Some discs can be limited depending on the age of users while some discs can not.


- f. Select DEFAULTS using UP/DOWN, and then press RIGHT to enter the submenu. Press ENTER to make the setting return to the factory-set mode.

(Menu 27)

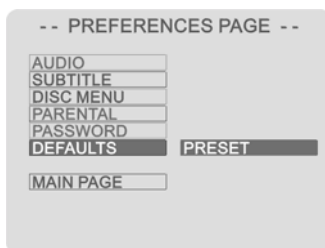

- g. Select MAIN PAGE using UP/DOWN, and then press ENTER to return to the main page. Press SETUP to exit the MAIN PAGE

(Menu 28)

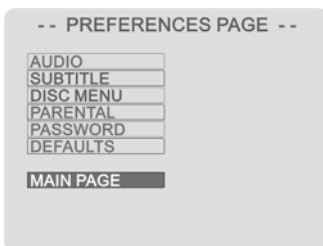

H. Playing a Video Game (Refer to Figure 14)

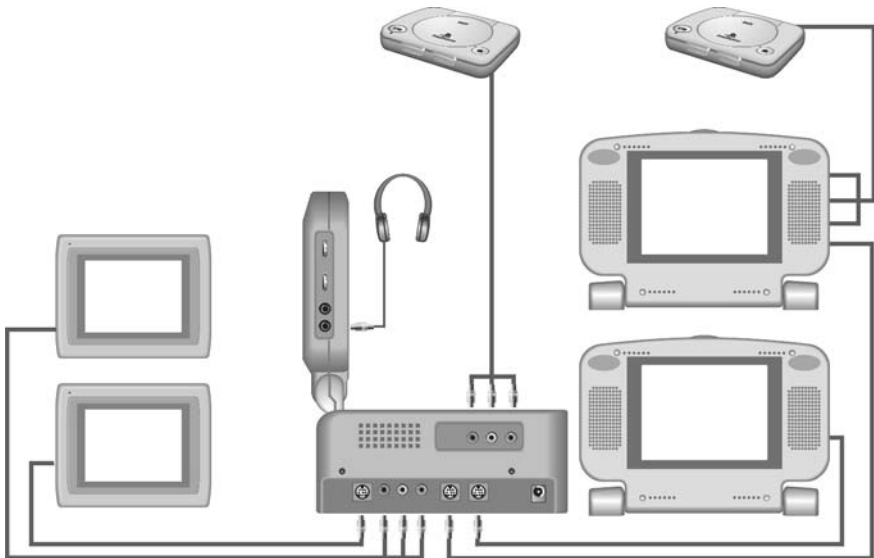


Figure 14

1. Plug the video output from your game system into the yellow video jack and the Audio L and Audio R into the applicable jacks on the left side of the main unit, which takes priority to the built-in DVD Player. Adjust the volume control and the brightness control on the monitor for individual preference.
2. Plug the video output from your game system into the yellow video jack and the Audio L and Audio R into the applicable jacks on the right side of the monitor, which takes priority over both AV input into the main unit and the built-in DVD Player. Adjust the volume control and the brightness control on the monitor for individual preference.

I. Wired Headphone (Refer to Figure 14)

Optional wired headphones may be used with the "Video In a Bag" System. Simply plug in the headset to either headphone 1 or 2 jack on the left side of the monitor. NOTE: Using headphone jack #1 will disconnect the internal speakers.

J. Support Monitors

1. Using **MONITOR PORT** (Refer to Figure 14 and Figure 15)

Besides the monitor combined with the main unit, this system can drive up to 2 additional monitors (Please contact an Audiovox dealer for the additional monitors) by using the cigarette lighter adapter in the vehicle. (NOTE: The AC adapter can drive only 1 main unit and 1 monitor either combined or detached). Connect the PORT on the additional monitor to either MONITOR 1 port or MONITOR 2 port on the left side of the main unit with the supplied DIN cable. After plugging in the main unit, DC 12V power, Audio/ Video and IR signals will all be supplied through DIN cable to the additional monitor.

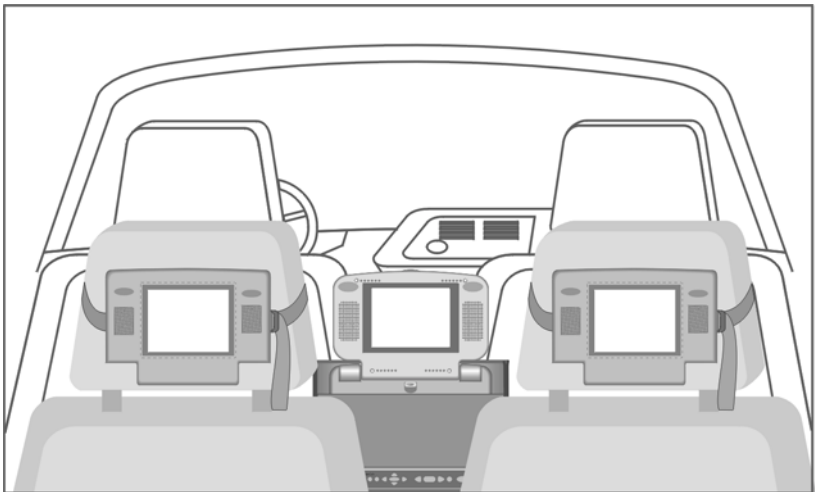


Figure 15

2. Using VIDEO, AUDIO L, AUDIO R outputs (Refer to Figure 14)

Match the color-coded plugs to the appropriate DVD OUT jacks on the left side of the main unit: Yellow (Video) to Yellow, White (Audio L) to White, and Red (Audio R) to Red.

3. Using S VIDEO output (Refer to Figure 14)

Connect the S VIDEO jack on the left side of the main unit to the S VIDEO connector on your TV for a high quality picture.

K. Specification

Disc format: DVD/CD

Color system: NTSC

Screen size": 5.6"

DVD video format: Horizontal 720 pixel, vertical 480 pixel (NTSC)

Frequency response: DVD (PCM 96 kHz/24 bits): 20 Hz to 44 kHz

DVD (PCM 48 kHz): 20 Hz to 22 kHz

CD: 20 Hz to 20 kHz

Video output: 1.0 V_{p-p}/75 Ohm, unbalanced

Video S/N: Better than 35 dB

Audio output: 2 x 1 W

Audio S/N: Better than 35 dB

Power source: DC 11 V to 16 V

Power consumption: 35 W

Operating temperature: 5~40°C (41~104°F)

Storage temperature: -20~60°C (-4~140°F)

Operating humidity: 10~75%

Dimensions (W x H x D): 310 x 350 x 186 mm (12.2" x 13.8" x 7.3")

90 DAY LIMITED WARRANTY

AUDIOVOX CORPORATION (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the warranty center at the address shown below.

This Warranty does not extend to the elimination of car static or motor noise, to correction of antenna problems, to costs incurred for installation, removal, or reinstallation of the product, or damage to tapes, compact discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 30 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A.: AUDIOVOX CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 • 1-800-645-9944

CANADA: CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

Form No. 128-5047A



For Customer Service
Visit Our Website At

www.audiovox.com

Product Information, Photos,
FAQ's Owner's Manuals