
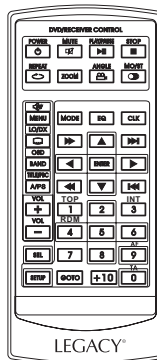


LEGACY[®]

LD63MU

OWNER'S MANUAL

Mobile Video System

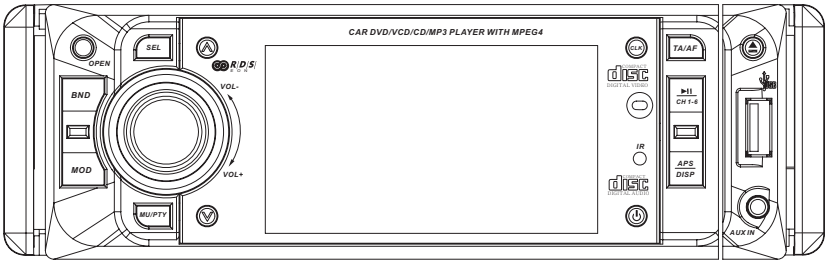

- FLIP DOWN AND DETACHABLE PANEL
- 3.6 INCH WIDE TFT COLOR LCD SCREEN
- CAR DVD/VCD/CD/MP3 PLAYER
- AM/FM-RDS DIGITAL PLL TUNING RADIO
- MPEG4 PLAYER
- USB CONNECT

CONTENTS

Safety Information	2
Disc Notes	3
Installation	4
Electric Connection	7
Remote Control	8
Basic Operation	10
MP3/WMA/JPEG Disc Play	15
MPEG4 Player	15
AUX Operation	15
Scroll Caption Adjustment	15
Video Quality Adjustment	16
Rear View Camera	16
Alternate Audio/video Source	16
USB Operation	17
On-Screen Display Function	17
Multi-Audio Language Function	18
Multi-Subtitle Language Function	18
Multi-Angle Function	18
Title Menu Function	18
Setup	19
General Setup	19
Speaker Setup	21
Dolby Digital Setup	21
Preferences Setup	22
Defaults Table	23
Specifications	24
Trouble Shooting	25

SAFETY INFORMATION

CAUTION:

This DVD Player Is A Class I Laser Product. However This DVD Player Uses A Visible/invisible Laser Beam Which Could Cause . Hazardous Radiation Exposure If Directed.

Be Sure To Operate The Dvd Player Correctly As Instructed.

Use Of Controls Or Adjustments Or Performance Of Procedures Other Than Those Specified Herein May Result In Hazardous Radiation Exposure. do Not Open Covers And Do Not Repair Yourself. Refer Servicing To Qualified Personnel.

REGION MANAGEMENT INFORMATION:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD Player cannot play this disc.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES. THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation.

Reverse engineering or disassembly is prohibited.

DISC NOTES

Disc formats supported by this player

DVD		Audio and Video Disc size 12 cm
VCD		Audio and Video Disc size 12 cm
CD		Audio Disc size 12 cm
MP3		Audio Disc size 12 cm

Discs which cannot be played with this player

- DVD-ROM
- DVD-RAM
- CDV
- CD-G

Handling and Cleaning

- Dirt, dust, scratches and warping disc will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damaging.
- Do not place discs in the following places:
 1. Direct sunlight
 2. Dirty, dusty and damp areas
 3. Near car heaters
 4. On the seats or dashboard


Disc Cleaning

Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moistured with isopropyl (rubbing) alcohol. Never use solvents such as benzine, thinner or conventional record cleaners as they may mar the surface of the disc.

Note:


A disc may become somewhat scratched

(although not enough to make it unusable) depending on your handling it and conditions in the usage environment. Note these scratches are not an indication of any problem with the player.

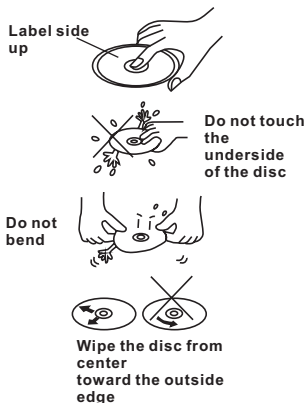

Preparing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ball point pen or pencil as shown on the right. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

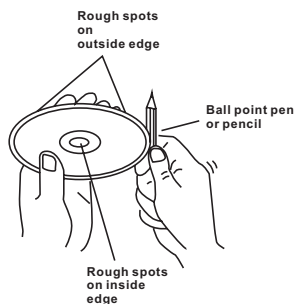

INSTALLATION

NOTES:

Choose the mounting location where the unit will not interfere with the normal driving function of the driver.


Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.

Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.

Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.

Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.

If installation angle exceeds 30 from horizontal, the unit might not give its optimum performance.

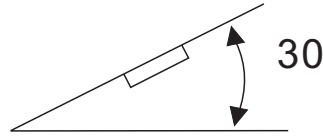


Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.


DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis).

For details, refer to the following illustrated installation methods.


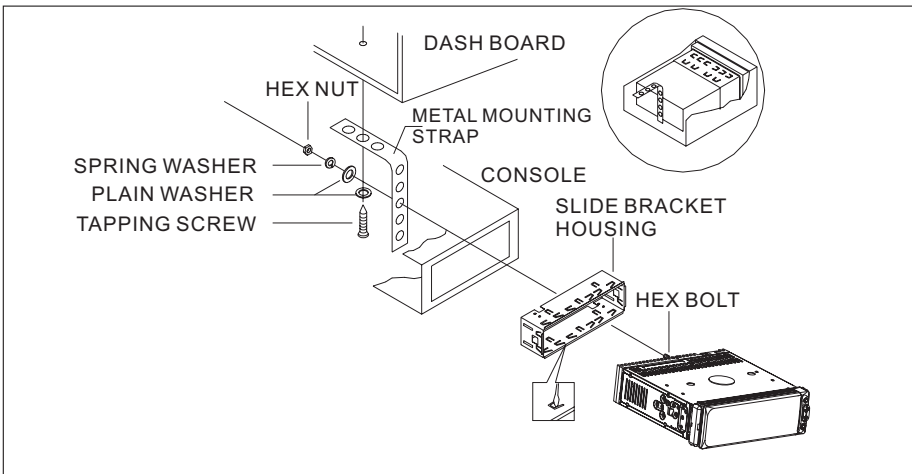


INSTALLATION


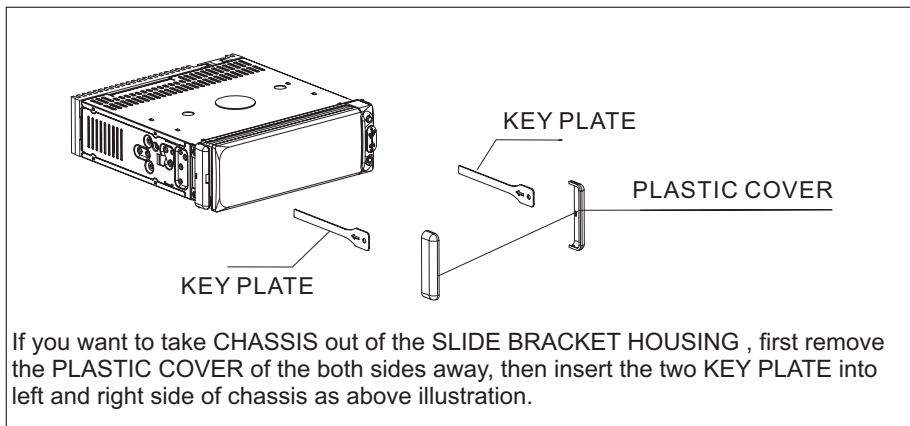


DETACHING THE FRONT PANEL

1. Press the **OPEN** button to flip down the front panel .

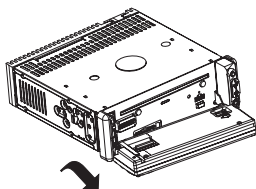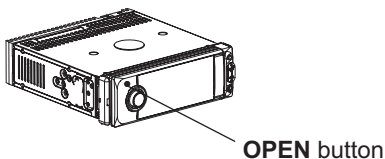


2. Slide the guide knob to remove the right side first, slide it to the left, and pull it off towards you .

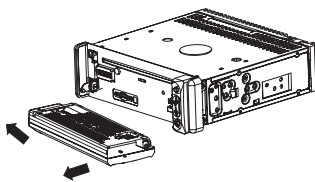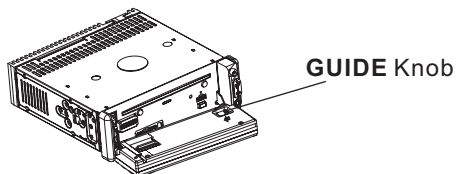

INSTALLATION

3. put it in the protective case for safe keeping.



PROTECTIVE CASE

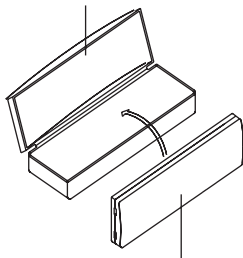


FRONT PANEL

REPLACING THE FRONT PANEL


1. First, insert the left side of the front panel into the main unit.

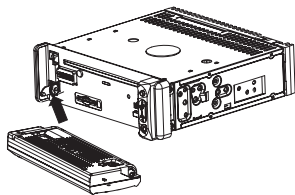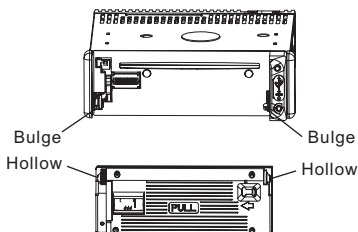

2. Push the right side of the front panel until it locks firmly into the main unit, at one time, insert the right side of the front panel into the main unit .

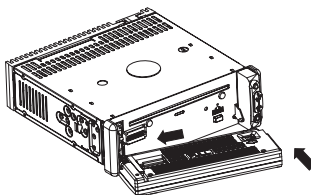


3. Push it back to the position for playing

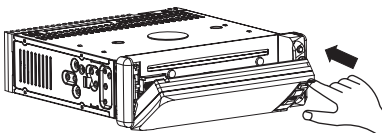


ELECTRIC CONNECTION

WIRING CONNECTION

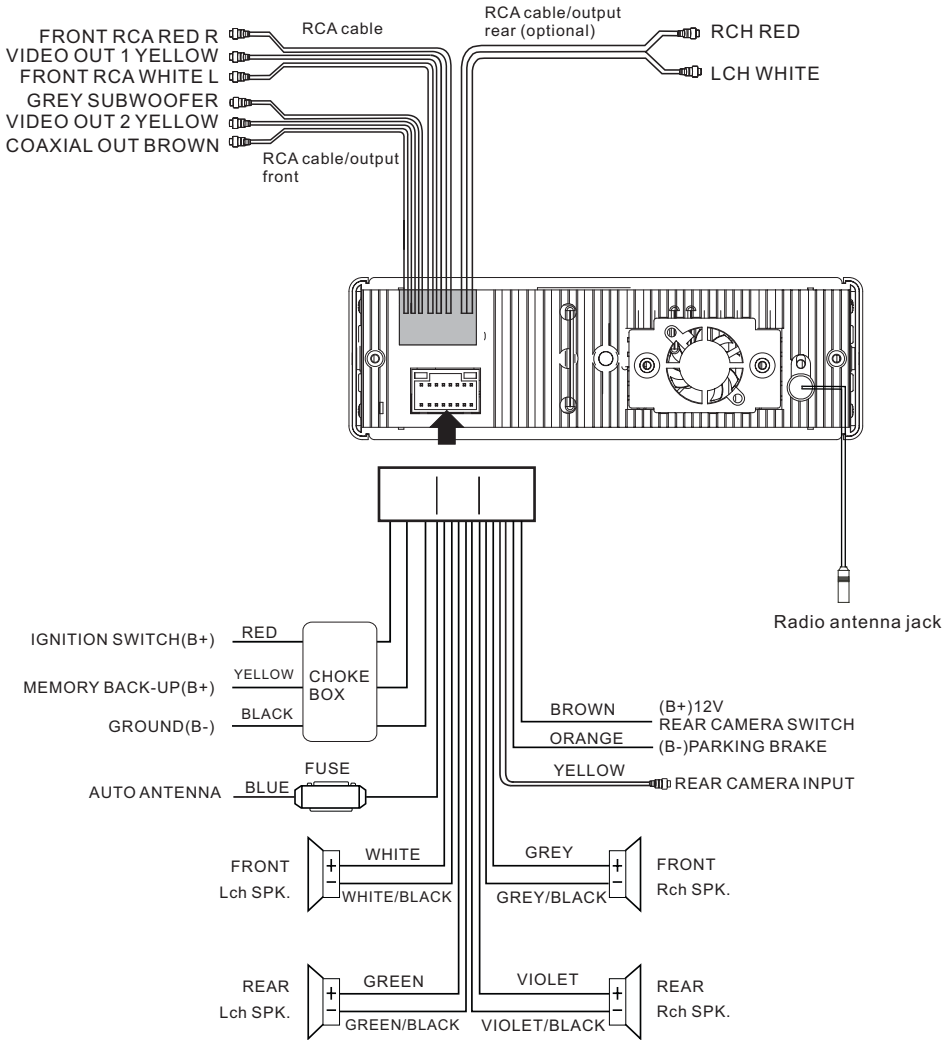

Note: the earth connection cable (parking brake B-) must be connected in order for DVD pictures to be played back to the monitor. If the cable has not been correctly connected, the message "PARKING BRAKE" appears on the monitor.

REMOTE CONTROL

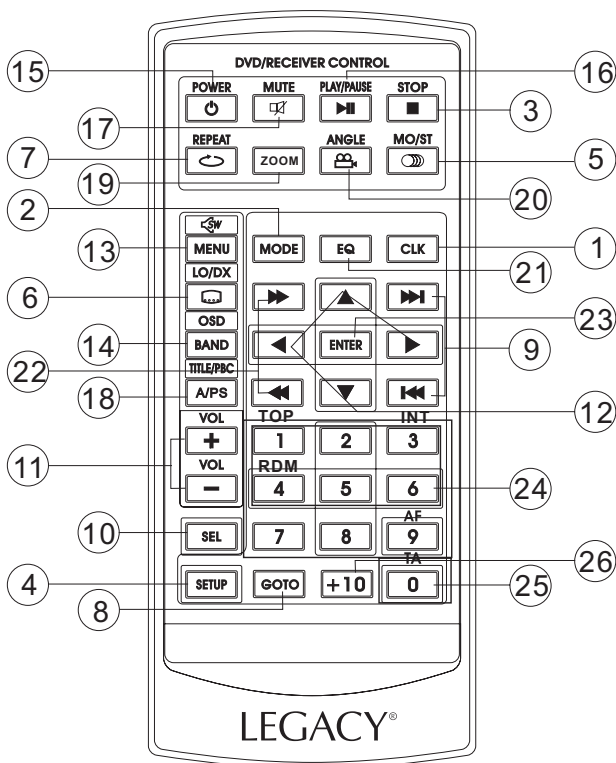



1. CLK Press it briefly to show / hide the clock, press longer to set the time.

2. MODE Press it to change between RADIO ,DISC and AUX IN mode.

3. STOP Press it to stop playback, press PLAY/PAUSE to resume playback .

4. SETUP Press it to open the SETUP menu.

5.MO/ST() In radio mode, press it to select STEREO or MONO mode (In disc mode, press it to changing of the AUDIO soundtrack on multiaudio soundtrack DVD disc. Changing of the sound mode of the VCD/CD disc.)

6. LO/DX() Changing of the SUBTITLE language on multi-subtitle language DVD disc. In radio mode, Press this button for distance reception when you are located at weak signal location, depress it for stronger signal.

7. REPEAT/ Switch the Repeat mode of DVD/VCD/CD/MP3 disc.

8.GOTO Press this button to begin playback at a moment in the program you designate. Use the number buttons to enter the data that is needed.


REMOTE CONTROL

9. ⏪ / ⏩ Press **⏩** to skip to the next track & press **⏪** to skip back one track. (Note: In DVD mode, press continually the **⏪** twice to skip back one track.)


10. SEL Press this button repeatedly to cycle through the various audio and video adjustments you can make: Such as Volume, Bass, Treble, Balance, Fader, Color, BG Color, Brightness, etc .


11. VOL+/VOL- Press it to adjust volume level .

12. ▲/▼/▶/◀ Use these buttons to navigate the various menus present in the product.

13. MENU/SUBWOOFER() Press it to display the root menu of the DVD disc. Press it longer to switch the Subwoofer ON and OFF.

14. BAND(OSD) In Radio mode, press this button repeatedly to switch between the five radio bands .
In Disc Playback modes, Press this button to see information about the disc currently in play.

15. POWER () Press it to turn on the unit , press it again to turn off.

16. PLAY/PAUSE() In DISC mode, starting playback, stopping picture/track. In Radio mode, PTY selection of the program type.

17. MUTE Press this button to turn off the audio. Press again to restore the sound to its prior volume level.

18. TITLE/PBC (A/P) Display the TITLE menu that is stored in DVD disc changing between PBC ON and PBC OFF on the VCD disc.(Auto store and preset scan function in radio stations .)

19. ZOOM Allows the picture to be increase in size .

20. ANGLE Changing of the view angle on multi-angle DVD disc.

21. EQ Press it to turn to equalization function.

22. ⏩ / ⏪ Press **⏩** to start forward rapidly & **⏪**to reverse rapidly.

23. ENTER Confirm the Track/Chapter selected with the number key or selected with the cursor buttons on TV screen.

24. RADIO PRESET Six preset memory buttons.

25. 0 - 9 Numeric buttons. In radio mode, 0 and 9 act as TA/AF.


26. +10 Tens digit select button, cooperatively used with numeric buttons.

REMOTE CONTROL

PREPARING THE REMOTE CONTROL

Inserting the Batteries


1. First push to inside as the direction indicated by the arrow (See ①) and then Remove the battery holder as the direction indicated by the arrow (See ②).
2. Replace the battery Set a new battery property with (+)side up as illustrated (See ③).
3. Insert the battery holder. Push in the holder to the original position(See ④).

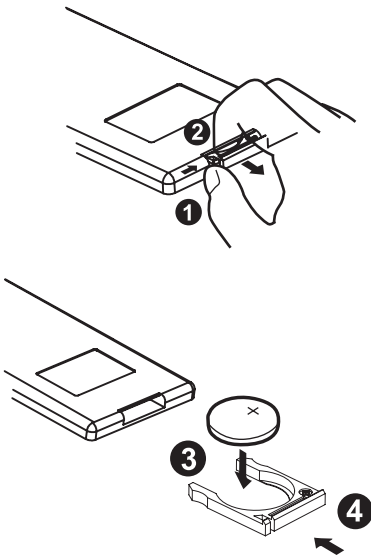

USING THE REMOTE CONTROL

1. Face the remote control towards the player front face IR mark (remote control signal receiver).
2. Operation angle: About ± 30 degree in each the direction of the front of the IR mark.

BASIC OPERATION

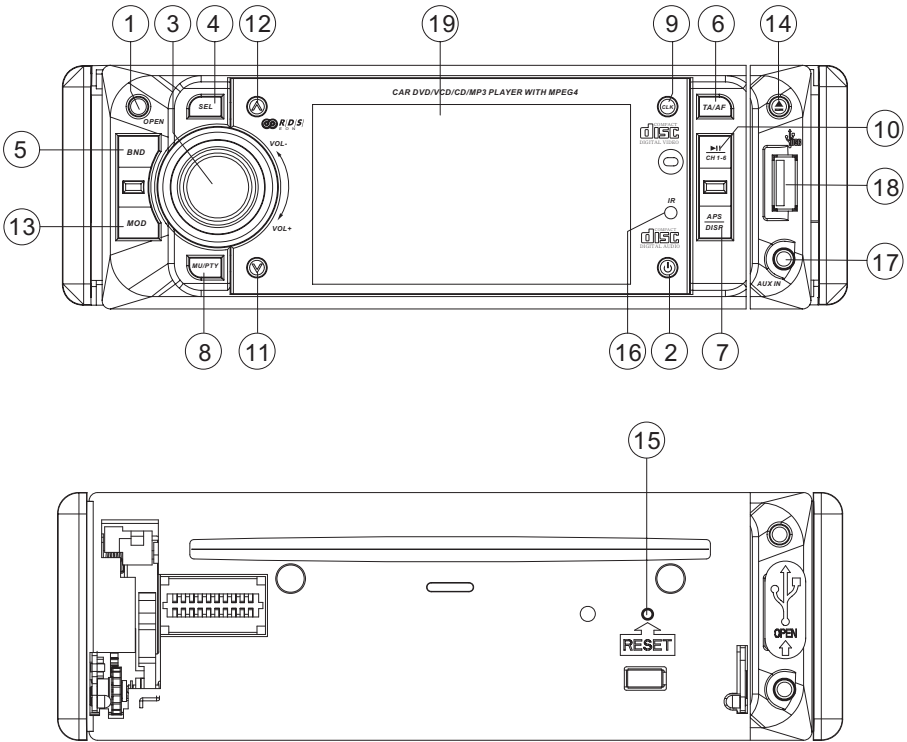

1. OPEN Button

Press it to flip down the front panel , then you can insert the CD disc into the CD compartment. You can also press the Eject button(14) to eject the disc.

2. ⏻ (POWER On/Off) BUTTON

Press this button to switch the device On, WELCOME appears in the display. Press it again to switch the device Off, SEE YOU appears in the display.

3. VOL Multifunction Button

In normal mode, this knob is used to increase or decrease the volume. If the SEL knob is pressed beforehand, changed can be made in the menus, e.g. Sound mode .

4. SELECT Knob

To access the available adjustment settings for audio and video, press this knob repeatedly to cycle through and select them :

Volume - Bass - Treble - Balance -
- Fader - Tint - Contrast - Bright - Color -
BG Color .

The settings of the individual menu items are changed by turning the multifunction button VOL (3)

5. BAND Button

In Radio mode, press this button repeatedly to cycle through and select the desired radio band, the designation of the corresponding level- FM1, FM2, FM3, AM1(MW1), AM2(MW2)- is shown in the TFT.

BASIC OPERATION

6. TA/AF BUTTON

TA Function [traffic Announcement] Button (for Rds Only)

In RADIO mode

When you press the TA/AF button, the TA function is activated, the TA symbol appears in the display .

(press it again to turn off .)

During radio operation in one FM frequency band the search for a traffic announcement station is started automatically (TA SEEK) . If an FM station is being received which transmits the latest traffic announcements from time to time, the TP display lights up.

If an FM station is being received which transmits the latest traffic announcements automatically interrupt CD operation (the word TRAFFIC appears in the display).

The volume level is increased to the minimum value for the transmission of traffic announcements. After the traffic announcements has finished, the programme that was previously running is resumed.

AF [Alternative Frequencies]

When press and hold the TA/AF button more than 2 seconds, it is activated as AF mode ON or OFF .

Segment off: AF switching mode off.

Segment on: AF switching mode on, the radio continuously tests the signal strength of the AF frequency. Whenever the new AF frequency is stronger than the station that is currently tuned in, the radio switches to this frequency for a short time and the message "NEW FREQUENCY" is displayed for one to two seconds.

Segment flashing: AF switching mode is selected, but RDS information is not received yet.

When press the SEL button for a longer time to access the selection menu:

REG ON/ REG OFF, PI MUTE/PI SOUND, AF OFF/ AF ON.

Regional mode ON

PI CODE is checked when AF CHECK in progress

Regional mode OFF

PI CODE and COVERAGE AREA is not checked when AF check in progress.

7. APS/DISP Button

Automatic Memory Function:

In Radio mode, press and hold the APS/DISP button for about 2 seconds to active automatic station storage. The radio searches within the current frequency band, e.g. FM1, for the strongest station are then allocated to the corresponding storage locations. Then the station of the first storage location is set. If you would like to search for more stations in the FM band, press the BND button(5) in order to change to the FM2 or FM3 band. Press it longer again for about 2 seconds to continue search.

Program Scan Function:

In Radio mode, press it briefly to scan and play all the preset stations in order, and it will hold at each band for about 5 seconds . If you like one of them, press the PLAY/PAUSE button to stop the scanning .

Display ON/OFF Function:

In Disc mode, press the APS/DISP button briefly to turn off the display image (the monitor on the unit only) , the sound will stay on. (Press it again to resume the playback picture mode.)

You can press SEL knob briefly to select the "BG COLOR" by repeatedly pressing the SEL knob, then rotate the VOL +/- to select the background color among of the "AUTO, BG COLOR: 01..... BG COLOR: 11", in "AUTO" mode, the monitor of unit will change the background color automatically.

8. MUTE/PTY Button

Press this button to turn off the audio.

Press again to restore the volume to the prior level. You can also disable the MUTE function by turning the VOL +/- knob.

In Radio Mode, press this button and hold for a bout 2 seconds to select the PYT of the program type (examples of such types of program are : NEWS, POP.....)

BASIC OPERATION

9. CLK Button

Press it to change the display to clock display. Press it again to return to previous display. In clock display, press and hold for about 2 seconds until the hour display flashes, rotate VOL+/- button to adjust hours. Press it again, the minute display flashes, rotate VOL+/- button to adjust minutes.

10. ►/CH 1-6 (RADIO PRESET)

 
a). In Disc Playback Mode
Press this button to pause playback, press it again to resume playback.
B). In Radio Mode
Press this button repeatedly to preset station. With this system a total of 30 stations can be stored in the memory. Each band store up to six preset stations. The stations might be FM1, FM2, FM3, AM1 (MW1) and AM2 (Mw2) band. The operation as below:

- store in memory
press and hold the desired memory location for several seconds, the current listening station will be stored into the number location.
- retrieve a preset station
press it button repeatedly to retrieve a station which had been stored in the memory in advance the chosen number is shown on display.

11/12. ∇ / ▲ Buttons (tune, Seek, Track, Skip Up/down)

a) In DISC, USB mode:
if you wish to jump forwards or backwards press briefly the ▲ or ∇ button. (Note: during the DVD playback, press the ∇ button continually twice to skip back one track during playback.)
Press and hold up for more than two seconds to begin Fast Forward (or down for Fast Reverse) mode. Press the button again as needed, to cycle thru the range of available speeds.

DVD/VCD/CD/MP3:



b) In Radio Mode:
Press briefly the ∇ or ▲ button to manually tune the radio in single steps. Press and hold for two seconds to start the search for a radio station automatically.

13. MOD BUTTON

Press it repeatedly to select AUX IN, RADIO and DISC mode. During the USB playback, you can press STOP button and then press GOTO button to select the DISC mode.

14. ▲ (EJECT) Button

In DISC playing, Press the Open button (1) to flip down the front panel, then you can press the this button to eject the disc.

15. RESET Button

RESET button is placed on the housing and must be activated with either a ballpoint pen or thin metal object. The RESET button is to be activated for the following reasons:
A. Initial installation of the unit when all wiring is completed.
B. All the function buttons do not operate.
C. Error symbol on the display.

16. IR sensor

17. AUX INPUT JACK

For information about using an AUX IN audio source, please see page 15.

18. USB PORT

For information about connecting a USB device, please see page 17.

19. TFT Display (liquid crystal display)

The operation of the TFT, please see page 16.

BASIC OPERATION

ADDITIONAL FUNCTIONS ONLY PRESENT ON REMOTE CONTROL

1/TOP BUTTON

In VCD, CD or MP3 playback mode, pressing this button will select and play the first track or chapter on the disc. (Please note: this button does not have this function in DVD mode.)

REPEAT BUTTON

Pressing the repeat button repeatedly allows you to cycle through and select one of the REPEAT modes available as follows:

DVD:



VCD/CD/MP3:



- 1). Continuously repeat at the current chapter/track, when selected REP-ONE mode.
- 2). Select REP-ALL mode to continuously repeat all chapter/track on the current disc.
- 3). REPEAT feature does not support VCD2.0 (with PBC ON).

3/INT BUTTON

In CD playback mode, press this button to start the intro Scan Function. The player will play the first six seconds of a track and then skip to the next and do the same, and so on. If you hear a song you wish to continue listening to, press the button again. (Please note: this button does not have this function in MP3 playback mode.)

In VCD playback mode, press and hold this button to display the following menu:

```
SELECT DIGEST TYPE:
TRACK DIGEST
DISC INTERVAL
TRACK INTERVAL
```

Use the UP, DOWN, LEFT and RIGHT arrows on the remote to select an item, and press ENTER to confirm.

In DVD playback mode, press and hold this button to display the following menu:

```
SELECT DIGEST TYPE:
TITLE DIGEST
CHAPTER DIGEST
TITLE INTERVAL
CHAPTER INTERVAL
```

Use the UP, DOWN, LEFT and RIGHT arrows on the remote to select an item, and press ENTER to confirm.


4/RANDOM BUTTON

In Disc playback mode, press this button to begin playback of all the tracks on the disc in RANDOM order. To return to normal playback mode, press it again.

BASIC OPERATION

MP3/WMA/JPEG/MPEG4 PLAYBACK

When you insert a disc which contains MP3, WMA or JPEG files, the different file types are detected, and a list of the files are produced, as shown in the diagram below :

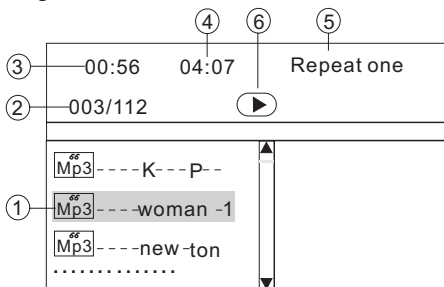

1. Current track(file)(highlighted bar)
2. Current track (file) number/total number of tracks(files) in the current folder.
3. Elapsed playing time of the current track(not available for JPEG disc)
4. total playing time.(not available for JPEG disc)
5. Selected playback mode
6. Operation mode icon. ▶ (Play), ■ (stop), || (pause), ►► (forward) ◀◀ (reverse).

Use ▲/▼/▶/◀ on the remote control to select the item or folder, and press the ENTER button to confirm , then select the desired the track to play .

Pressing **REPEAT** button repeatedly can select repeat play mode.

REP-ONE:

Play the same song over and over again.

REP ALL:

Play all songs on the disc, then repeats the entire disc over and over again .

SKIP AHEAD / BACK

In playback mode, press the ►► or ◀◀ buttons on remote to skip ahead or back one item in the list .


Fast Forward/ Fast Reverse Playback

In playback mode, press and hold (for More than two seconds) the ▲ / ▼ button on front panel to move to FAST FORWARD or FAST REVERSE play . You can also briefly press the ►► or ◀◀ button on remote control to accomplish this .

AUX OPERATION

On the front panel of the unit, there is an AUX IN jack, Following the diagram below to connect analogue replay devices. Use this jack to replay sound of other replay equipment such as DVD players, computers, etc. Via the loudspeakers.

- 1). Please connect the external device with stereo jack plug the Aux in socket .

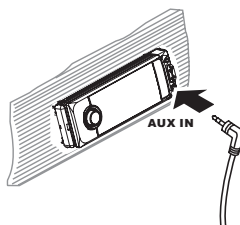

- 2). Press the MOD button to select the AUX IN connection .
- 3). Use the VOL+/- button you can change the volume level .

SCROLL CAPTION ADJUSTMENT

In Radio mode:

You can adjust the desired scroll caption, the method of the operation as follow:

- a). Press and hold the SETUP button (for about 2 seconds) on the remote control, the adjustment scroll bar will display on the screen .
- b). Use the VOL+/- to select among of the "A, B, CX, Y, Z, and blank ", and use the ▲ / ▼ button on front panel to ahead/back (proceed/cancel), and then press the setup button briefly to confirm . (Press it longer again to renew .)

BASIC OPERATION

VIDEO QUALITY ADJUSTMENT

In any video display mode, briefly press SEL knob repeatedly to cycle through and select the various audio and video parameters you may wish to adjust : (such as volume, bass, treble, balance, fader, color, bright, contrast, tint , BG color and Bluetooth . Then rotate the VOL + / - to adjust the selected mode. (The corresponding value will show on the display.)



The video adjustments are made using a scale of 0-32 .

Adjustable Items:

COLOR: 0 to 32

Adjust the color fo the picture-lighter or darker.

BRIGHT: 0 to 32

Adjust if the picture is too bright or too dark.

CONTRAST: 0 to 32

Adjust the contrast of the bright and dark portion.

TINT: 0 to 32

Adjust the tint if the human skin color is unnatural.

-Adjustable when “NTSC “ is selected for “NTSC/PAL “ .

Rear View Camera

When connecting the rear view camera. the mirror image of the rear view through the rear view camera is automatically displayed on the monitor when you change the gear to the back position. (The monitor on the unit only.)

NOTE(For The Brake Function)


if the parking brake is not engaged, “parking brake” flashes on the monitor, and no playback picture will be shown. Only the audio will be heard.

-This warning appears only when the parking brake wire is connected to the parking brake system built in the car.

ALTERNATE AUDIO/VIDEO SOURCE

On the front panel of the unit , there is an AUX IN jack, to connect analogue replay devices. Use this jack to replay sound of other replay equipment such as DVD players, computers, etc. Via the loudspeakers.


- 1). Please following the diagram below, connect the external device with stereo jack plug the AUX IN socket .
- 2). Press the MOD button to select the AUX IN connection.
- 3). Use the buttons on the external device to operate it .

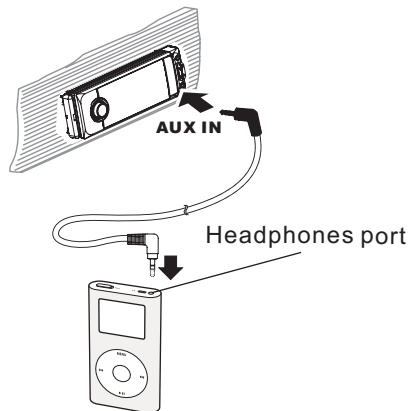

BASIC OPERATION

USB OPERATION

Following the diagram below, connect your USB device to the front panel USB port . If it is properly connected, the device will be mounted and start playing automatically.

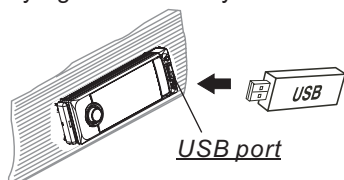

In USB Playback mode

Use the UP, DOWN, RIGHT or LEFT buttons to navigate to and select files to play, and press ENTER to begin playback (or viewing, in the case of JPEG files). To skip to the next or last track, press the ►► or ◀◀ buttons. Press the ►► or ◀◀ buttons for Fast Forward or Fast Reverse playback. **REPEAT** play modes are also available by repeatedly pushing **REPEAT** until the desired mode is found.

Changing From USB to DISC Playback Modes

If you are in USB Playback mode and wish to begin playback of a disc already in the player, press the STOP button once. Then press the GOTO button and the player will switch to DVD/VCD/CD/MP3 Playback mode.

Changing From DISC to USB Playback Modes

If the disc present in the player is an MP3 disc, press the STOP button once and press the GOTO button to USB playback. If the disc present in the player is an DVD or VCD or CD disc, press the STOP button twice and press the GOTO button to USB playback.

IMPORTANT NOTE:

to prevent damage to the USB device, do not remove or disconnect it during playback. it is also a good practice to remove the USB drive during disc playback.

On-Screen Display Function

Press the OSD button during playback to display information about the current disc . Pressing repeatedly will show you different data, as shown below . In this example, we are looking at the contents of a DVD disc .

A. Example for DVD:

a. Press OSD for the first time:

TITLE ELAPSED
TT 01/01 CH 01/38 0:02:06

b. Press OSD for the second time:

TITLE REMAIN
TT 01/01 CH 01/38 3:24:36

c. Press OSD for the third time:

CHAPTER ELAPSED
TT 01/01 CH 01/38 0:02:56

d. Press OSD for the fourth time:

CHAPTER REMAIN
TT 01/01 CH 01/38 0:04:32

e. Press OSD for the fifth time:
The message on the screen will be cleared.

B. Example for VCD/SVCD/CD:

a. Press OSD for the first time:

SINGLE ELAPSED
TRACK 01/16 00:49

b. Press OSD for the second time:

SINGLE REMAIN
TRACK 01/16 02:45

c. Press OSD for the third time:

TOTAL ELAPSED
TRACK 01/16 00:60

d. Press OSD for the fourth time:

TOTAL REMAIN
TRACK 01/16 78:46

BASIC OPERATION

e. Press **OSD** for the fifth time:

The message on the screen will be cleared for SVCD and VCD.

C. Example for MP3:

Each time OSD is pressed, the message displayed on screen changes as follows:




Multi-audio Language Function

For DVD:

Press **AUDIO** during playback. Each time the button is pressed, number of the audio soundtrack language changes on sequential order.

NOTES:

- The language number is different according to the disc.
- Some disc only contain one language soundtrack
- When no different language soundtrack are recorded,  will be displayed at screen left top corner.

For VCD/CD:

Press **AUDIO** during playback. It is possible to switch the sound between monaural and stereo sound.



Title Menu Function

For DVD:

If the DVD has multiple titles recorded on the disc. It can select preferred title from the title menu to start playback.

- Press **TITLE** during playback. The title menu is display.
- Press the cursor button shown in TV screen, select preferred title by the cursor button and confirmed by **ENTER** key.


For VCD:

Press **TITLE/PBC** button on the remote control while the disc is playing, you can switch between "PBC on" and "PBC off" mode.

Multi-subtitle Language Function (for DVD Only)

Press **SUBTITLE** during playback. Each time the button is pressed, number of the subtitle language changes in sequential order.


Notes:

- The language number is different according to the disc.
- Some discs only contain one subtitle language.
- When no different subtitle language are recorded,  will be displayed at screen left top corner.

Multi-angle Function (for DVD Only)

Press **ANGLE** during playback. Each time the button is pressed, number of the angle changes in sequential order.

Notes:

- The angle number is different according to the disc.
- The function only work for disc having scenes recorded at different angles.
- When no different angle are recorded,  will be displayed at screen left top corner.

SETUP

ABOUT SETUP MENUS


--- GENERAL PAGE ---

----General setup page----			
TV Display	LB		
Angle Mark	ON		
OSD Lang	ENG		
Spdif Output	SPDIF/RAW		
Captions	ON		
Screen Saver	ON		
Last Memory	ON		
Go To General Setup Page			

Press **SETUP** button on the remote control to display the SETUP menu , Select the preferred item by using the ► /◀ /▼/ ▲ buttons, and press the ENTER button to confirm.

When you press SETUP on the remote control, the SETUP screen will be displayed. At the top of the screen are four icons, representing:

 Overview Of The Main Menu



- (1). GENERAL SETUP
- (2). SPEAKER SETUP
- (3). DOLBY DIGITAL SETUP
- (4). PREFERENCES SETUP

Use the LEFT or RIGHT arrow button to select the desired setup menu and press ENTER to confirm.

In the following description, we begin with the GENERAL SETUP menu.

----General setup page----				
TV Display	Normal/PS			
Angle Mark	Normal/LB			
OSD Lang	Wide			
Spdif Output				
Captions				
Screen Saver				
Last Memory				
Set TV Display Mode				
Video Material	TV Screen			
	Normal	Pan Scan	Letter-box	Wide(16:9)
	4:3			
16:9				

1. TV DISPLAY SETUP

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

Normal/PS (For 4:3 TV)

Played back in the PAN & SCAN style. (If connected to wide-screen TV, the left and right edges are cut off.)





Normal/LB (For 4:3 TV)

Played back in letterbox style. (If connected to wide-screen TV, black bands appear at top and bottom of the screen.)


Wide (For 16:9 TV)





Select when a wide-screen TV set is connected.

SETUP

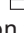   	
-----General setup page----	
TV Display	
Angle Mark	ON
OSD Lang	OFF
Spdif Output	
Captions	
Screen Saver	
Last Memory	
Set Angle Mark	

2. ANGLE MARK DISPLAY SETUP

If it is set to ON, when the multi-angle DVD disc is playing,  (the angle mark) will appear on the screen; if it is set to OFF, the mark will not appear.

   	
-----General setup page----	
TV Display	
Angle Mark	
Osd Lang	
Spdif Output	SPDIF OFF
Captions	SPDIF/RAW
Screen Saver	SPDIF/PCM
Last Memory	
Setup SPDIF	





4. SPDIF OUTPUT

This is to activate the audio output from SPDIF OFF mode to SPDIF/RAW mode to SPDIF/PCM mode.

   	
-----General setup page----	
TV Display	
Angle Mark	English
OSD Lang	French
Spdif Output	German
Captions	Spanish
Screen Saver	Italian
Last Memory	Portuguese
Set OSD Language	

3. OSD LANG TYPE SETUP


Select the preferred OSD language by using the ▲ / ▼ buttons.

   	
-----General setup page----	
TV Display	
Angle Mark	
OSD Lang	
Spdif Output	ON
Captions	OFF
Screen Saver	
Last Memory	
Closed Caption	

5. CAPTIONS SETUP


Activate the CAPTIONS feature by selecting ON. And release this feature by selecting OFF.

SETUP

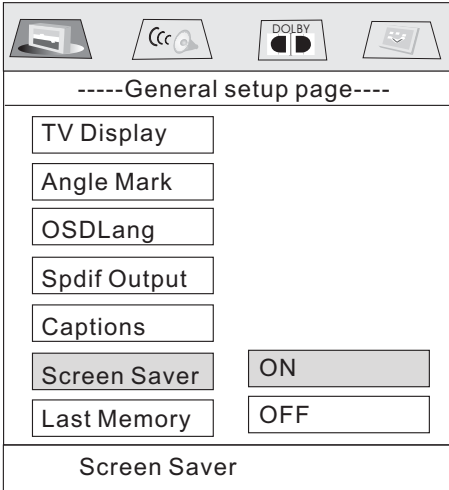

6. SCR SAVER SETUP

Select the SCR SAVER output ON/OFF.

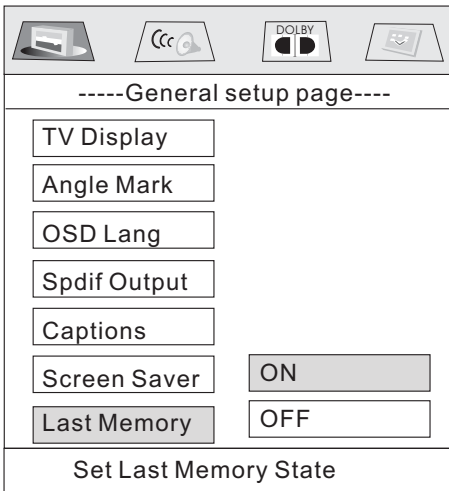


7. LAST MEMORY SETUP

Select the LAST MEMORY output ON/OFF.


SPEAKER SETUP

--- SPEAKER SETUP PAGE ---

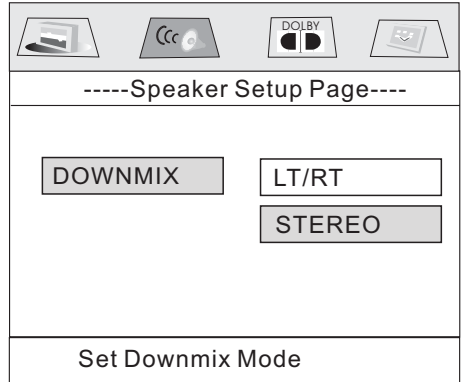

This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode. Select the preferred SPEAKER connection by using the cursor buttons. Select the LT/RT to activate the Dolby surround compatible output. Select the STEREO to activate simple stereo mode.

DOLBY DIGITAL SETUP

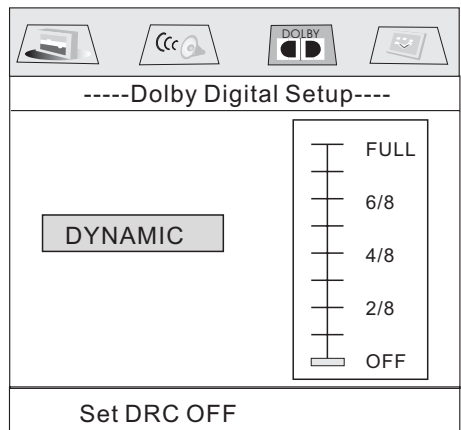





DYNAMIC RANGE CONTROL

Select DRC and adjust the dynamic range of a Doby Digital encoded program. There are 8 steps between full compression and off compression.

SETUP





PREFERENCES SETUP

--- PREFERENCES PAGE ---

			
-----Preference Page-----			
TV Type	PAL		
Audio	AUTO		
Subtitle	NTSC		
Disc Menu			
Parental			
Password			
Default			
Set TV standard			





1. TV TYPE SETUP

This player can play discs recorded in either PAL or NTSC format. Select NTSC format, when you connected to NTSC TV. Select PAL format, when you connected to PAL TV. Select AUTO format, the player TV output format will according to the DVD disc format.

			
-----Preference Page-----			
TV Type			
Audio	English		
Subtitle	French		
Disc Menu	Spanish		
Parental	German		
Password	Italian		
Default	Portuguese		
Preferred Audio Language			





2. AUDIO LANGUAGE SETUP

Select the preferred AUDIO sound-track by using the cursor buttons.

			
-----Preference Page-----			
TV Type	English		
Audio	French		
Subtitle	Spanish		
Disc Menu	German		
Parental	Italian		
Password	Portuguese		
Default	OFF		
Preferred Subtitle Language			

3. SUBTITLE LANGUAGE SETUP


Select the preferred SUBTITLE language by using the cursor buttons.

			
-----Preference Page-----			
TV Type			
Audio	English		
Subtitle	French		
Disc Menu	Spanish		
Parental	German		
Password	Italian		
Default	Portuguese		
Preferred Menu Language			

4. DISC MENU LANGUAGE SETUP

Select the preferred DISC MENU language by using the cursor buttons.

SETUP




-----Preference Page-----

TV Type	1KID SAF
Audio	2G
Subtitle	3PG
Disc Menu	4PG13
Parental	5PGR
Password	6R
Default	7NC 17
	8 ADULT
	OFF

Set Parental Control

5. PARENTAL

Select suitable parental guidance by the cursor buttons and conformed by pressing ENTER button.




-----Preference Page-----

TV Type	
Audio	
Subtitle	
Disc Menu	
Parental	
Password	CHANGE
Default	

Change Password

6. PASSWORD

Select the change and press ENTER button. Type the old password (The initial factory code is **1379**) and key in 4 characters password now you want to use, and retype again to confirm key in correctly.



-----Preference Page-----

TV Type	
Audio	
Subtitle	
Disc Menu	
Parental	
Password	
Default	RESET

Load Factory Setting

7. DEFAULTS

Select reset to become factory initial setting.

DEFAULTS TABLE

GENERAL SETUP	TV DISPLAY	NORMAL/LB
	ANGLE MARK	ON
	OSD LANGUAGE	ENGLISH
	SPDIF OUPUT	SPDIF/RAM
	CAPTIONS	ON
	SCR SAVER	ON
	LAST MEMORY	ON
SPEAKER SETUP	DOWNMIX	STEREO
DOLBY DIGITAL	DYNAMIC	OFF
PREFERENCES	TV TYPE	AUTO
	AUDIO	ENGLISH
	SUBTITLE	OFF
	DISC MENU	ENGLISH
	PARENTAL	8 ADULT
	PASSWORD	1379

SPECIFICATION

Supply Voltage:	12V DC (11V-15V)		
Current Consumption:	Less than 10 A		
Signal System:	Compositive video 1.0Vp-p 75Ω		
Discs Played:	(1)DVD-VIDEO Disc 5"(12 cm) single-sided, single-layer 5"(12 cm) single-sided, double-layer (2)Compact Disc (CD-DA, VIDEO CD) 5"(12cm) disc		
Audio Signal Output:	2ch&4ch line out		
Characteristics:	(1)Frequency Response 20 Hz - 20 KHz (2)S/N Ratio 90 dB (JIS) (3)Wow and Flutter Below measurable limits		
	For 3 Bands (Europe) FM	For 2 Bands (Europe) FM	For 2 Bands (U.S.A.) FM
Frequency Coverage:	87.5 to 108 MHz	87.5 to 108 MHz	87.5 to 107.9 MHz
IF:	10.7 MHz	10.7 MHz	10.7 MHz
Sensitivity (S/N = 30 dB):	15 dBu MW	15 dBu MW	15dBu AM
Frequency Coverage:	522 to 1620 KHz	522 to 1620 KHz	530 to 1710 KHz
IF:	450 KHz	450 KHz	450 KHz
Sensitivity (S/N = 20 dB):	40 dBu LW(Optional)	40 dBu	40 dBu
Frequency Coverage:	144 to 290 KHz		
IF:	450 KHz		
Sensitivity (S/N = 20 dB):	45 dBu		
Monitor Screen Size:	3.6 Inch Wide		
Number of Pixels:	320 X RGB X 240 pixels		
Color System:	NTSC/PAL		

NOTE: Specifications and design are subject to modification, without notice, due to improvements in technology.

TROUBLE SHOOTING

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

SYMPTOM	CAUSE	SOLUTION
No power	The car ignition switch is not on	If the power supply is properly connected to the car accessory terminal, switch the ignition key to "ACC"
	The fuse is blown	Replace the fuse
Disc can not be loaded or ejected	Presence of disc inside the player.	Remove the disc in the player, then put a new one
	Inserting the disc in reverse direction	Insert the compact disc with the label facing upward
	The disc is extremely dirty or defective	Clean the disc or try to play a new one
	Temperature inside the car is too high	Cool off or until the ambient temperature return to normal
Television/video image appears black-white	The color system is set incorrectly	Please switch to correct color system from menu
No television/video image appears	The unit is not connected to the parking brake detection switch	Make proper connection according to "wire connection"
	The parking brake is not engaged	For safety reasons no television /video images are displayed while the vehicle is moving. Engaging the parking brake will cause images to be displayed.
No color in picture	The disc format is not according to the TV-set used (PAL/NTSC)	Please the television mode of the choice accommodation
JPEG disc can not be played back	No JPEG files are recorded on the disc.	Change the disc
	JPEG files are not recorded in a compliant format	Change the disc Record JPEG files using a compliant application
The operation keys do not work	The built-in microcomputer is not operating properly due to noise	Press the RESET button. Front panel is not properly fixed into its place
The radio does not work	The antenna cable is not connected	Insert the antenna cable firmly
	The signals are too weak	Select a station manually