



TURN ON THE SYSTEM

- a. Turn vehicle ignition to ON or ACC.
- Press POWER on the front display or wireless remote to turn on each system.

FRONT CONTROL PANEL



PLAY A DVD OR CD

- a. Press and release the MODE button on the front control panel or the SOURCE button on the remote control until "DVD PLAYER" appears.
- Press on the bottom of the display to pivot and access the DVD/CD slot.
- c. With the label facing away from you, insert a disc into the disc slot. Do not force disc into slot. If a DVD/CD menu appears on the screen, press PLAY or ENTER as instructed on the screen. Most discs will load and play automaticaltely.
- d. To obtain the best viewing angle adjust the display angle as needed.





USE THE HEADPHONES

- a. Turn on by pressing the OFF/ON button, located on the ear piece. The power LED on the ear piece should illuminate if not, check that the batteries have a charge and are inserted properly.
- b. The headphones each have a two-position slide switch labeled "CH.A/CH.B." They must have a clear line of sight to the headrest monitor and must be switched to the designated A/B channel to operate properly.
- c. To adjust the volume use the knob on the ear piece.







PLAY INTERNAL VIDEO GAMES

- a. Press the MODE button on the front control panel (or SOURCE on the remote control) until "INTERNAL GAME" appears on the screen.
- Turn ON and set the game controller to channel "A" or channel "B" depending on which unit you will play on.
- c. Use the game controller's left and right arrow keys to choose a game.
- d. Press the **START** button on the game controller to choose the game.
- e. Use the "A & B" buttons for fire, jump or other action.
- f. Press RESET to return to the main menu.

Note: If the flashing LED stays illuminated, replace the batteries.



LISTEN OVER VEHICLE SPEAKERS

- a. Press the SPEAKER on the remote or on the front control panel."SPEAKER SOUND ON FM __._ PRESS LEFT OR RIGHT TO ADJUST" will appear on the screen as shown at right.
- b. Turn vehicle's radio on, and tune to the FM frequency displayed on screen. If radio interference is heard, try another frequency (see pages 13 & 15 in your Owner's Manual for more information).

