

FMWCC40

Portfolio Case

Installation Instructions

Stylistic LT

The Stylistic LT portfolio case is designed to provide a compact, elegant solution for using and transporting your pen tablet and wireless keyboard.

The portfolio case consists of three distinct storage areas: a pen tablet easel, a keyboard platform, and a storage pocket.

To open the portfolio, unzip the wraparound zipper and flip the portfolio open. Undo the Velcro® strap that is securing the flap, as shown in Figure 1. Extend the back of the easel so that it forms a stand for the pen tablet. (see Figure 2). The storage pocket remains accessible from the back of the easel.

Lift the nylon screen flap and lay it over the back of the easel to reveal the pen tablet lay out. At the bottom of the platform is a flexible ledge upon which the pen tablet sits.

Tuck your Stylistic LT behind the ledge lip and lay the system flat onto the tablet platform. It should be a snug fit. Make sure the infrared keyboard port can be seen through the port window on the ledge. When storing your pen tablet in the portfolio, lay the nylon flap over the screen to protect it from scratches. See Figure 3 for a fully assembled system in the portfolio.

To install the wireless keyboard, slide it under the two side brackets until it meets the back bracket.

To attach the shoulder strap, open the spring-loaded clips on the end of the strap, and attach them to the shoulder strap D-rings on either side of the portfolio case (see Figure 1).

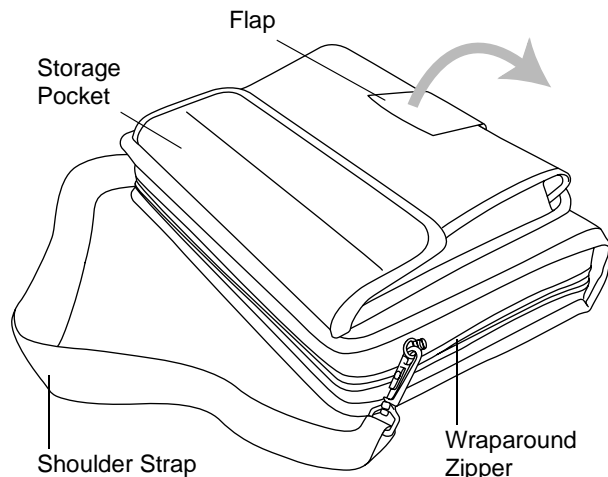


Figure 1. Closed Portfolio Case

The portfolio case is made of rugged materials, and is designed to withstand daily use. Treat the case as you would a briefcase or purse.

Occasionally, the portfolio may become soiled. To clean it, brush it with a short-bristled brush. If necessary, use a clean cloth and warm soapy water to wash the soiled area. Do not submerge the case in water, as it may become warped.

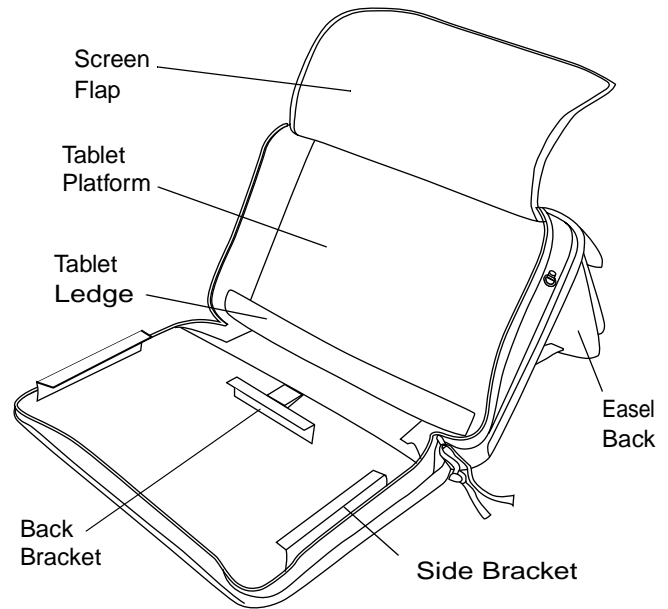


Figure 2. Open Portfolio Case



Figure 3. Assembled Stylistic LT in Portfolio Case