

Easel Case User's Guide

FPCCC49

I N S T R U C T I O N S

The easel case is designed to provide attractive protection for your Stylistic® Tablet PC.

It converts from a convenient carrying case into a sturdy desk stand quickly and easily.

You are advised to read this document before using the easel case with your Tablet PC.

Setting Up the Easel Case

When closed, the easel case looks like a portfolio with a flexible handle (*Figure 1*). The bottom of the front cover is attached to the inside of the case with a Velcro strip.

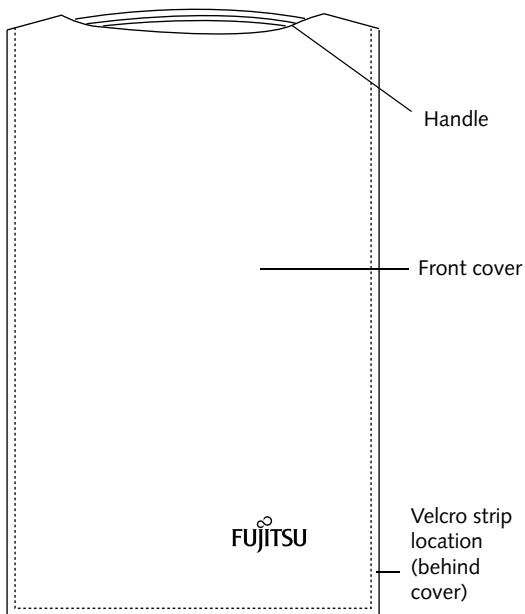


Figure 1. Easel Case - Front, closed

The rear of the easel case has a large flap that is hinged on the bottom and attached to the case on the top with a Velcro strip. This flap is used as the easel base. (*Figure 2*)

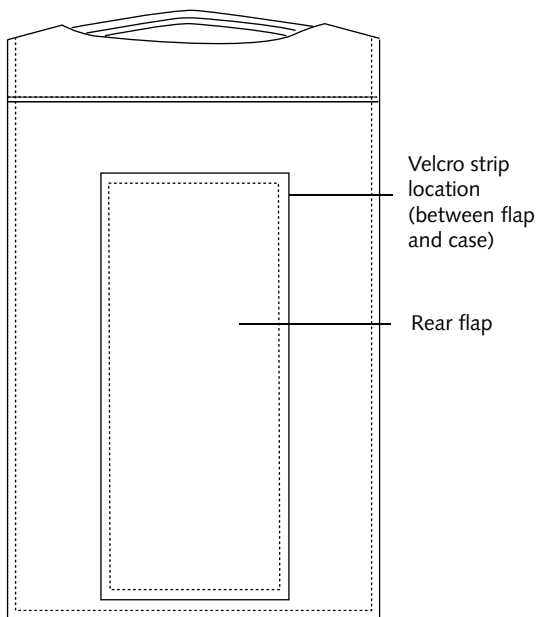


Figure 2. Easel Case - Back, closed

1. Separate the Velcro® strip from the bottom of the cover on the front. (*Figure 3*).

2. Separate the Velcro® strip from the top of the flap on the back.

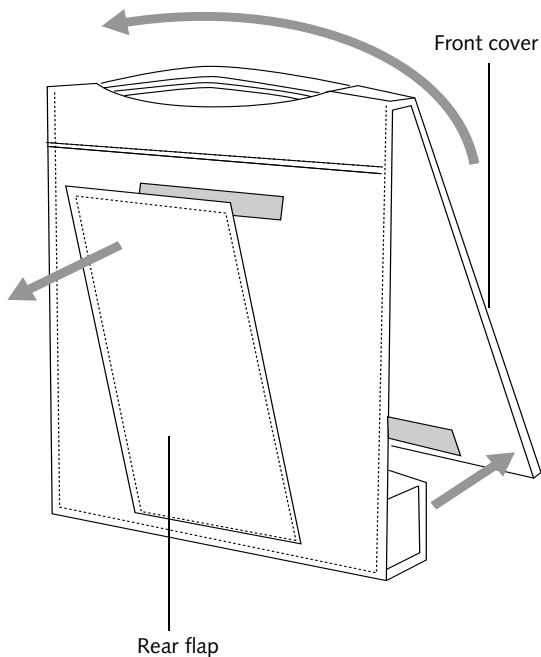


Figure 3. Opening the easel case

3. Lie the rear flap flat on the desktop, and flip the front cover over the top of the case.

4. Attach the Velcro strip from the rear flap to the strip on the front cover (*Figure 4*).

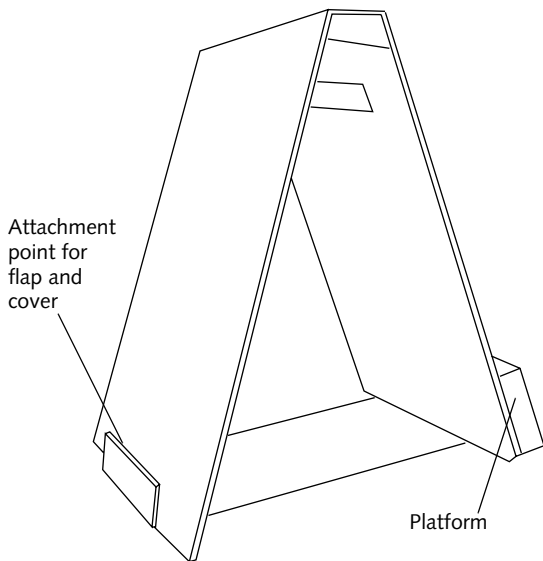


Figure 4. Attaching flap to cover

Inserting the Tablet PC

Before inserting the tablet into the case, determine whether you have a standard battery pack or a high-capacity battery pack installed in the tablet. If you have a high-capacity battery installed, reference “Using the easel case with a high-capacity battery” on page 7 before proceeding.

To install your Tablet PC into the easel case:

1. Insert the bottom of the tablet into the easel platform.
2. Slip the elastic retaining straps over the two top corners of the tablet. The system should fit snugly. (*Figure 5*)

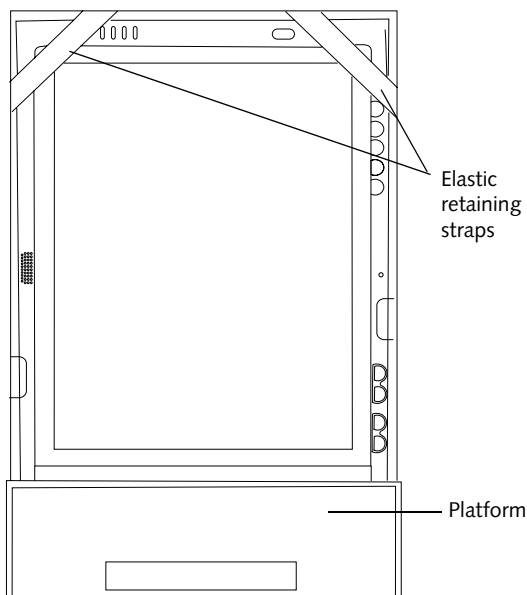


Figure 5. Front of easel case with system installed

3. Position your optional wireless keyboard in front of the tablet to use the system as a desktop system.

Using the easel case with a high-capacity battery

Tucked into the bottom of the platform you will find a padded spacer. This should be used whenever you have a standard battery installed in your system. When you install a high-capacity battery in your system, the spacer must be removed to accommodate the larger size.

To remove the spacer, simply grasp it by the sides and remove it from the platform. Be sure to keep it in a safe place for reinstallation.



1250 E. Arques Avenue (M/S 122),
Sunnyvale, California 94085

For more information, call
1-877-372-3473 or visit our Web site at:
us.fujitsu.com/computers

For technical support call:
1-800-8fujitsu (1-800-838-5487)
or e-mail us at: **8fujitsu@us.fujitsu.com**

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu, Ltd., and Stylistic is a registered trademark of Fujitsu Computer Systems Corporation. All other trademarks mentioned herein are the property of their respective owners.

Product description data represents Fujitsu design objectives and is provided for comparative purposes; actual results may vary based on a variety of factors. Specifications are subject to change without notice.

© 2004 Fujitsu Computer Systems Corporation. All rights reserved.

FPC58-1046-01