


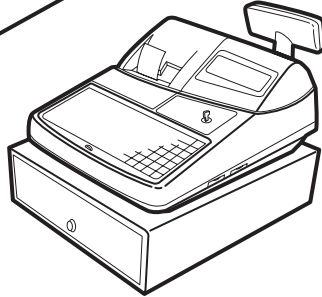

ER-A410



ER-A420

ELECTRONIC CASH REGISTER

ER-A410 MODEL ER-A420

SRV KEY : LKGIM7113RCZZ
 PRINTER : PR-45M II
 (U, A version)

CONTENTS

CHAPTER 1. SPECIFICATIONS	1
CHAPTER 2. OPTIONS	5
CHAPTER 3. MASTER RESET AND PROGRAM RESET.....	6
CHAPTER 4. HARDWARE DESCRIPTION	7
CHAPTER 5. DIAGNOSTIC PROGRAM	14
CHAPTER 6. IPL FROM EP-ROM	19
CHAPTER 7. CIRCUIT DIAGRAM AND PWB LAYOUT	20
PARTS GUIDE	

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

CAUTIONS

THERE IS A RISK OF EXPLOSION IF THE BATTERY
IS REPLACED BY AN INCORRECT TYPE.
PROPERLY DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS.

WHEN CONNECTING THE 40PIN FLAT CABLE
BETWEEN THE MAIN PWB
AND THE KEY PWB, CAREFULLY INSERT THE
CABLE INTO CONNECTOR OPENING.