
SHARP SERVICE MANUAL

CODE: 00ZXEA407SM/E

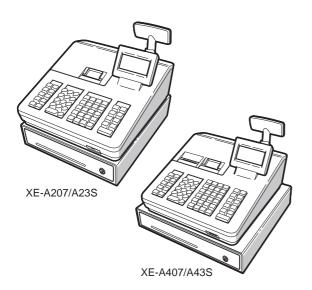

LEAD-FREE SOLDER MODEL

ELECTRONIC CASH REGISTER

XE-A207/A23S MODEL XE-A407/A43S

CONTENTS —	_
CHAPTER 1. SPECIFICATIONS	
CHAPTER 2. INSTALL	
CHAPTER 3. MASTER RESET	
CHAPTER 4. MAINTENANCE, DISASSEMBLY AND ASSEMBLY 4 - 1	
CHAPTER 5. DIAGNOSTIC PROGRAM DESCRIPTION 5 - 1	
CHAPTER 6. ELECTRICAL SECTION	

Parts marked with " Λ " are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

CONTENTS

	PTER 1. CIFICATIONS		_	TER 5. IOSTIC PROGRAM DESCRIPTION	
1	SPECIFICATIONS	1 - 1	1	DIAGNOSTIC PROGRAM START PROCEDURE	S 5
2	EXTERNAL VIEW	1 - 3	2	KEY	5
3	DISPLAYS	1 - 4	3	SENSOR	5
4	KEYBOARD	1 - 5	4	SD CARD	5
5	PRINTER	1 - 9	5	LED & BUZZER	5
6	CASH DRAWER	1 - 9	6	LCD	5
7	SD CARD	1 - 10	7	A/D	5
8	SUPPLIES	1 - 11	8	CLOCK	5 -
9	OPTION	1 - 11	9	DRAWER	5 -
			10	RS232C	5 -
CHAPTER 2.			11	PRINTER	5 -
INST	ALL		12	ROM	5 -
1	CHECK THE ACCESSORIES	2 - 1	13	RAM	5 -
2	INITIALIZING THE CASH REGISTER AN PROGRAMMING	ND BASIC 2 - 1	CHAP	 TER 6.	
3	INSTALLING THE BATTERIES	2 - 2	ELEC	TRICAL SECTION	
4	INSTALLING THE PAPER ROLL	2 - 3	1	HARDWARE SPECIFICATION OUTLINE	6
5	NOW, YOU ARE READY	2 - 5		BLOCK DIAGRAM	6
				HARDWARE CONFIGURATION DIAGRAM	6
CHAPTER 3. MASTER RESET			4	SIGNAL CONNECTION DIAGRAM	6
IVIAS	IER REJET		5	SETTING OF RS232 PORT (XE-A507 ONLY)	6
1	MASTER RESET	3 - 1	6	PWB LAYOUT	6
2	PROGRAM RESET	3 - 2			
	PTER 4. TENANCE, DISASSEMBLY AND A	ASSEMBLY			
1	ROLL PAPER REPLACEMENT	4 - 1			
2	PRINTER CLEANING	4 - 2			
3	BATTERY REPLACEMENT	4 - 3			
	DISASSEMBLY AND ASSEMBLY	4 - 4			

This is a "Table of Contents preview" for quality assurance

The full manual can be found at http://the-checkout-tech.com/estore/catalog/

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<u>http://the-checkout-tech.com</u>: the biggest supplier of cash register and scale manuals on the net