

# Radio Cassette Player

Operating Instructions  
WALKMAN タイコ・

WALKMAN est une marque déposée de Sony Corporation.

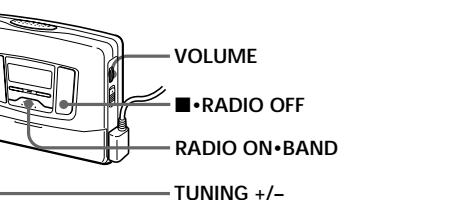
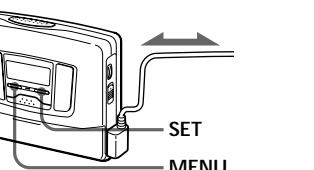
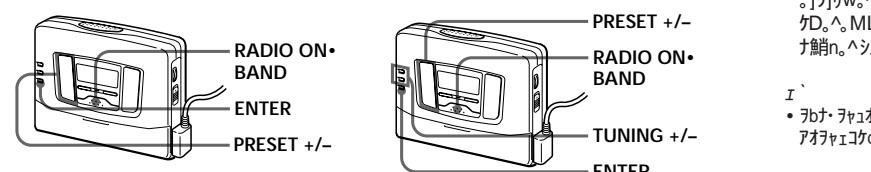
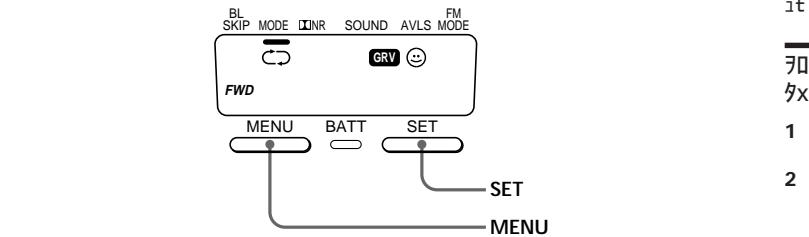
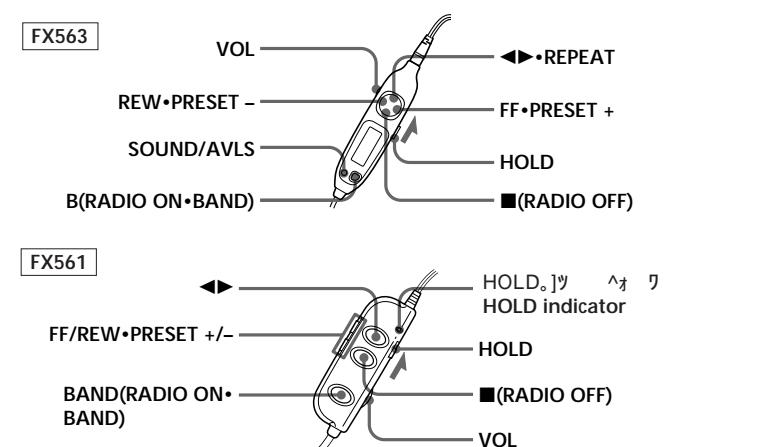
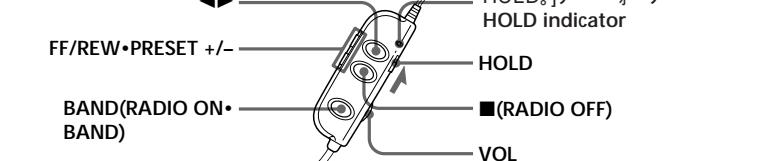
WM-FX563/FX561

Sony Corporation © 1998 Printed in Malaysia

WM-FX563 WM-FX561

The illustrations in this manual are for WM-FX563 and WM-FX561. Before you start reading, check your model number. WM-FX563 is the model used for illustration purposes. Any differences in operation are clearly indicated in the text, for example, "FX563 only".

WM-FX563 WM-FX561

**E****a****b****c****F****G****FX561**

ナ・**ラウジオ**。]・**メイク** ■④。^

- 1 ナ・**URADIO ON+BAND**。]・**ラウジオ**。  
■④。^
- 2 ナ・**スコ** **URADIO ON+BAND**。]・**ラウジオ**。  
■④。^
- 3 ナ・**U TUNING**。]・**ラウジオ**。  
■④。^

イ・**如レ・ギュラ**コイ・ホ  
。]・**メイク** ■④。^

- 1 ナ・**U TUNING**。]・**ラウジオ**。  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^
- 3 ナ・**U TUNING**。]・**ラウジオ**。  
■④。^

テ・**ラウジオ**  
ナ・**U ■RADIO OFF**]・**ラウジオ**。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

ケ・**FX563**  
ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^

- 1 ナ・**スコ** **U MENU**。]・**家調**。^  
■④。^
- 2 ナ・**スコ** **U TUNING**。]・**ラウジオ**。  
■④。^

## Listening to the Radio (see Fig. E-④)

- 1 Press **RADIO ON+BAND** to turn on the radio.
- 2 Press **RADIO ON+BAND** repeatedly to select AM or FM.
- 3 Press **TUNING+/-** to tune in to the desired station. If you keep pressing **TUNING+/-** for a few seconds, the Walkman will start tuning to the stations automatically.

## To turn off the radio

Press ■ **RADIO OFF**.

## To improve the broadcast reception

- For AM: The Walkman has a built-in antenna. Reorient the Walkman horizontally to obtain optimum AM reception.
- For FM (see Fig. E-⑥): Extend the cord of the remote control, the aerial. If the reception is still not good, press **MENU** repeatedly to set the cursor to FM MODE in the display. Then press **SET** to choose from MONO (monaural), LOCAL or none (stereo) mode for best reception.

**Notes**

- If you cannot complete step 3 or 4 while the indications are flashing, repeat from step 2.
- If you preset a new station to the same preset number, the previously stored station will be erased.

## To cancel the stored station

Follow the procedure above and in step 3, instead of tuning in to a station, press and hold **TUNING+/-** until "— — —" is displayed. Press **ENTER** while "— — —" is flashing.

**Note**

- Do not remove the power sources while listening to the radio, or the received stations may not be stored.

## Presetting Radio Stations

Once you store your favorite stations in memory, you can play them easily. You can preset up to 16 stations for FM and 8 stations for AM.

## Tuning in to and Storing Radio Stations Automatically (Auto-Memory Scanning function) (see Fig. E-④)

- 1 Press **RADIO ON+BAND** to turn on the radio.
- 2 Press **RADIO ON+BAND** repeatedly to select AM or FM.
- 3 Press **ENTER**. Hold until "A" appears in the display. The Walkman starts searching and storing stations.

4 After the preset number appears, tune into a station using **PRESET+/-**.

## Using Other Functions (see Fig. F)

### Emphasizing Bass

- 1 Press **MENU** repeatedly to set the cursor to **SOUND** in the display. Then, press **SET** to select the desired mode. With each press, the indications change as follows:

**MB**: emphasizes bass sound  
**GRV**: emphasizes deeper bass sound  
No message: off (normal)

### Using AVLS (FX563 only)

Press and hold **SOUND/AVLS** for two seconds or more. "⊖" appears in the display.

To cancel, press and hold **SOUND/AVLS** for two seconds or more again.

### Additional Information

## Precautions

### On batteries

Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.

### Protecting Your Hearing (AVLS)

When you set the AVLS (Automatic Volume Limiter System) function to active, the maximum volume is kept down to protect your ears.

- 1 Press **MENU** repeatedly to set the cursor to **AVLS** in the display. Then press **SET** to show "⊖".

### To clean the tape head and path

Use the cleaning cassette CHK-1 (not supplied) every 10 hours of use.

### Note

- Use only the recommended cleaning cassette.

### To clean the exterior

Use a soft cloth slightly moistened with water. Do not use alcohol, benzine or thinner.

### Note

- Clean the headphones/earphones plug periodically.

## Storing Radio Stations Manually (Manual-Memory function) (see Fig. E-④)

- 1 Turn on the radio and select the desired band.
- 2 Press **ENTER**. The frequency digits and a preset number flash in the display.
- 3 While the frequency digits and the preset number are flashing, tune in to a station you wish to store using **TUNING+/-**, and select a preset number using **PRESET+/-**.

## Using the Remote Control (see Fig. G)

All buttons on the remote control unless otherwise noted below function identically to those corresponding on the main unit.

- 1 While the frequency digits and the preset number are flashing, tune in to a station you wish to store using **TUNING+/-**, and select a preset number using **PRESET+/-**.
- 2 While the frequency digits and the preset number are flashing, press **ENTER**.
- 3 While the frequency digits and the preset number are flashing, tune in to a station you wish to store using **TUNING+/-**, and select a preset number using **PRESET+/-**.

### To lock the buttons

For FX563

- 1 Slide **HOLD** in the direction of the arrow.

When you press any button "Hold" appears in the display.

To unlock, slide **HOLD** in the opposite direction of the arrow.

### On tapes longer than 90 minutes

1 Slide **HOLD** in the direction of the arrow.

We do not recommend the use of tapes longer than 90 minutes except for a long continuous playback. They are very thin and tend to be stretched easily.

### On the remote control

For FX561

- 1 Slide **HOLD** so that the yellow mark appears.

To unlock, slide **HOLD** so that the yellow mark is hidden.

### On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings.

You should exercise extreme caution or discontinue use in potentially hazardous situations.

### Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

### Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

### Supplied accessories

Stereo earphones with remote control (1)