


Radio Cassette Player

Operating Instructions
Mode d'emploi
Bedienungsanleitung



WM-FX675

Sony Corporation ©2000 Printed in Malaysia

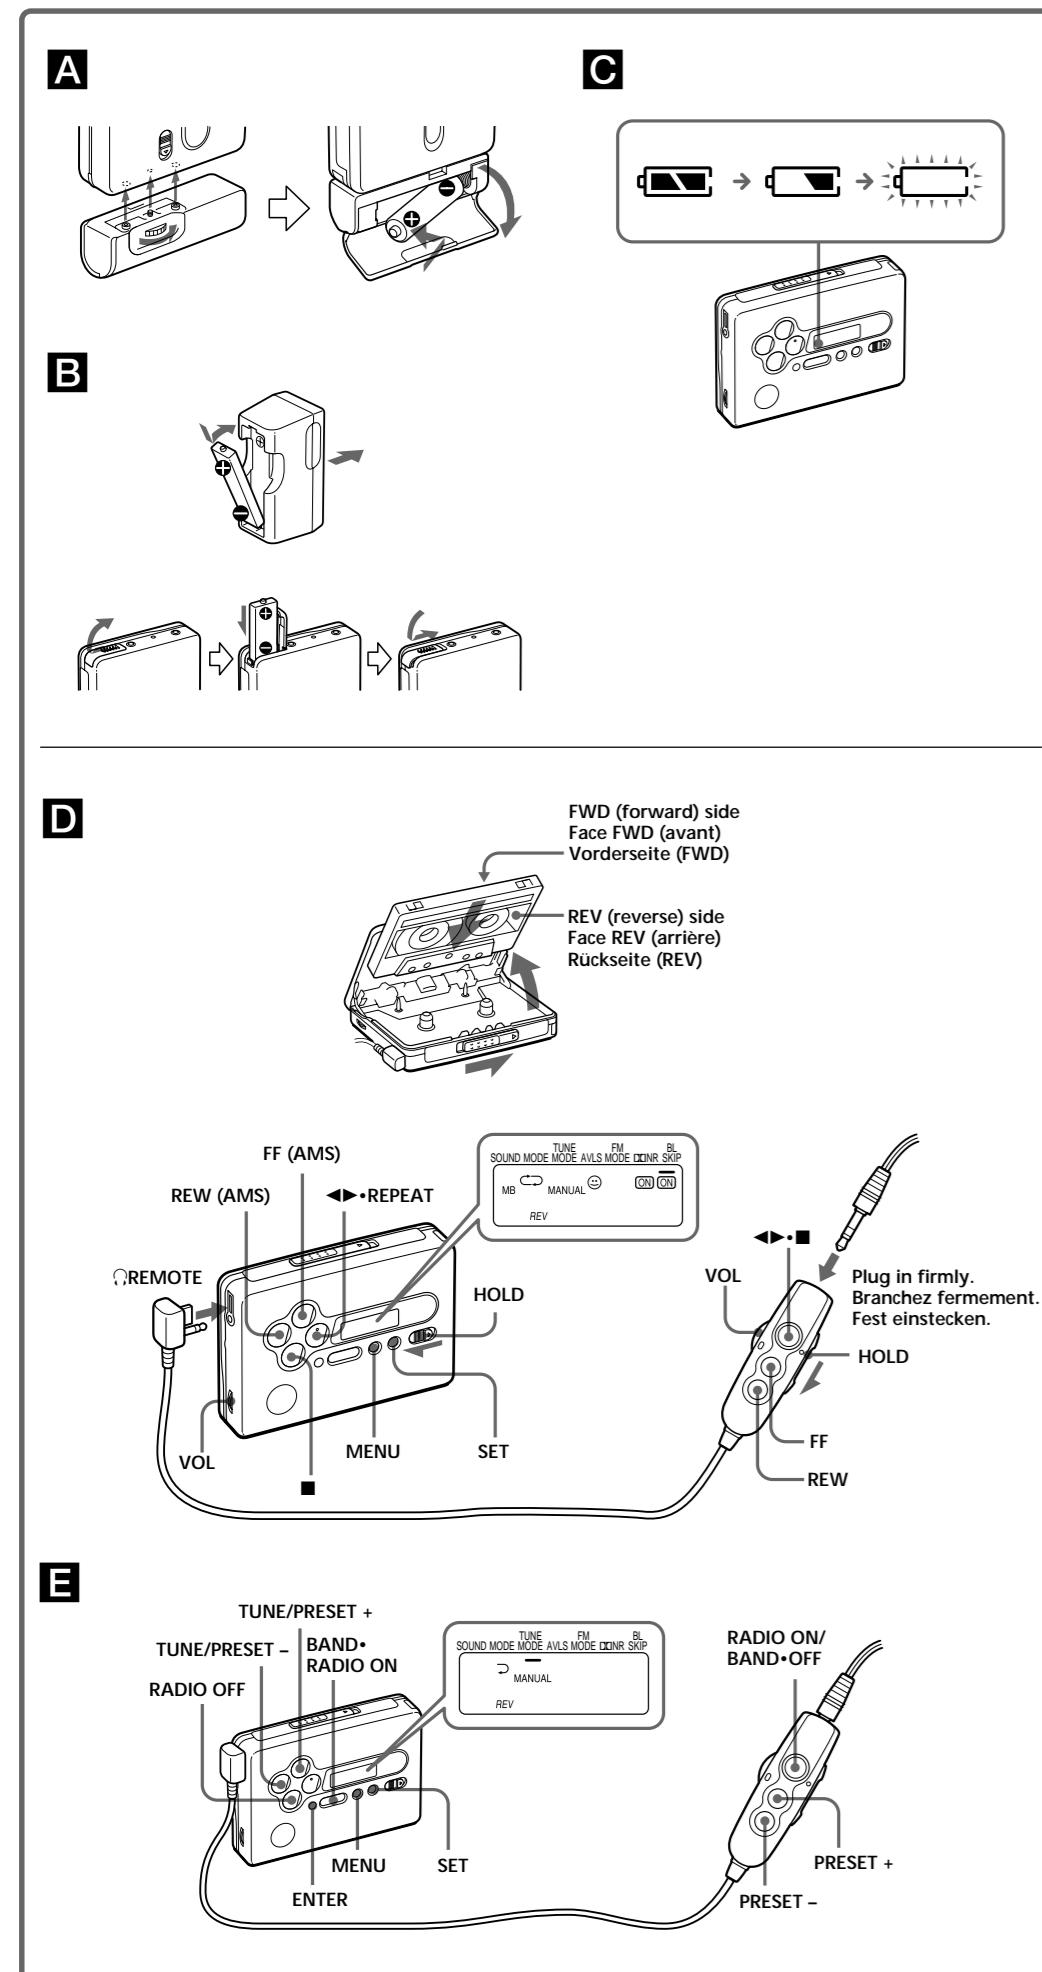

http://www.sony.net/

WALKMAN is a registered trademark of Sony Corporation.
WALKMAN est une marque déposée de Sony Corporation.

CE The CE mark on the unit is valid only for products marketed in the European Union.

CE Le symbole CE apposé sur l'appareil ne concerne que les produits commercialisés dans l'Union européenne.

CE Die CE-Markierung auf dem Gerät gilt nur für Produkte, die innerhalb der Europäischen Union verkauft werden.

English

WARNING

To prevent fire or shock hazard,
do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

Preparations

Prepare a dry battey (not supplied) or the rechargeable battery (supplied).

Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

- For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery B

1 Insert the supplied rechargeable battery (NC-6WM) into the charger with correct polarity. See the \oplus and \ominus indications on your charger.

2 Plug in the charger to the house current (mains). Full charging takes about 2.5 hours.

3 Insert the fully charged battery into the rechargeable battery compartment.

You can charge the battery about 300 times.

When to replace/charge the battery

Replace or charge the battery when "■" flashes in the display.

Playing a Tape D

1 Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.

2 Press $\blacktriangle\blacktriangleright$ (play)•■(stop) on the remote control and adjust the volume with VOL. (On the main unit, press $\blacktriangle\blacktriangleright$ •REPEAT.)

When adjusting the volume on the remote control Set the VOL control on the main unit to around 6.

When adjusting the volume on the main unit Set the VOL control on the remote control at maximum.

Operation on the remote control

To	Press
Switch playback to the other side	$\blacktriangle\blacktriangleright$ •■ for 2 seconds or more during playback
Stop playback	■(stop)
Repeat the current track (Repeat Single Track function)	$\blacktriangle\blacktriangleright$ •■ twice during playback To stop a single repeat, press it again.
To turn off the radio	Press RADIO OFF.

Operation on the main unit

To	Press
Switch playback to the other side	$\blacktriangle\blacktriangleright$ •■ during playback
Stop playback	■(stop)
Repeat the current track (Repeat Single Track function)	$\blacktriangle\blacktriangleright$ •■ for 2 seconds or more during playback To stop a single repeat, press it again.
To turn off the radio	Press RADIO ON/BAND•OFF.

Other tape operations

To	Press
Fast forward*	FF
Rewind*	REW
Play the next track/succeeding 9 tracks from the beginning (AMS*)	FF once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	REW once/repeatedly during playback

* If $\blacktriangle\blacktriangleright$ •■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.
**Automatic Music Sensor

To	Press
Fast forward*	FF
Rewind*	REW
Play the next track/succeeding 9 tracks from the beginning (AMS*)	FF once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	REW once/repeatedly during playback

* If $\blacktriangle\blacktriangleright$ •■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.
**Automatic Music Sensor

Français

AVERTISSEMENT

Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas exposer l'appareil à la pluie ou à l'humidité.

A une pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

N'installez pas l'appareil dans un espace confiné comme dans une bibliothèque ou un meuble encastre.

- Afin d'éviter tout risque d'incendie, ne pas couvrir les ailettes de ventilation de cet appareil avec des journaux, des nappes, des rideaux, etc. Ne pas poser de bougies allumées sur l'appareil.
- Afin d'éviter tout risque d'incendie et d'électrocution, ne pas poser d'objets remplis de liquide, vases ou autre, sur l'appareil.

- Certains pays peuvent appliquer des dispositions différentes pour l'élimination des piles qui alimentent ce produit. Veuillez consulter vos autorités locales.
- Si vous appuyez sur $\blacktriangle\blacktriangleright$ •■ de la télécommande pendant l'avance rapide ou le rembobinage, la lecture commencera.
- **Recherche automatique du début des plages

Réglage du mode de lecture
Pour sélectionner le sens de défilement de la bande

Appuyez de façon répétée sur MENU pour régler le curseur sur MODE. Appuyez ensuite sur SET pour sélectionner le mode souhaité.

Préparation

Préparez une pile sèche (non fournie) ou la batterie rechargeable (fournie).

Pile sèche A

Fixez l'étui de pile fourni et insérez une pile R6 (taille AA) en tenant compte de la polarité.

Remarque

- Il est conseillé d'utiliser une pile alcaline Sony pour des performances optimales.

Pile rechargeable B

1 Insérez la pile rechargeable fournie (NC-6WM) dans le chargeur en tenant compte de la polarité. Reportez-vous aux indications \oplus et \ominus de votre chargeur.

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81


82

83


84

85


E

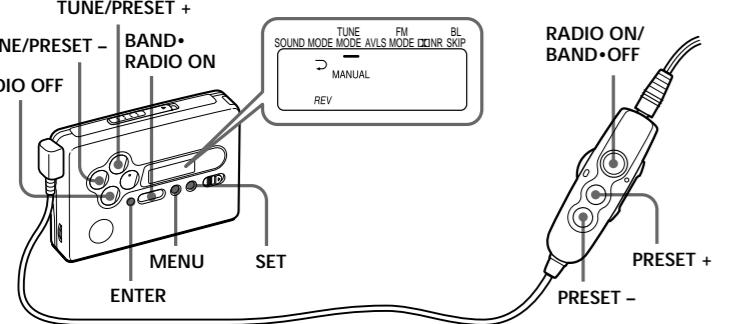

F

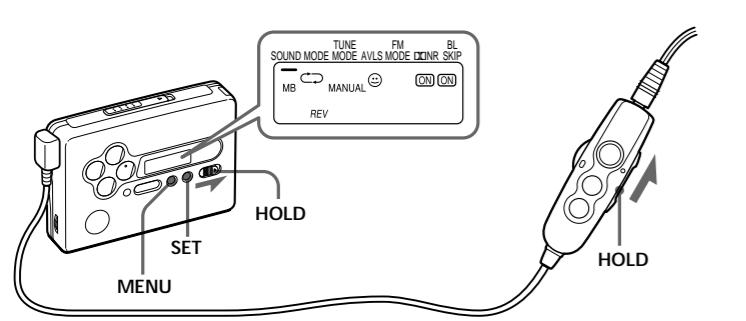

G

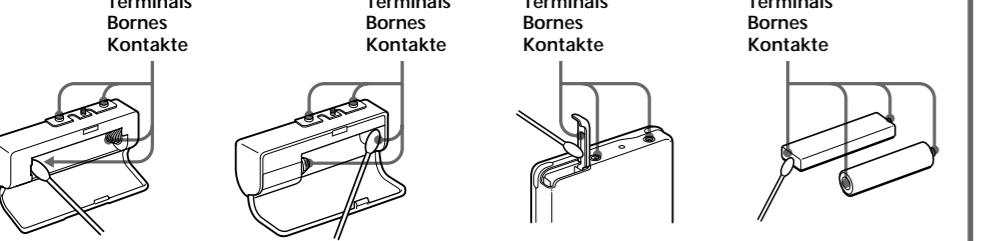

Specifications

Radio section	
Frequency range	FM: 87.5 - 108 MHz
	AM: 531 - 1 602 kHz
Tape section	
Frequency response (Dolby NR off)	Playback: 40 - 15 000 Hz
Output	Headphones (REMOTE) jack
	Headphone impedance 8 - 300 Ω
General	
Power requirements	1.5 V
	Rechargeable battery
	One R6 (size AA) battery
Dimensions (w/h/d)	Approx. 108.4 × 77.7 × 23.9 mm (4 1/4 × 3 1/4 × 3 1/2 inches)
Mass	Approx. 145 g (5.2 oz)
Supplied accessories	- Battery case (1) - Stereo headphones or earphones with remote control (1) - Battery charger (1) - Rechargeable battery (NC-6WM, 1.2 V, 600 mAh, Ni-Cd) (1) - Rechargeable battery carrying case (1) - Carrying pouch (1)
Design and specifications are subject to change without notice.	

Spécifications

Section Radio	
Plage de fréquences	FM: 87.5 - 108 MHz
	AM: 531 - 1 602 kHz
Section cassette	
Réponse en fréquence (Dolby hors service)	Lecture: 40 - 15 000 Hz
Sortie	Ecouteurs (prise (REMOTE)) Impédance de charge de 8 - 300 Ω
Généralités	
Alimentation	1.5 V
Pile rechargeable	Une pile R6 (format AA)
Dimensions hors tout (l/h/p)	Env. 108.4 × 77.7 × 23.9 mm (4 1/4 × 3 1/4 × 3 1/2 po.)
Poids	Env. 145 g (5.2 on.)
Accessoires fournis	- Etui de pile (1) - Ecouteurs et casque stéréo avec télécommande (1) - Chargeur de pile (1) - Pile rechargeable (NC-6WM, 1.2 V, 600 mAh, Ni-Cd) (1) - Etui de transport de pile rechargeable (1) - Poche de transport (1)

Pour les utilisateurs en France
En cas de remplacement des casques/écouteurs, référez-vous au modèle de casques/écouteurs adaptés à votre appareil et indiqués ci-dessous.
MDR-E805SP

La conception et les spécifications peuvent être modifiées sans préavis.

English

Presetting Radio Stations

E

You can store radio stations into the unit's memory. You can preset up to 32 stations —12 each for FM1 and FM2 and 8 for AM.

Tuning in to and Storing Radio Stations Automatically (Auto-Memory Scanning function)

- 1 Press BAND • RADIO ON to turn on the radio.
- 2 Press BAND • RADIO ON repeatedly to select AM, FM1, or FM2.
- 3 Press ENTER until "A" appears in the display. The Walkman starts searching and storing stations.

- Then the preset number appears.
Note
• Do not remove the power sources until all the stations are stored.

Storing Radio Stations Manually (Manual-Memory function)

You can preset the stations in any order.

- 1 Press BAND • RADIO ON to turn on the radio.
- 2 Press BAND • RADIO ON repeatedly to select AM, FM1, or FM2.
- 3 Press ENTER.
- The frequency digits will flash in the display.
- 4 Press TUNE/PRESET + or - repeatedly to tune in to the desired station and press ENTER. The preset number will flash in the display.
- 5 Press TUNE/PRESET + or - repeatedly to select the desired preset number and press ENTER. The station is preset to the number of your choice.

- Notes
• If you cannot complete step 4 or 5 while the indications are flashing, repeat from step 3.
• If you preset a new station to the same preset number, the previously stored station will be erased.

To cancel the stored station

Follow the procedure above and in step 4, instead of tuning in to a station, press and hold TUNE/PRESET + or - until "— —" is displayed. Press ENTER while "— —" is flashing. The preset number will flash in the display.

Press TUNE/PRESET + or - repeatedly to select the preset number you want to cancel and press ENTER.

Using Other Functions

Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the Walkman or the remote control.

Emphasizing Sound

- 1 Press MENU repeatedly to set the cursor in the display to SOUND.
- 2 Press SET repeatedly to select the sound emphasis of your choice.
- RV: Sound Revitalizer.
Emphasizes treble sound.
MB: Mega Bass.
Emphasizes bass sound (moderate effect).
GRV: Groove.
Emphasizes bass sound (strong effect).
no message : normal (no effect).

Note

- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

Press MENU repeatedly to set the cursor to AVLS in the display. Then press SET to show "◎".

To cancel the AVLS function

Press SET so that "◎" disappears.

Remark

- The AVLS setting will be canceled when you replace the battery.

F

Precautions

On rechargeable battery and charger

- Remove the charger unit from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The battery charger and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied battery charger to charge the supplied rechargeable battery.
- Be sure to short circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys, rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.

On batteries

- Do not charge a dry battery.
- Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you do not use the Walkman for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

On the unit

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- If the unit has not been used for long period of time, set it in the playback mode and warm it up for a few minutes before you start using again.

On tapes longer than 90 minutes

We do not recommend the use of tapes longer than 90 minutes except for a long continuous recording or playback. They are very thin and tend to be stretched easily.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Road safety
Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings.

You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On maintenance

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated. ☐

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use