

Radio Cassette Player

Operating Instructions

Istruzioni per l'uso

xxxx


 
WALKMAN

WALKMAN is a registered trademark of Sony Corporation.
WALKMAN è un marchio registrato di Sony Corporation.

xxxx

WM-SP1

Sony Corporation ©1998 Printed in China

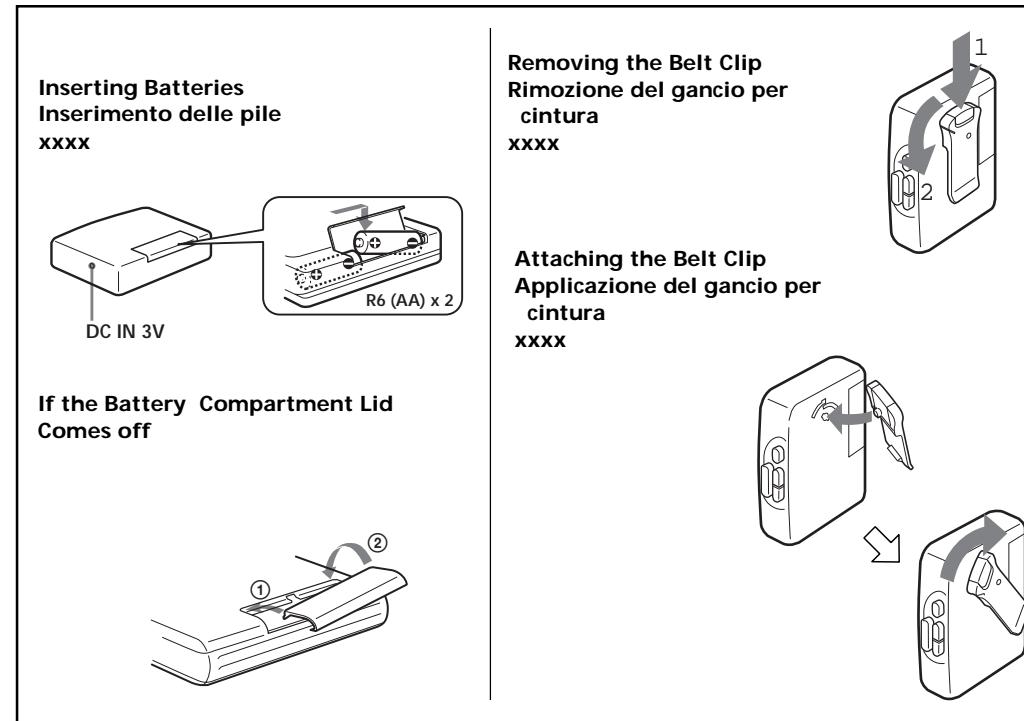

English

When Playing Cassettes

- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the tape is playing but no sound comes out, the batteries may be weak. Replace all batteries with new ones.
- If your Walkman has not been used for a long time, run the Walkman for a few minutes before inserting a cassette.
- Do not open the cassette holder while the tape is running.

When Listening to the Radio

If you have inserted a cassette with a metallic shell or label, and interference in radio reception occurs, remove the cassette.

Handling Your Walkman

- Do not expose the Walkman to extreme temperatures, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave the Walkman in a car parked in the sun.
- Do not wind the headphones/earphones cord around the Walkman. The buttons may be kept pressed, causing unnecessary battery usage.

When Using Headphones/earphones

Wear the "L" marked side to the left ear and the "R" marked side to the right ear.

Italiano

Quando si riproducono cassette

- Non usare cassette di durata superiore a 90 minuti se non per riproduzioni lunghe e continue.
- Se il nastro sta riproducendo ma non si sente nessun suono, significa che le pile sono scariche. Sostituire tutte le pile con altre nuove.
- Se il Walkman non è stato usato per un lungo periodo, regolarlo in modo di riproduzione per alcuni minuti prima di inserire la cassetta.
- Non aprire il comparto cassetta mentre il nastro sta scorrendo.

Quando si ascolta la radio


Se è inserita una cassetta con un involucro metallico o etichette metalliche e ci sono interferenze nella ricezione radio, estrarre la cassetta.

Uso del Walkman

- Evitare di esporre il Walkman a temperature eccessivamente alte o basse, luce solare diretta, umidità, sabbia, polvere o scosse meccaniche. Non lasciare il Walkman all'interno di un'automobile parcheggiata al sole.
- Evitare di avvolgere il cavo delle cuffie/auricolari intorno al Walkman. I tasti potrebbero essere premuti causando un inutile consumo delle pile.

Quando si usano cuffie/auricolari

Portare quello marcato con una "L" all'orecchio sinistro e quello marcato con una "R" all'orecchio destro.

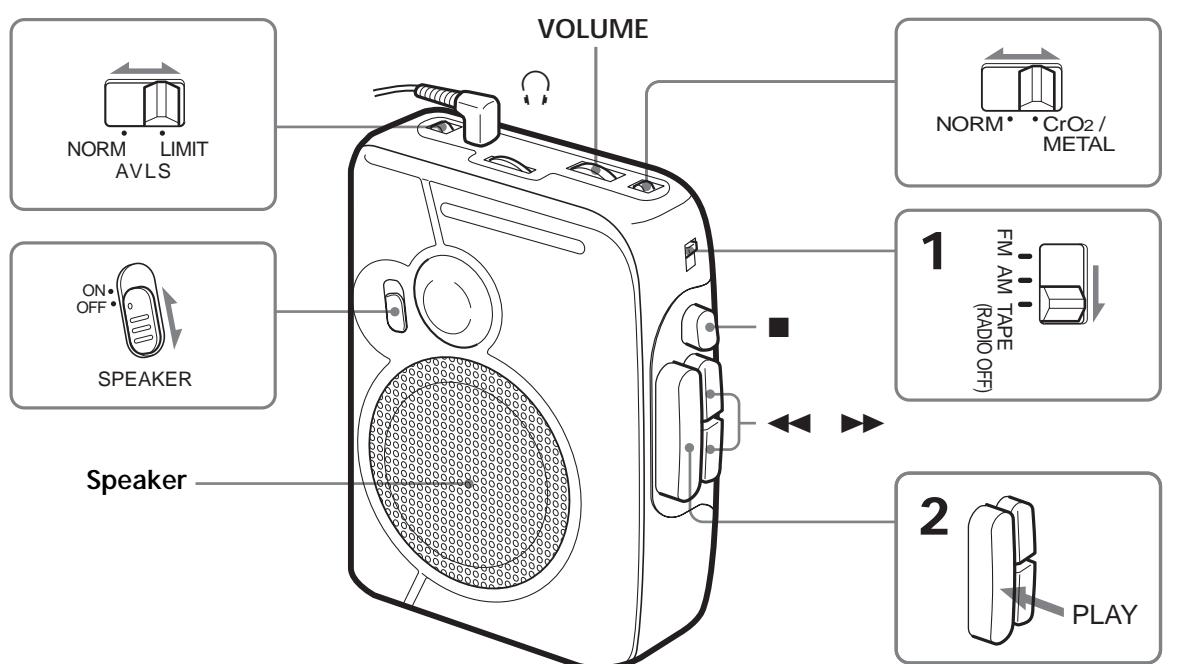

Wind rapidly.
Avvolgimento rapido.
xxxx

Stop.
Arresto.
xxxx

To use the speaker
Set SPEAKER to ON. The sound will play from the speaker and no sound from the headphones/earphones.
When the speaker is in use, the AVLS function will not operate.

English

When Playing Cassettes

- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the tape is playing but no sound comes out, the batteries may be weak. Replace all batteries with new ones.
- If your Walkman has not been used for a long time, run the Walkman for a few minutes before inserting a cassette.
- Do not open the cassette holder while the tape is running.

When Listening to the Radio

If you have inserted a cassette with a metallic shell or label, and interference in radio reception occurs, remove the cassette.

When Using MEGA BASS (FX163)


If the AVLS switch is set to LIMIT, the MEGA BASS effect is reduced.

Handling Your Walkman

- Do not expose the Walkman to extreme temperatures, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave the Walkman in a car parked in the sun.
- Do not wind the headphones/earphones cord around the Walkman. The buttons may be kept pressed, causing unnecessary battery usage.

When using headphones/earphones

Wear the "L" marked side to the left ear and the "R" marked side to the right ear.

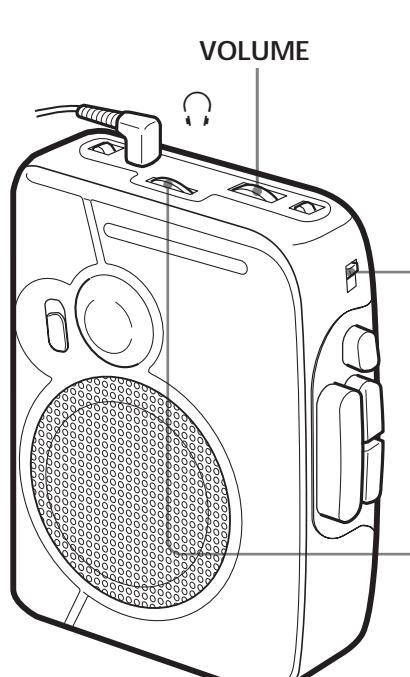

Listening to the radio
Since the headphones/earphones cord serves as an FM antenna, connect the headphones/earphones even when using the speaker.



Improve radio reception/Per migliorare la ricezione radio/xxxx

FM

Extend the headphones/earphones cord and adjust the FM ST/MONO or DX/LOCAL switch.
Estendere il filo delle cuffie e regolare il selettore FM ST/MONO.
xxxx

AM

Rotate the Walkman.
Ruotare il Walkman.
xxxx

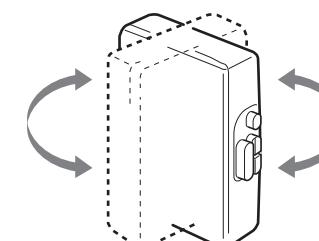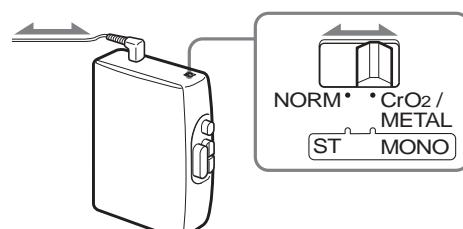

Using the AVLS Feature

The AVLS switch allows you to limit the maximum volume of your Walkman personal stereo without degrading the sound quality.

- When the AVLS switch is set to LIMIT, the volume will be kept at a moderate level without the degradation of the sound quality, even if you attempt to turn the volume up higher.
- When the AVLS switch is set to LIMIT, the playback sound may be distorted or unstable according to the music (especially bass boosted part). If this happens, turn down the volume.
- When the AVLS switch is set to NORM, you will be able to enjoy the full volume capability of your Walkman personal stereo.

Using the AVLS feature

The AVLS switch allows you to limit the maximum volume of your Walkman personal stereo without degrading the sound quality.


- When the AVLS switch is set to LIMIT, the volume will be kept at a moderate level without the degradation of the sound quality, even if you attempt to turn the volume up higher.
- When the AVLS switch is set to LIMIT, the playback sound may be distorted or unstable according to the music (especially bass boosted part). If this happens, turn down the volume.
- When the AVLS switch is set to NORM, you will be able to enjoy the full volume capability of your Walkman personal stereo.

English

Notes on Care and Use

Cleaning the Walkman

- Prolonged use may contaminate the tape head. If sound drop-out or excessive noise occurs, clean the head and tape path with alcohol.
- Clean the headphones/earphones plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

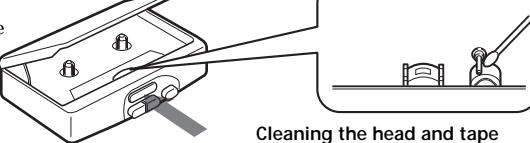

Cleaning the head and tape path

About headphones/earphones

Road safety

Do not use headphones/earphone while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

About batteries

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

About external power

You can connect the following external power sources through the DC IN 3 V jack located on the bottom. (When you plug a cord into the DC IN 3 V jack, the internal batteries are automatically bypassed.)

- House current using an AC-E30HG AC power adaptor

Battery life (approximate hours) (EIAJ*)	
Sony Alkaline LR6 (SG)	Sony R6P (SR)
16 hrs. (playback) 48 hrs. (radio)	4.5 hrs. (playback) 16 hrs. (radio)

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

Specifications

Radio FM: 87.6 - 108 MHz (North, Central, and South America)

87.5 - 108 MHz (Italy and Saudi Arabia)

65 - 107.9 MHz (Eastern Europe)

87.6 - 108 MHz (Other countries)

AM: 530 - 1,710 kHz (North, Central, and South America)

526.5 - 1,606.5 kHz (Italy and Saudi Arabia)

530 - 1,710 kHz (Other countries)

Power requirements

- 3 V DC batteries R6 (AA) x 2
- External DC 3 V power sources

Dimensions

94.2 x 119.0 x 36.0 mm (w/h/d)
(3 3/4 x 4 3/4 x 1 7/16 in) incl. projecting parts

Notes on Care and Use

Cleaning the Walkman

- Prolonged use may contaminate the tape head. If sound drop-out or excessive noise occurs, clean the head and tape path with alcohol.
- Clean the headphones/earphones plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

About headphones/earphones

Road safety

Do not use headphones/earphone while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

About batteries

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

About external power

You can connect the following external power sources through the DC IN 3 V jack located on the bottom. (When you plug a cord into the DC IN 3 V jack, the internal batteries are automatically bypassed.)

- House current using an AC-E30HG AC power adaptor

Battery life (approximate hours) (EIAJ*)	
Sony Alkaline LR6 (SG)	Sony R6P (SR)
16 hrs. (playback) 48 hrs. (radio)	4.5 hrs. (playback) 16 hrs. (radio)

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

Specifications

Radio FM: 87.6 - 108 MHz (North, Central, and South America)

87.5 - 108 MHz (Italy and Saudi Arabia)

65 - 107.9 MHz (Eastern Europe)

87.6 - 108 MHz (Other countries)

AM: 530 - 1,710 kHz (North, Central, and South America)

526.5 - 1,606.5 kHz (Italy and Saudi Arabia)

530 - 1,710 kHz (Other countries)

Power requirements

- 3 V DC batteries R6 (AA) x 2
- External DC 3 V power sources

Dimensions

94.2 x 119.0 x 36.0 mm (w/h/d)
(3 3/4 x 4 3/4 x 1 7/16 in) incl. projecting parts

Notes on Care and Use

Cleaning the Walkman

- Prolonged use may contaminate the tape head. If sound drop-out or excessive noise occurs, clean the head and tape path with alcohol.
- Clean the headphones/earphones plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

About headphones/earphones

Road safety

Do not use headphones/earphone while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

About batteries

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

About external power

You can connect the following external power sources through the DC IN 3 V jack located on the bottom. (When you plug a cord into the DC IN 3 V jack, the internal batteries are automatically bypassed.)

- House current using an AC-E30HG AC power adaptor

Battery life (approximate hours) (EIAJ*)	
Sony Alkaline LR6 (SG)	Sony R6P (SR)
16 hrs. (playback) 48 hrs. (radio)	4.5 hrs. (playback) 16 hrs. (radio)

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

Specifications

Radio FM: 87.6 - 108 MHz (North, Central, and South America)

87.5 - 108 MHz (Italy and Saudi Arabia)

65 - 107.9 MHz (Eastern Europe)

87.6 - 108 MHz (Other countries)

AM: 530 - 1,710 kHz (North, Central, and South America)

526.5 - 1,606.5 kHz (Italy and Saudi Arabia)

530 - 1,710 kHz (Other countries)

Power requirements

- 3 V DC batteries R6 (AA) x 2
- External DC 3 V power sources

Dimensions

94.2 x 119.0 x 36.0 mm (w/h/d)
(3 3/4 x 4 3/4 x 1 7/16 in) incl. projecting parts

Notes on Care and Use

Cleaning the Walkman

- Prolonged use may contaminate the tape head. If sound drop-out or excessive noise occurs, clean the head and tape path with alcohol.
- Clean the headphones/earphones plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

About headphones/earphones

Road safety

Do not use headphones/earphone while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

About batteries

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

About external power

You can connect the following external power sources through the DC IN 3 V jack located on the bottom. (When you plug a cord into the DC IN 3 V jack, the internal batteries are automatically bypassed.)

- House current using an AC-E30HG AC power adaptor

Battery life (approximate hours) (EIAJ*)	
Sony Alkaline LR6 (SG)	Sony R6P (SR)
16 hrs. (playback) 48 hrs. (radio)	4.5 hrs. (playback) 16 hrs. (radio)

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

Specifications

Radio FM: 87.6 - 108 MHz (North, Central, and South America)

87.5 - 108 MHz (Italy and Saudi Arabia)

65 - 107.9 MHz (Eastern Europe)

87.6 - 108 MHz (Other countries)

AM: 530 - 1,710 kHz (North, Central, and South America)

526.5 - 1,606.5 kHz (Italy and Saudi Arabia)

530 - 1,710 kHz (Other countries)

Power requirements

- 3 V DC batteries R6 (AA) x 2
- External DC 3 V power sources

Dimensions

94.2 x 119.0 x 36.0 mm (w/h/d)
(3 3/4 x 4 3/4 x 1 7/16 in) incl. projecting parts

Notes on Care and Use

Cleaning the Walkman

- Prolonged use may contaminate the tape head. If sound drop-out or excessive noise occurs, clean the head and tape path with alcohol.
- Clean the headphones/earphones plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

About headphones/earphones

Road safety

Do not use headphones/earphone while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

About batteries

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.

About external power

You can connect the following external power sources through the DC IN 3 V jack located on the bottom. (When you plug a cord into the DC IN 3 V jack, the internal batteries are automatically bypassed.)

- House current using an AC-E30HG AC power adaptor

Battery life (approximate hours) (EIAJ*)	

<