



DIGITAL TIRE GAUGE

backlit display



63-235
User's Guide

Please read this user's guide before using your new tire gauge.

Package contents

Tire Gauge User's Guide Quick Start

Features

- Swivel work/emergency lights
- Selectable units
- Backlit display
- Tire tread gauge

① Install Batteries

1. Unscrew to remove the battery compartment cover.
2. Install two AAA batteries (not included), matching the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw.



Battery Notes:

- *Dispose of batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and type.*
- *Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.*
- *If you do not plan to use the tire gauge for an extended time, remove the battery. Batteries can leak chemicals that can damage electronic parts.*

LIGHT

Press once: the lights are on.
Press twice: the lights flash.
Press the third time: lights off.

CHECK

Press to turn on your tire gauge. Press once more to change units.

Tire tread indicator

Tire tread measurement guide

To measure tire tread.

Slide to extend the tire tread measurement guide

Air pressure release pin

Connect to the tire valve if the pressure is too high.

Air pressure measurement head

Connect to the tire valve and hold in place for a few seconds to measure the tire pressure.

Swivel work lights/emergency lights

270 degree swivel LED lights.

Built-in Magnet

Place the tire gauge on any metallic surface.



② Measure Tire Pressure

1. Unscrew the valve cap from the tire.
2. Press **CHECK**. **0.0 PSI** shows.
3. Repeatedly press **CHECK** to change the measurement unit to be **BAR**, **KG/cm²**, or **KPa**.
4. Connect the tire gauge to the tire valve and hold in place for a few seconds to read the measurement.

The display turns off after 20 seconds if no further operation is made.

③ Measure Tire Tread

1. Slide the switch at the back of the tire gauge to extend the tire tread measurement guide and insert it between tire treads.

Depth	Indicator	Status
> 6mm	Green	Safe.
2-6mm	Amber	Alert. Check tires.
< 2mm	Red	Dangerous. Replace tires.

2. After measurement, slide the guide in.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at:

Ignition L.P., 3102 Maple Ave Suite 450, Dallas, TX 75201

02/09

For product support, call **1-866-315-0426**



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.