
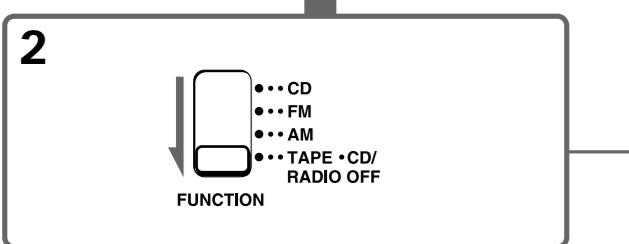


Use TYPE I (normal) tape only.

Playing a tape

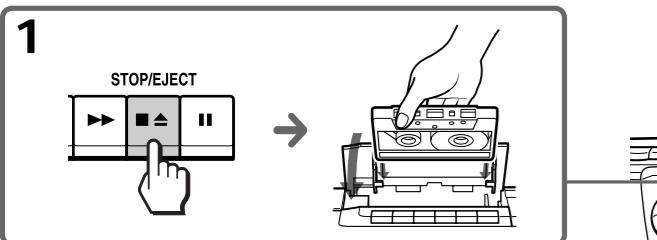



To	Do this
adjust the volume	Turn VOLUME.
stop playback	Press ■▲.
fast-forward or rewind the tape	Press ▶▶ or ▶◀.
pause playback	Press ■■. Press the button again to resume play after pause.
eject the cassette	Press ■▲.

Note
You insert a cassette with the side you want to play facing upward.

Use TYPE I (normal) tape only.

Recording

To record from the CD player
Para grabar desde el reproductor de discos compactos

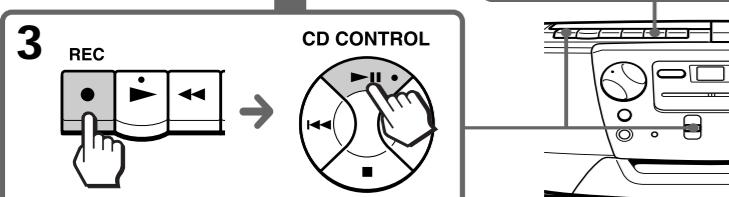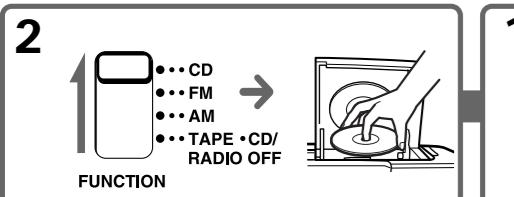

To	Press
stop recording	■▲
pause recording	■■

Press the button again to resume recording.

Tips
• Adjusting the volume or the audio emphasis will not affect the recording level.
• For the best results, use the AC power as a power source for recording.
• To erase a recording, proceed as follows:

- 1 Insert a tape with the recording you want to erase.
- 2 Set FUNCTION to TAPE•CD/RADIO OFF.
- 3 Press ●.

Consejos
• El ajuste del volumen o del énfasis de sonido no afectará al nivel de grabación.



• Para obtener los mejores resultados de grabación, utilice CA como fuente de alimentación.

• Para borrar una grabación, realice lo siguiente:

- 1 Inserte una cinta con la grabación que quiere borrar.
- 2 Ajuste FUNCTION en TAPE•CD/RADIO OFF.
- 3 Presione ●.

Utilice sólo cintas TYPE I (normal).

Reproducción de cintas

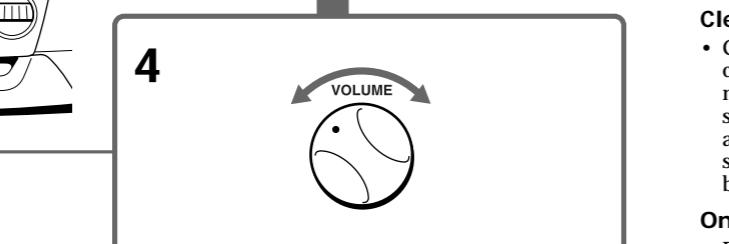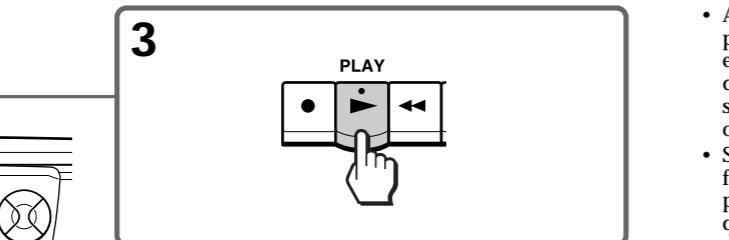

To	Do this
ajustar el volumen	Gire VOLUME.
detener la reproducción	Presione ■▲.
avanzar rápidamente o rebobinar la cinta	Presione ▶▶ o ▶◀.
realizar una pausa	Presione ■■.
extraer el cassette	Presione ■▲.

Nota
Inserte una cinta con la cara que deseé reproducir hacia arriba.

Utilice sólo cintas TYPE I (normal).

Para	Realice lo siguiente
ajustar el volumen	Gire VOLUME.
detener la reproducción	Presione ■▲.
avanzar rápidamente o rebobinar la cinta	Presione ▶▶ o ▶◀.
realizar una pausa	Presione ■■.
extraer el cassette	Presione ■▲.

Nota
Inserte una cinta con la cara que deseé reproducir hacia arriba.



To	Do this
ajustar el volumen	Gire VOLUME.
detener la reproducción	Presione ■▲.
avanzar rápidamente o rebobinar la cinta	Presione ▶▶ o ▶◀.
realizar una pausa	Presione ■■.
extraer el cassette	Presione ■▲.

Nota
Inserte una cinta con la cara que deseé reproducir hacia arriba.

Utilice sólo cintas TYPE I (normal).

Grabación en una cinta

To record from the CD player
Para grabar desde el reproductor de discos compactos

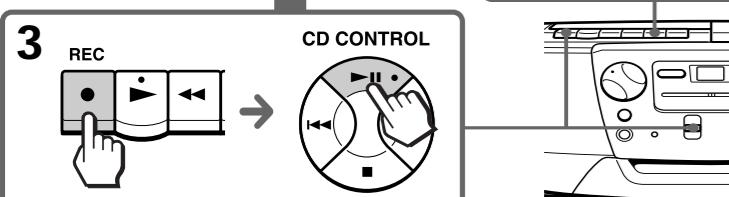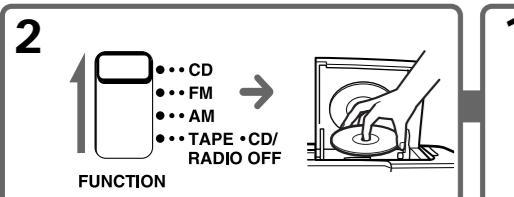

To	Press
detener la grabación	■▲
realizar una pausa durante la grabación	■■

Vuelva a presionar la tecla para reanudar la grabación.



Consejos
• El ajuste del volumen o del énfasis de sonido no afectará al nivel de grabación.

• Para obtener los mejores resultados de grabación, utilice CA como fuente de alimentación.

• Para borrar una grabación, realice lo siguiente:

- 1 Inserte una cinta con la grabación que quiere borrar.
- 2 Ajuste FUNCTION en TAPE•CD/RADIO OFF.
- 3 Presione ●.

To record from the radio
Para grabar de la radio

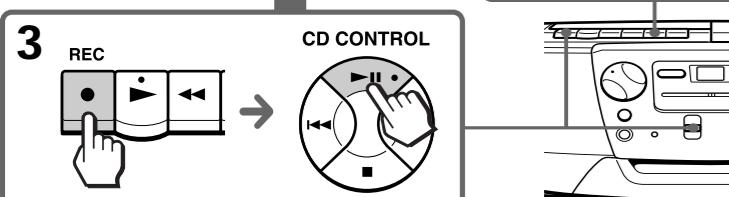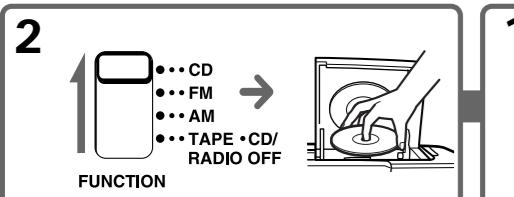

To	Press
detener la grabación	■▲
realizar una pausa durante la grabación	■■

Vuelva a presionar la tecla para reanudar la grabación.

Consejos
• El ajuste del volumen o del énfasis de sonido no afectará al nivel de grabación.

• Para obtener los mejores resultados de grabación, utilice CA como fuente de alimentación.

• Para borrar una grabación, realice lo siguiente:

- 1 Inserte una cinta con la grabación que quiere borrar.
- 2 Ajuste FUNCTION en TAPE•CD/RADIO OFF.
- 3 Presione ●.

English only / Sólo inglés

Precautions

On safety

- As the laser beam used in the CD player section is harmful to the eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.
- Cleaning the cabinet
- Notes on CDs

- Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.
- Make sure that the CD compartment is closed.
- Place the CD with the label surface up.
- Clean the CD.
- Take out the CD and leave the CD compartment open for about an hour to dry moisture condensation.
- Make sure the FUNCTION selector is set to CD.

- The sound drops out.
- Reduce the volume.
- Clean the CD, or replace it if the CD is badly damaged.
- Place the player in a location free from vibration.
- Clean the lens with a commercially available blower.
- The sound may drop out or noise may be heard if the CD is recorded using a personal computer(CD-R,etc.).

- Tape Player
- The tape does not move when you press an operation button.
- Close the cassette compartment securely.

- The REC ● button does not function or the tape does not play or record.

- If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

- If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

On placement

- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 10 mm of the side of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and prolong the life of its components.

- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.

- There is no audio.
- Make sure the FUNCTION selector is set to the function you want to operate.
- Adjust the volume.
- Unplug the headphones when listening through speakers.

Noise is heard.

- Someone is using a portable telephone or other equipment that emits radio waves near the player.
- Move the portable telephone, etc., away from the player.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- If the player has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.

Radio

- The audio is weak or has poor quality.

- Replace all the batteries with new ones if they are weak.
- Move the player away from the TV.

- The picture of your TV becomes unstable.

- Optional accessories

Sony MDR headphone series

Notes on cassettes

- If you are listening to an FM program near the TV with an indoor antenna, move the player away from the TV.

CD Player

- The CD does not play or "■■" lights in the display even when a CD is in place.

- Make sure that the CD compartment is closed.
- Place the CD with the label surface up.
- Clean the CD.
- Take out the CD and leave the CD compartment open for about an hour to dry moisture condensation.

- Make sure the FUNCTION selector is set to CD.

- The sound drops out.
- Reduce the volume.
- Clean the CD, or replace it if the CD is badly damaged.
- Place the player in a location free from vibration.
- Clean the lens with a commercially available blower.
- The sound may drop out or noise may be heard if the CD is recorded using a personal computer(CD-R,etc.).

- Tape Player
- The tape does not move when you press an operation button.
- Close the cassette compartment securely.

- The REC ● button does not function or the tape does not play or record.

- If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

- If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

On placement

- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 10 mm of the side of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and prolong the life of its components.

- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.

- There is no audio.
- Make sure the FUNCTION selector is set to the function you want to operate.
- Adjust the volume.
- Unplug the headphones when listening through speakers.

Noise is heard.

- Someone is using a portable telephone or other equipment that emits radio waves near the player.
- Move the portable telephone, etc., away from the player.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.

- If the player has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.

Radio

- The audio is weak or has poor quality.

- Replace all the batteries with new ones if they are weak.
- Move the player away from the TV.

- The picture of your TV becomes unstable.


Optional accessories

Sony MDR headphone series

Specifications

AUDIO POWER SPECIFICATIONS


Location of controls / Ubicación de los controles

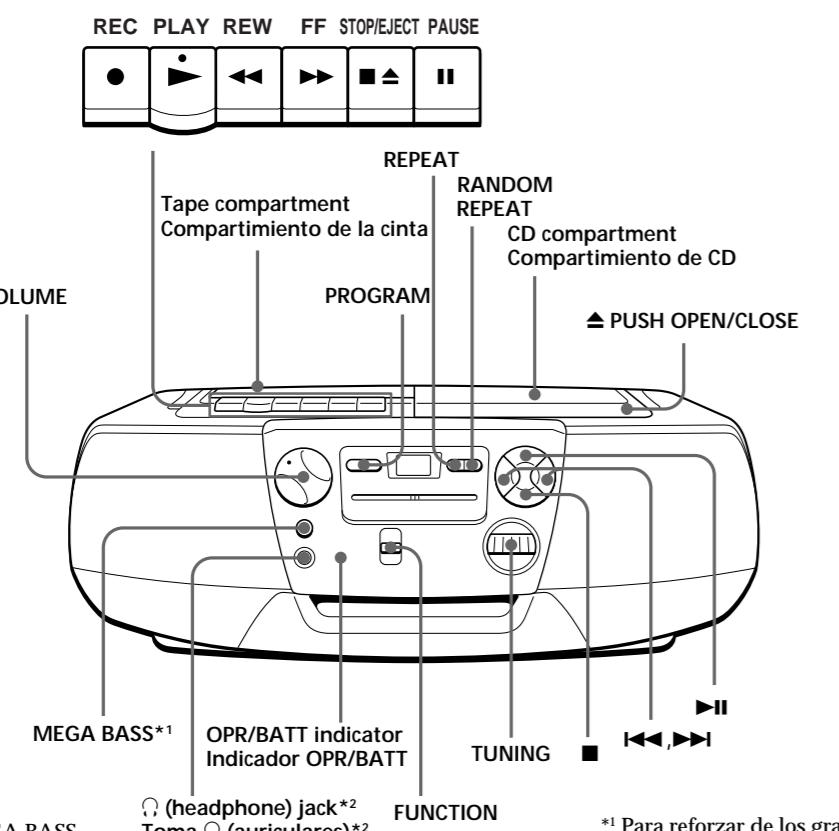

*1 To reinforce the bass sound, press MEGA BASS to ON. To return to normal sound, press the button to OFF.


*2 To listen through headphones, connect the headphones to the (headphones) jack.

Listening to the radio

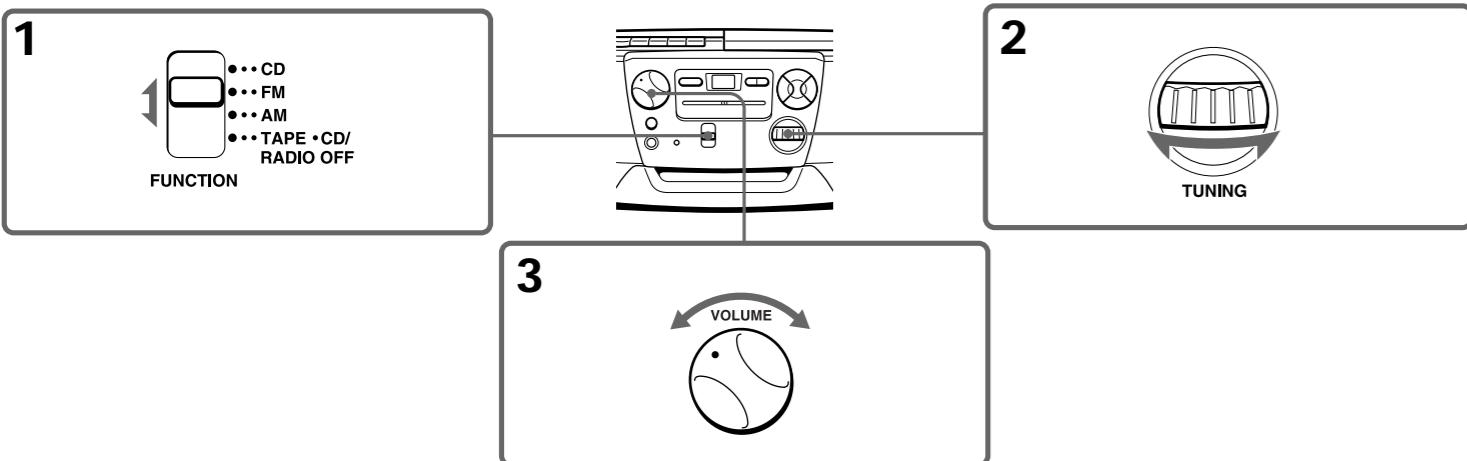

To	Do this
adjust the volume	Turn VOLUME.
turn off the radio	Set FUNCTION to TAPE•CD/RADIO OFF.


To improve broadcast reception
Reorient the antenna for FM.
Reorient the player itself for AM.

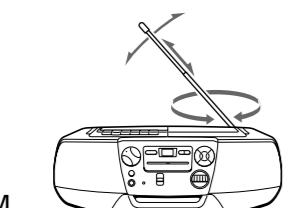

Para mejorar la recepción de la radio

Reorientar la antena para FM.
Reorientar el reproductor para AM.

Playing a CD

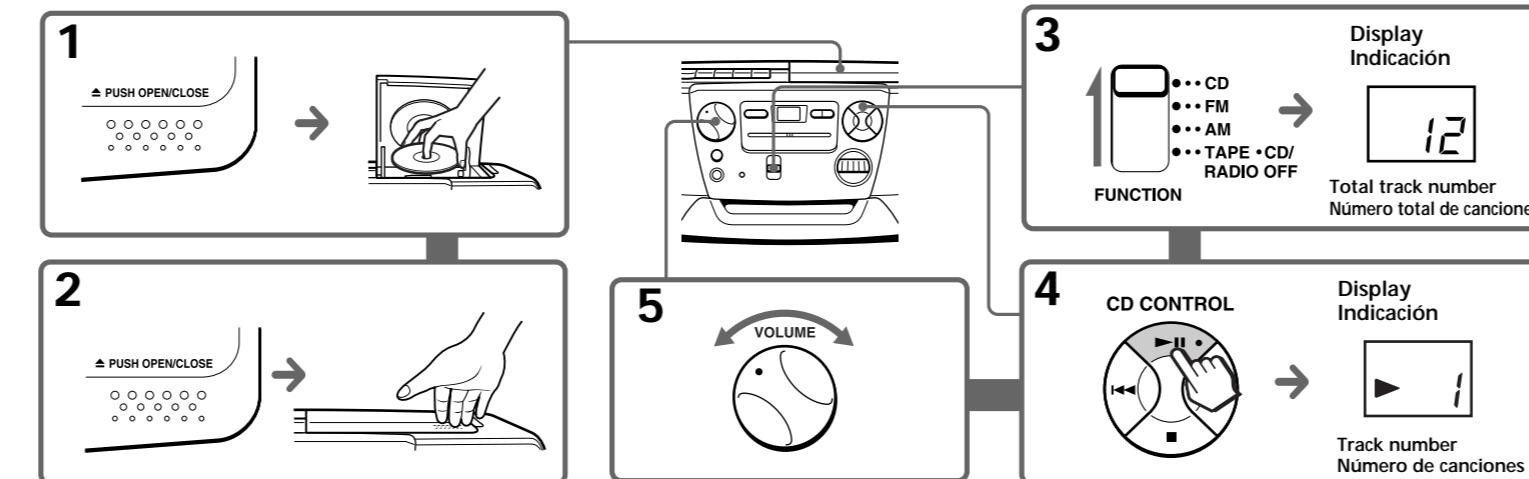

To	Do this
adjust the volume	Turn VOLUME.
stop playback	Press ■.
pause playback	Press ▶▶. Press again to resume play after pause.
go to the next track	Press ▶▶.
go back to the previous track	Press ▶▶.
remove the CD	Press ▲ PUSH OPEN/CLOSE.
turn off the player	Set FUNCTION to TAPE•CD/RADIO OFF.
locate a point while listening to the sound	Hold down ▶▶ (forward) or ▶▶ (backward) while playing until you find the point.

Para	Realice lo siguiente
ajustar el volumen	Gire VOLUME.
detener la reproducción	Presione ■.
realizar una pausa	Presione ▶▶. Vuelva a presionar para reanudar la reproducción después de la pausa.
pasar a la siguiente canción	Presione ▶▶.
retroceder a la canción anterior	Presione ▶▶.
extraer el disco	Presione ▲ PUSH OPEN/CLOSE.
apagar el reproductor	Ajuste FUNCTION en TAPE•CD/RADIO OFF.
localizar un punto mientras escucha el sonido	Mantenga pulsado ▶▶ (avance) o ▶▶ (rebobinado) durante la reproducción hasta que lo encuentre.

Reproducción de un disco compacto

Random Repeat Play

- Set FUNCTION to CD.
- Press RANDOM REPEAT to display "RNDM REP".
- Press ▶▶ to start Random play.

To cancel Random Repeat Play

Press RANDOM REPEAT to disappear "RNDM REP".

Tip

The player does not memorize the track number which was already played, so it may play same track number again and it plays eternally.

Reproducción repetida en orden aleatorio

- Ajuste FUNCTION en CD.
- Presione RANDOM REPEAT para que aparezca "RNDM REP".
- Presione ▶▶ para iniciar la reproducción aleatoria.

Para cancelar la reproducción repetida en orden aleatorio
Presione RANDOM REPEAT para que "RNDM REP" desaparezca.

Consejo

El reproductor no memoriza el número del tema ya reproducido, por lo que es posible que lo reproduzca de nuevo una y otra vez.

Pepeat Play

- Set FUNCTION to CD.

2 Proceed as follows:

To repeat	Do this
a single track	1 Press REPEAT until "REP" flashes.
all the tracks	2 Select the track by pressing the ▶▶ or ▶▶ and press ▶▶. 1 Press REPEAT until "REP" appears.

programmed tracks	Do this
canciones programadas	1 Press REPEAT until "REP" appears. 2 Program tracks (see step 2 and 3 on "Program Play"). 3 Press ▶▶.

To cancel Repeat Play
Press REPEAT until "REP" disappears from the display.

Reproducción repetida

- Ajuste FUNCTION en CD.

2 Proceda del siguiente modo:

Para repetir	Haga esto
una sola canción	1 Presione REPEAT hasta que "REP" parpadee.
todas las canciones	1 Presione REPEAT hasta que aparezca "REP". 2 Presione ▶▶. 2 Seleccione la canción presionando ▶▶ o ▶▶, y presione ▶▶. 1 Presione REPEAT hasta que aparezca "REP".

canciones programadas	Do this
	1 Presione REPEAT hasta que aparezca "REP". 2 Programe las canciones (consulte el paso 2 y 3 de "Reproducción de programa"). 3 Presione ▶▶.

Para cancelar la reproducción repetida
Presione REPEAT hasta que "REP" desaparezca del visualizador.

Program Play

- Set FUNCTION to CD.

2 Press PROGRAM to flash "PGM".

Display

- Press ▶▶ or ▶▶ then press PROGRAM for the tracks you want to program in the order you want. You can arrange the playing order of up to 16 tracks on a CD.

Programmed track

- Press ▶▶ to start program play.

To check the order of tracks before play
Press PROGRAM.
The track number appears in the programmed order.

To change the current program

Press ■ once if the CD is stopped and twice if the CD is playing. The current program will be erased. Then create a new program following the programming procedure.

Tip

You can record your own program. After you've created the program, insert a blank tape and press ● and then ▶▶ to start recording.

Reproducción de programa

- Ajuste FUNCTION en CD.

Display

- Presione PROGRAM para que "PGM" parpadee.
- Presione ▶▶ o ▶▶ y, a continuación, presione PROGRAM para las canciones que deseé programar en el orden que deseé. Puede establecer el orden de reproducción de hasta 16 canciones de un disco compacto.

Canción programada

- Presione ▶▶ para iniciar la reproducción programada.

Para cancelar la reproducción programada
Presione PROGRAM.
El número de canciones aparecerá en el orden programado.

Para cambiar el programa actual

Presione ■ una vez si el disco compacto está parado y dos veces si está reproduciéndose. El programa actual se borrará. A continuación, cree un nuevo programa siguiendo el procedimiento de programación.

Consejo

Es posible grabar un programa propio. Despues de crear el programa, inserte una cinta en blanco y presione ● y luego ▶▶ para iniciar la grabación.