

*Professional
DataPage
Organizer*

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive licensed to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Introduction

Thank you for purchasing the DataPage Organizer, a handy and easy-to-use tool to help you organize your life better.

This manual has been prepared to help you get started with the Organizer. Read it thoroughly and try out the various functions. With proper care, this unit will give you years of satisfaction and service.

Contents

License Agreement	1
Precautions	3
Getting Started	4
Key Guide	5
Using the Clocks	8
Using the Daily Alarm	10
Using the Phone Directories	11
Using the Schedule Feature	13
Using the Memo Feature	15
Using the Bookmark Feature	17
Using the Anniversary Feature	19
Using the Calendar	20
Using the Calculator	21
Using the Password	22
Specifications	24
Limited Warranty (U.S. only)	25
FCC Notice	26

Precautions

This unit is engineered to give you years of satisfactory service if you handle it carefully. Here are a few precautions:

1. Do not immerse the unit in water.
2. Do not clean the unit with abrasive or corrosive materials.
3. Do not subject the unit to excessive force, shock, dust, temperature or humidity.
4. Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary damage.
5. Only use fresh batteries as specified in these instructions. Do not mix new and old batteries as the old ones may leak.
6. Never let children play with the batteries. Swallowing a lithium battery could be fatal. To avoid risk of explosion, do not recharge, open, or heat a lithium battery or dispose of it in fire.
7. Always read the user instructions thoroughly before operating the unit.

◆ Setting the Clock

To learn how to set the clock, read "Using the Clocks" on page 8.

Getting Started

Using the Organizer for the First Time

1. Remove the battery insulation tape at the back of the unit.
2. Press ON/OFF to turn on the unit. The Home Time screen will be displayed (the default home city is London).
3. Press ON/OFF to turn off the unit, when you are not using it.

Battery

Your unit uses two (CR2016) lithium batteries, one for general operation and one for memory backup. Replace the main battery when the display dims. Do the same for the backup battery once a year.

Warning! Always turn the unit off before replacing the batteries. Replacing the batteries when the unit is on may cause permanent damage. Do not remove the main and backup batteries at the same time. If you do, all the data will be erased.

◆ To Hear the Keytone




 




 
Press V (♪) to turn the keytone on or off when at the Home Time screen.

◆ Automatic Shutoff

Your organizer will automatically turn off if not used for 7 minutes.



Key Guide

Main Function Keys

-  (PHONE) Toggles between three telephone directories.
-  (SCHED) Goes to the Schedule directory.
-  (MEMO) Goes to the Memo directory.
-  (BKMRK) Goes to the web address directory.
-  (TIME) Lets you set the date and time.
-  (ALARM) Allows you to set a daily alarm for any time of the day.
-  (ANNV) Goes to the Anniversary directory.
-  (CALENDAR) Goes to the Calendar.
-  (CALC) Goes to the Calculator.

Key Guide

Other Keys

ON/OFF	Turns your organizer on or off.
EDIT	Allows you to change the displayed record.
ENTER	Saves data and confirms an action, like saving or deleting a record.
SHIFT	Allows you to use the second function displayed over some keys.
FUNC	Displays the function menu.
SPACE	Types a space at the cursor position.
INS	Allows characters to be inserted when editing data.
COPY(SHIFT+INS)	Copies a selected record and automatically pastes it.
BKS	Deletes a character to the left of the cursor.
	Moves the cursor to the next line.
DSP	Displays the current record.
DELETE	Deletes a record.
12/24	Toggles between 12-hour and 24-hour clock format.
DST	Turns daylight savings time (DST) on or off.
SEARCH UP or DOWN	Searches through records, or moves up and down to select lists.
	Turns the keytone off or on.




 
Key Guide

Calculator Function Keys

The function keys are autoshifted in the Calculator.

C/CE	Clears the memory.
÷, X -, +	Divides, multiplies, subtracts or adds.
=	Performs a calculation.
.	Types a decimal point.
%	Calculates a percentage.
+/-	Changes the sign of a number from positive to negative.
√	Calculates a square root.
MC	Clears the memory.
MR	Recalls the number stored in memory.
M-	Adds a negative number to the number in memory.
M+	Adds a positive number to the number in memory.

Screen Icons

	Schedule Alarm
	Password lock
	Keytone
	Daily Alarm

Using the Clocks

Your organizer has two clocks that keep the time and date simultaneously: a Home Time clock, which can keep your current time, and a World Time clock, which keeps the time of different cities throughout the world.



To Set the Home Time

1. Press **TIME** until  (HOME TIME) is on the screen.
2. Use **SEARCH UP** and **DOWN** to scroll through the list of world cities until you find one that is in your time zone.

This will be your Home City.

3. Press **EDIT**.

The first number of the date flashes.

4. Press  or  to move between the date and time fields.

Each number flashes as it is selected. Use the number keys to type your changes. Note: You cannot change the seconds.

To switch between AM and PM press **X**(AM/PM).

5. Press **ENTER** to store your changes.

Using the Clocks

To Use the World Time

Note: You must set the date and time of your Home City first *before* you view the time of other cities.

1. Press **TIME** until  (**WORLD TIME**) is on the screen.
2. Use **SEARCH UP** or **DOWN** to scroll through the list of world cities.
3. Press **C(DST)** for daylight savings time.

The symbol, **DST** next to the day of the week indicates daylight savings time is on.

Note: The World Time is based upon hours added to or subtracted from the Home Time zone. It is not a separate clock and cannot be set independently of the Home Time clock.

◆ Changing Time and Date Formats

Press **Z (12/24)** to switch between the 12-hour (AM/PM) and 24-hour display format.

◆ Daylight savings time

Press **C (DST)** to turn on/off the daylight saving function. When daylight savings time is on, it will add an extra hour to local time. The symbol, **DST** next to the day of the week indicates daylight savings time is on.

Using the Daily Alarm

You can set a Daily Alarm that acts as an alarm clock which chimes once a day at a specified time. When an alarm sounds, simply press a key to stop it. The alarm will sound for 20 seconds if you do not stop it. Even if your organizer is turned off, it will automatically turn on and the alarm will sound.

To Set the Daily Alarm

1. Press **ALARM**.
2. Press **EDIT**.
3. Enter the time using the number keys.

Press **X** (AM/PM) to toggle between AM and PM.

4. Press **ENTER** to set and enable the alarm time or any function key to cancel the operation.

If **ENTER** is pressed, (🔔) will appear on the display, indicating that the alarm will sound at the set time.

To Disable the Daily Alarm

To disable the Daily Alarm, press **V** (🔔) until the Alarm icon (🔔) disappears from the left side of the screen.



Using the Phone Directories

Your organizer has three Phone directories, which contain phone records. Phone records are made up of eight fields of information: Name, Company, Phone 1, Phone 2, Phone 3, E-mail, Address and Note.

To Enter a Phone Record

1. Press **PHONE** repeatedly to choose the Phone directory you want.
2. Type a name and then press **ENTER** to go to the next field.

Note: Phone records are listed alphabetically according to the first few letters of the name. To sort your phone records by last name, you must enter the last name first (e.g., SMITH, ROBERT).

To delete a character, use  or  to go to the character to the right of the one you want to delete and press **BKS**.

3. Type your data in each field and press **ENTER** to go to the next field.

If you want to skip a field, press **ENTER**.



Press **SHIFT** and then **7** for an @, **1** for an _ or **0** or a “.”.

Use the decimal key on the calculator keypad for “.”.

4. Press **ENTER** to save the data.


 
Using the Phone Directories

To Find a Phone Record

1. Press **PHONE** repeatedly to choose the Phone directory you want.
2. Press **SEARCH UP** or **DOWN** to display the list of records.
3. Use  or  to move the cursor (>) to the record you want.

To search for a specific phone record, type the first letter. The list of entries starting with that letter is displayed. If there are no more records, or no record is found for that letter, first the message "NOT FOUND" is displayed and then the record closest to the letter you typed is displayed.

4. Press **DSP** to view the record.

Use  or  to scroll through the record.

5. Press any function key to exit.

To Edit or Delete a Phone Record

1. Select the phone record you want to edit or delete.

The selected record is the one to which the cursor (>) points.

2. To edit the record, press **EDIT**.

Type your changes and press **ENTER** to go to the next field. Note is the last field. Press **ENTER** to save the edited record.

3. To delete the record, press **DEL**.

Press **Y** to confirm the deletion. Press **N** to cancel the deletion.

Using the Schedule Feature

In each schedule record you can keep track of the date and time of your appointments and write a note.

To Enter a Schedule Record

1. Press **SCHED**.

The first number of the date flashes.

2. Press **▶** or **◀** to move between the date and time fields.

Each number flashes as it is selected. Use the number keys to type your changes. **Note:** You cannot change the seconds.

To switch between AM and PM, press **X**(AM/PM).

3. Press **ENTER** to go to the Note field.

Type in your note.

The Schedule alarm is automatically set and sounds at the time of your appointment. If your organizer is off, it turns itself on and the alarm sounds.

4. Press **ENTER** to store your record.



To View a Schedule Record

1. Press **SCHED**.

2. Press **SEARCH UP** or **DOWN** repeatedly to cycle through your schedule records.

The records are arranged by date.

Using the Schedule Feature

3. Use  or  to move the cursor (>) to the record you want.

4. Press **DSP** to view it.

When viewing a record, you can turn the alarm off by pressing any key.

5. Press **ENTER** to return to the list you were viewing.



Press any function key to exit.

To Edit or Delete a Schedule Record

1. Select the record you want to edit or delete.

The selected record is the one to which the cursor (>) points.

2. To edit the record, press **EDIT**.

Press  or  to move between the date and time fields. Type your changes.

3. Press **ENTER** to go to the Note field.


Type your changes. Use **BKS** to delete the character to the left of the cursor. Press **ENTER** to store your edits.

4. To delete the record, press **DEL**.

Press **Y** to confirm the deletion. Press **N** to cancel the deletion.

Using the Memo Feature



To Enter a Memo Record

1. Press **MEMO**.
2. Type your data.
Press  to go to a new line.
3. Press **ENTER** to store your record.

To View a Memo Record



1. Press **MEMO**.
2. Press **SEARCH UP** or **DOWN** to display the list of records.

The records are listed in alphabetical order.

3. Use  or  to move the cursor (>) to the record you want.

To search for a specific record, type the first letter. The entry starting with that letter is the first one displayed. If there are no more records, or no record is found for that letter, "NOT FOUND" is displayed and the entry starting with the letter closest to the one you entered is displayed.

4. Press **DSP** to view it.

Use  or  to scroll through the record.

5. Press **ENTER** to return to the list you were viewing.

Press any function key to exit.

Using the Memo Feature

To Edit or Delete a Memo Record

1. **Select the record you want to edit or delete.**

The selected record is the one to which the cursor (>) points.

2. **To edit the record, press EDIT.**

Type your changes. Use **BKS** to delete the character to the left of the cursor. Press **ENTER** to save the edited record.

3. **To delete the record, press DEL.**

Press **Y** to confirm the deletion. Press **N** to cancel the deletion.

Using the Bookmark Feature

You can keep track of your favorite websites using the Bookmark feature. You can enter a name, the web address and a note. Your entries are displayed in alphabetical order.

To Enter a Bookmark

1. Press **BKMARK**.
2. Type a name and press **ENTER** to go to the **Web Sites** field.



You can press **ENTER** to go to the next field without entering any data.

3. Type the web address and press **ENTER** to go to the **Note** field.

Use the decimal key on the calculator keypad or “.”.

4. Type a note and press **ENTER** to store your data.

To View a Bookmark



1. Press **BKMARK**.
2. Press **SEARCH UP** or **DOWN** to display the list of records.
3. Use  or  to move the cursor (>) to the record you want.

To search for a specific record, type the first letter. The entry starting with that letter is the first one displayed. If there are no more records, or no record is

Using the Bookmark Feature

found for that letter, "NOT FOUND" is displayed and the entry starting with the letter closest to the one you entered is displayed.

4. Press **DSP** to view it.

Use  or  to scroll through the record.

5. Press **ENTER** to return to the list you were viewing.

Press any function key to exit.

To Edit or Delete a Bookmark

1. Select the record you want to edit or delete.

The selected record is the one to which the cursor (>) points.

2. To edit the record, press **EDIT**.

Type your changes and press **ENTER** to go to the next field. Use **BKS** to delete the character to the left of the cursor. Note is the last field. Press **ENTER** to save the edited record.

4. To delete the record, press **DEL**.

Press **Y** to confirm the deletion. Press **N** to cancel the deletion.

Using the Anniversary Feature



In each anniversary record, you can enter the date and a note.

To Enter an Anniversary Record

1. Press ANNV.

The first number of the date flashes.

2. Type in the date you want and press ENTER.

Press  or  to move between the numbers. Each number flashes as it is selected. Use the number keys to type your changes.

3. Type a note and press ENTER to store your data.

You can view, edit or delete an Anniversary record just as you would a schedule record. Please see “To View a Schedule Record” on page 13 and “To Edit or Delete a Schedule Record” on page 14. Note: There is no time associated with an Anniversary record.

Using the Calendar



You can view the current date or browse other dates moving one day, one week, or one month at a time.

Viewing Dates

1. Press **CALENDAR**.

The year and month are displayed on the left of the screen and the current date flashes. Note: The current date is dependent on the date that you set in your Home Time.

2. Use or to move one day at a time.

Use  or  to move one week at a time.

Use **SEARCH UP** or **DOWN** to move up or down one month at a time.

Using the Calculator

To Make a Basic Calculation

1. Press **CALC** until you see the calculator.
2. Type a number using the number keys, and then type a math function (e.g., **+**, **-**, **X**, **÷**). Type another number and then press **=** to see the result. To clear your calculation, press **C/CE(DEL)**.

To Use the Memory

Your calculator can store a number in its memory for later calculation.

1. **Make a calculation or simply type a number in the calculator.**
2. Press **R (M+)** to add the result to the memory as a positive number or **E (M-)** to add it to the memory as a negative number.
3. To retrieve the number from memory, press **W (MR)**.
4. To clear the memory, press **Q(MC)**.


Note: If the result of a calculation has more than 10 digits, an error occurs. Press **C/CE(DEL)** to clear the display.


Using the Password

You do not need to set a password to use this organizer. Once you set your password, the secret mode is engaged. You will need to enter the correct password to access your data.

Warning! Be sure to write down your password and keep it in a safe place. If you forget your password, you will not be able to access any function on your organizer. To bypass the password, you will have to perform a reset, which will clear the password and erase all the data stored in its memory.

To Set the Password

1. Press **TIME**.
2. Press **SHIFT** then .
3. Enter the password (maximum 8 characters).
4. Press **ENTER** to store the password and engage the secret mode.

The “keylock” icon () will be shown on the screen. You may cancel the operation by pressing any function key.

Using the Password

To Turn off the Password

1. Press **TIME**.
2. Press **SHIFT** then **▼**.
3. Press **ENTER** without entering a new password.

The password function will be turned off.

◆ Resetting the Unit

Press the reset button located on the back of the unit with a blunt point. This procedure is generally not required unless the unit malfunctions or you want to clear all data and resume factory settings.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, ON/OFF or by removing/replacing batteries.

Specifications

Model: RF-6090 *Personal Organizer*

Size: 17.0 x 10.6 x .6 cm • Weight: 115 g

Battery: Two (CR2016) lithium • Storage capacity: 128 K

Contacts

For registration and sales call 1-800-266-5626 (U.S. only) or visit us at www.franklin.com. Please have your product number (**RF-6090**) and date of purchase handy when you call to register. For customer service call 609-239-4333.

For technical support call 609-386-8997.

Cleaning This Product

To clean this product, spray a mild glass cleaner onto a cloth and wipe its surface. Don't spray liquids directly onto the unit. Don't use or store your organizer in extreme or prolonged heat, cold, humidity, or other adverse conditions.

Copyrights, Trademarks and Patents

© 2000 Franklin Electronic Publishers, Inc.

Burlington, N.J. 08016-4907 USA. All rights reserved.

ROLODEX® is a registered trademark of Berol Corporation, a subsidiary of Newell Rubbermaid, Inc.

Patents Pending ISBN 1-56712-562-x

Limited Warranty (outside U.S.)

This product, excluding batteries is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/ COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTN: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

REP-28089-00

P/N 7201746

Rev. C

Franklin®
Electronic Publishers
www.franklin.com