




An AGA Company

**60 / 70 / 90cm Stainless Steel  
Chimney Hoods**

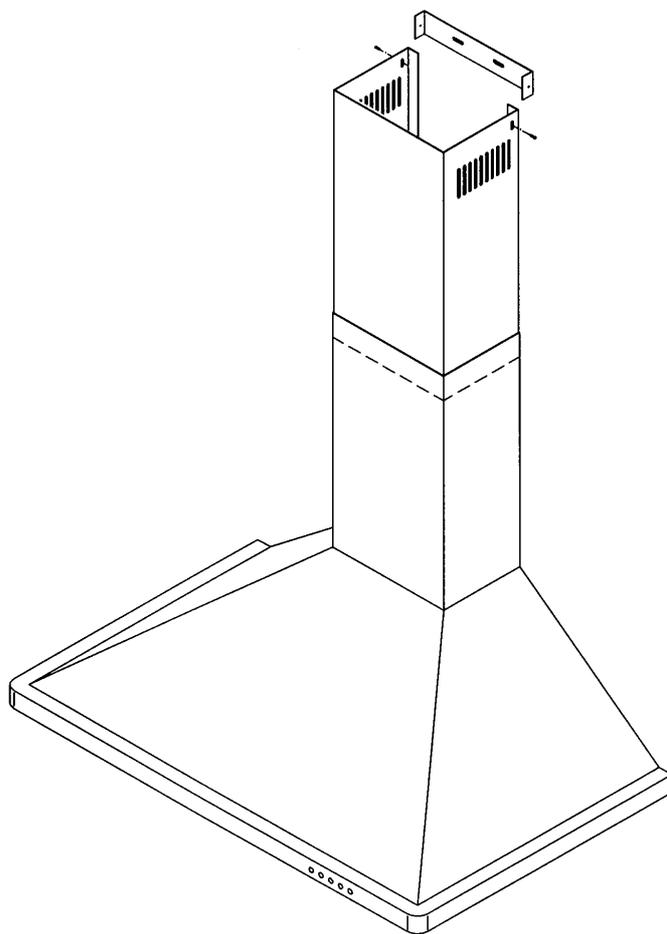

To be installed by a trained and competent person

***INSTALLATION & OPERATING MANUAL***

To be left with end user

---

## WARNING & SAFETY INFORMATION

Please read this manual carefully, it provides important information about the safety, installation, use and maintenance of the appliance. The manufacturer cannot be considered responsible for any damage caused by improper, incorrect or unreasonable use.

**WARNING!** Do not connect the appliance to the mains until the installation is fully complete.

### ELECTRICAL CONNECTION

The mains power supply must correspond to the rating indicated on the plate situated inside the hood. A double-pole switch must be fitted in accordance with the relevant standards.

**Attention:** Replacing the supply cable must be carried out by a Qualified Electrician or an Authorised Service Agent.

The appliance is only intended for use by competent persons. Children should be supervised to ensure that they do not play with the appliance. Never use the hood without being securely fixed using the brackets supplied. The hood must never be used as a support surface unless specifically indicated. If the appliance is fitted in a room with one or more appliances that require an air supply, an adequate air supply must be provided so that these appliances can function simultaneously at maximum operation. If venting outside, the vent pipe must run direct from the hood to an external wall.

The use of exposed flames beneath the hood is detrimental to the filters and may cause a fire risk, and must be avoided at all times. Waterford Stanley recommend a distance of 650-750mm between the cooking appliance and the hood, see Installation Section provided in this manual.

The hood must be regularly cleaned on both the inside and outside **AT LEAST ONCE A MONTH**.

### MAINTENANCE

**ATTENTION!** Before performing any maintenance, isolate the hood from the electrical supply.

#### Grease Filter

This must be cleaned once a month using a non aggressive detergent, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle. When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity.

### REPLACING LAMPS

**Warning!** Ensure light bulbs are cool before touching. Ensure all lamps are correctly fitted to the hood at all times to avoid a possible safety hazard.

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

## GENERAL GUIDELINES

Before installing and /or using the cooker hood, please read these instructions carefully.

Before installing the cooker hood make sure the voltage (V), frequency (Hz) indicated on the serial number plate and specifications on the rating plate on the inside of the cooker hood correspond to the voltage and frequency of the mains supply.

## INSTALLATION

The cooker hood must not be installed and connected to flues where other appliances are installed and which run off other energy supplies other than electricity (water heaters - boilers - cookers, range/gas etc). The extraction hood requires a 125mm extraction pipe connected directly to the outside with an opening of a minimum cross section of 150cm<sup>2</sup>.

The hood must be installed with a distance of 650-750mm between the cooker top/hob and the extraction hood. The cooker hood must not be installed above cookers with eye-level grills.

## ELECTRICAL CONNECTION

This cooker hood is designed for permanent fixture. Connect to mains supply. Check voltage and frequency given on the rating plate located on the inside of the hood. Connect the mains cable to a power socket or to a double pole switch with a contact gap of at least 3mm. The mains cable (type H05VV-F 2x 0.75 mm<sup>2</sup>) is connected to terminals marked with the letters L (power line) and N (neutral) mounted on the hood and is secured in position by a cable gland. The mains cable must be connected to a suitable and easily accessible fixed power point. As the electrical installation must comply with the laws and regulations in force only a qualified and authorised electrician must install the hood including connecting it to a double pole switch with a contact gap of at least 3mm.

Connect the mains cable if provided with a plug to a power socket. The user must have access to the power socket to be able to connect and disconnect the plug once the hood is mounted and fixed or the mains cable can be plugged into a socket with a double pole switch with a contact gap of at least 3mm.

The manufacturer will not be responsible if the governing health and safety laws are not observed which permit safe and correct use of the hood and electrical connections.

## INSTRUCTIONS FOR ASSEMBLY

The hood is intended for fitting on the wall. Position the hood 70cm above the hob. Remove the metal anti-grease filters. Position the hood against the wall and mark on the wall the position of the support holes. Using a drill bit with a diameter of 6mm., make holes in the wall on the reference marks made previously. Insert the expansion fixings in the holes and then screw the support screws half-way in. Hook the hood onto the screws and fasten it onto the wall, tightening all the screws. Fit the coupling to the top of the hood using self tapping screws provided. Connect the discharge pipe to the coupling. Replace the metal anti-grease filters.

The steel ducting for the hood is to be fixed to the wall using the bracket supplied, the bracket is to be fixed nearest the ceiling and fixed to the end of the duct with slots in it.

## CONTROL PANEL

The control panel is situated on the front of the hood and comprises of 5 push button switches with the following functions:

-  Fan ON/OFF switch
-  Low fan speed
-  Medium fan speed
-  High fan speed
-  Light ON/OFF switch

## MAINTENANCE

Before servicing or repairing the hood make sure the appliance is disconnected from the mains supply either by removing the plug or switching the power socket to OFF.

### a) Cleaning

**“NOTE: the areas behind the filters are not intended to be cleaned”**

Clean the external parts with non-corrosive liquid detergents, avoiding the use of abrasive powders or of brushes.

### b) Cleaning the metal anti-grease filter

The saturation of greasy residue in the metal filter may cause increased inflammability. In order to prevent possible fires, the metal filter must be washed

regularly depending on use and at least every three months in a dishwasher or in hot water with normal washing-up detergent. After having carefully rinsed and dried the metal anti-grease filter, put it back in place.

### c) Changing the light bulb

Before changing the light bulb, ensure that the appliance is not live (the switch should be in position 0 - OFF). Remove the metal anti-grease filters (Fig.3). Change the halogen light using a 230V halogen light, with an E14 coupling, max. 50W. Replace the metal anti-grease filters.

## IMPORTANT

Cleaning must always be carried out according to the manufacturer's instructions, especially as regards the deposits on dirty surfaces which may be a possible fire hazard. Always take care that the flames or elements are covered so as not to cause overheating of the filter in the hood. Never leave pans unattended when frying; the oil in the pan may overheat and catch fire. The risk of self-combustion is higher when the oil has been used several times. It is absolutely forbidden to cook with an open flame under the hood. The ducted air must not be conveyed into a flue used for discharging the fumes produced by non-electric appliances ; If the non-recycling version of the hood is used, check the conditions of the flue if it has remained unused for a long time. Remember to pay the greatest attention to the local regulations in force and the requirements of the competent authorities concerning air discharge if the appliance is operating as an extraction hood. All the advice given here must be scrupulously abided by so as to avoid the risk of fire.

## VENTILATION


If there is an appliance fitted in the vicinity which requires air for combustion, additional air vents will be required to alleviate the possibility of spillage of products of combustion, from the appliance/flue while the fan is in operation. Refer to B.S. 5440 Part 2 & I.S. 813.

Where such an installation exists a test for spillage should be carried out with all appliances requiring air for combustion and all extraction fans running at maximum rate, (i.e. tumble dryers, extraction fans) with all external windows and doors closed.

If spillage occurs following the above operation, an additional air vent of sufficient size to prevent this occurrence should be installed.

**THE MANUFACTURER DECLINES ALL RESPONSIBILITY IN THE EVENT OF FAILURE TO OBSERVE THE INSTRUCTIONS GIVEN HERE FOR INSTALLATION, MAINTENANCE AND SUITABLE USE OF THE HOOD.**

## HOOD DIMENSIONS

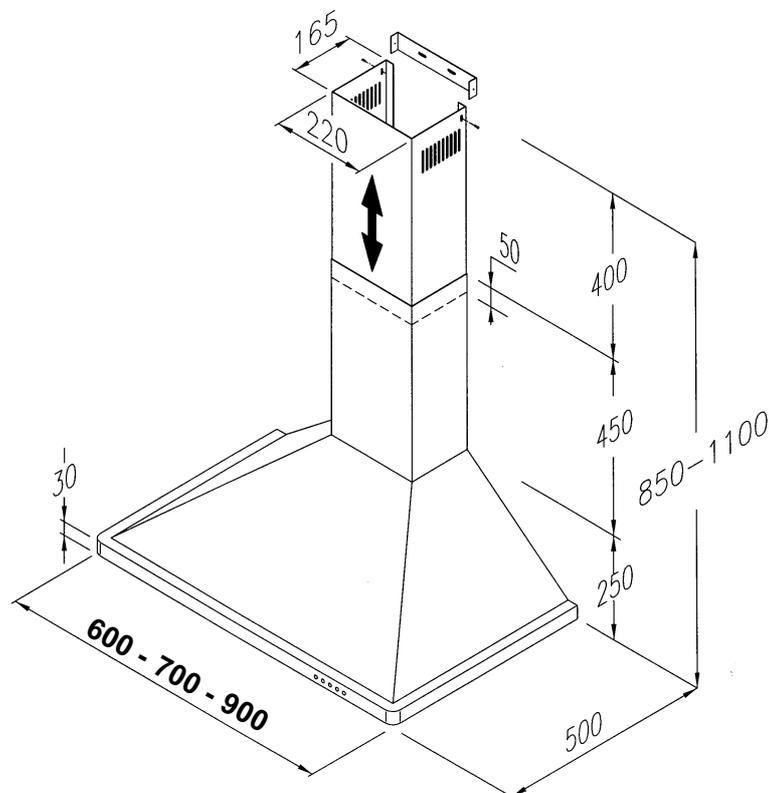



An AGA Company

## WARRANTY

We undertake to repair or replace, free of charge to you any part found to be faulty within the 12 month period from the date of purchase provided that:-

- \* The fault is, in our opinion, caused by defective workmanship, or material and not by accident, misuse, neglect or normal wear and tear.
- \* Any manufacturing defect is reported to the stockist from whom you bought the appliance within 12 months of the date of purchase.
- \* The Waterford appliance is installed to the Manufacturer's recommendations and by a suitably qualified person.
- \* The guarantee registration form is completed fully and returned to us within 30 days of the purchase date.

**IMPORTANT NOTICE:** Any alteration to this appliance that is not approved in writing by Waterford Stanley will render the guarantee void.



**Waterford Stanley Ltd.,**  
Unit 210, IDA Industrial Estate, Cork Road,  
Waterford, Ireland.  
Tel: (051) 302300 Fax (051) 302315

