

1400 D

Köksfläkt
Ventilator
Liesituuletin
Emhætte
Cooker Hood

Instruktionsbok
Bruksanvisning
Käyttöohje
Brugsvejledning
Operating and Installation Instructions

S	Innehållsförteckning	2
N	Innholdsfortegnelse	12
FIN	Sisällysluettelo	22
DK	Indholdsfortegnelse	32
UK	Contents	43

Contents

Safety instructions	43
Description of the cooker hood	44
Introduction	45
Using the cooker hood	46
Maintenance and cleaning	47
If the cooker hood will not operate	49
Technical data	50
Special Accessories	51
Installation	51

Safety instructions

This appliance is to be used solely as a household appliance. It has been manufactured according to the international safety and quality standards. Note that the safety devices alone are not capable of eliminating all accident risks. It is therefore very important to carefully read all the operating instructions, recommendations and warnings prior to installation and use of the appliance. Note in particular the text paragraphs with the danger triangle design, to avoid damages to persons or objects. Keep this instruction booklet in a safe place: this booklet should always accompany the appliance at such time as it is sold or given to other persons for use.

Installation and service

- Any electrical installation of the cooker hood must be carried out by a qualified electrician and the hood itself must be installed by someone with experience. Installation made by an unqualified person can lead to loss of function of the cooker hood and possible damage to person and and/or property.
- The cooker hood must be at least 60 cm above electric hobs or electric ranges, or at least 70 cm above gas burners or gas ranges.
- Ensure that the power cable is not damaged during installation.
- The cooker hood is only in stand by mode unless the plug or the fuse is disconnected.
- The cooker hood cannot be connected to flues of other appliances that run on energy sources other than electricity. Please, keep to the provisions of official directives regarding fume discharge.

Use of cooker hood

- This appliance is for domestic use only in a normal household.
- Never leave any deep-frying, melting fat, paraffin or any other inflammable liquid unattended on the hob. In the event of fire: Immediately switch off the cooker hood and the cooker. **Note! Cover the fire. Never use water.**
- Never do any flambé cooking underneath the cooker hood. It can cause a fire. Remember that overheated fat may spontaneously ignite. Never leave the frying pan unattended.
- It is essential that the grease filter is regularly cleaned to help avoid fat dripping on to the hot zone and causing a fire. Read the section on "Maintenance and Cleaning" in the instruction book.

Disposal


- Prevent accidents when disposing of your cooker hood. Disconnect the power plug from the wall socket and cut the power cord at the hood inlet. Contact your local authority for information on where to dispose the cooker hood.

Description of the cooker hood

Functions

There are two possible systems:

- Extraction of air to the outside using an optional venting kit and evacuation duct.
- Recirculation using an optional charcoal filter.

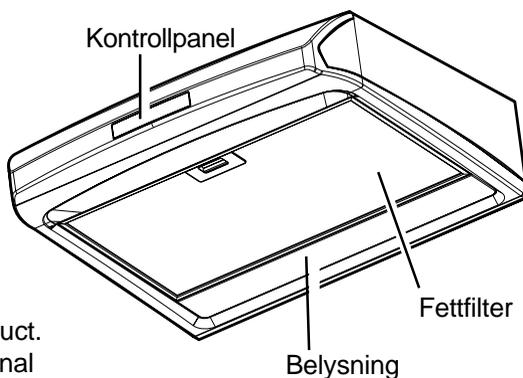

The air outlet must not be connected to chimney flues or combustion gas ducts. The air outlet must under no circumstances be connected to ventilation ducts for rooms in which fuel-burning appliances are installed.

Accessories

The following are included with the cooker hood: screws and wall plugs to fix the hood, cover, template, connection ring (Extraction of air to the outside), non return smoke valve, Instruction for use and installation

Introduction

Extractor version

- The hood is supplied as an extractor unit and can also be used with a filtering function by fitting one charcoal filter (special accessory).
- You will need original AEG charcoal filter for this function (see Special Accessories).
- The unit features two outlet holes, one of which **A** is located on the top of the unit while the other **B** is located on the rear.
- To connect up the hose, you should first fit the bayonet-mounting flange **C** (\varnothing 120 mm) on the outlet required (if using the top outlet, fix the flange in place using the screw supplied as shown in **Fig. 1**). Close off the unused hole using the bayonet fitting caps **D**.
- **Warning!** If it is decided to use the rear outlet hole **B**, first remove the sponge **E** that closes that hole. **Fig. 2**.

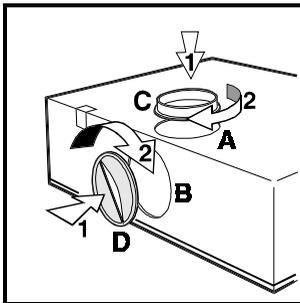


Fig. 1

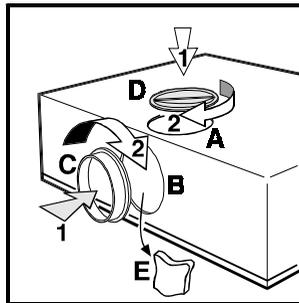


Fig. 2

Filter Version

- The air is filtered and recirculated through the front grid.
- Move the lever **G** to position **F** - **Fig. 3**.
- You will need an original AEG KF14 charcoal filter for the filtering function. (See Special Accessories).

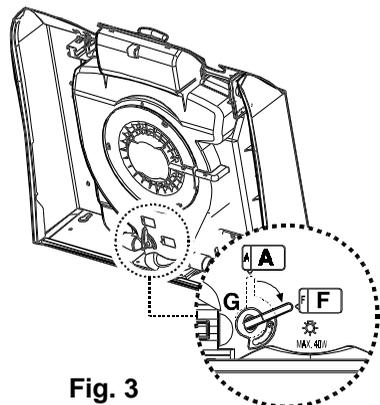



Fig. 3

Using the cooker hood

The control panel

- The hood is fitted with one motor having several speed. Best results are obtained by using a low speed for normal conditions and high speed when odours are more concentrated. Turn the hood on a few minutes before you start cooking then you will get an underpressure in the kitchen. It should be left on after cooking for about 15 minutes or until all odours have disappeared. The control switches are located on the unit's front panel:

- A:** Main switch, hood on/off.
B: Start and choice of motor speed 1-2-3-1-2.....
C: Indicates speed 1 (LED).
D: Indicates speed 2 (LED).
E: Indicates speed 3 (LED).
F: Indicates Intensive speed (LED).
G: Intensive speed on/off. The Intensive speed runs for 5 minutes:
- If the hood is on when the Intensive speed is activated, the hood revert to previous speed after 5 minutes.
- If the hood is off when the Intensive speed is activated, the hood will automaticly be turned off after 5 minutes.
To interrupt the Intensive speed, press button A or B.
H: Light on/off.

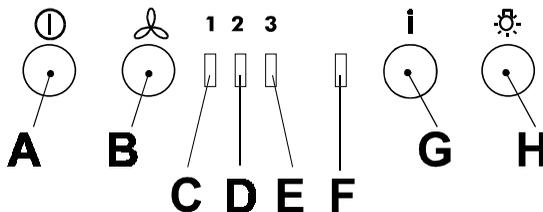

Should the hood or the controls fail to operate: disconnect the power supply for at least 5 seconds, then turn the hood back on again.

Correct ventilation

If the cooker hood is to work correctly there must be an underpressure in the kitchen. It is important to keep the kitchen windows closed and have a window in an adjacent room open.

Important to know

Not applicable for recirculation. Great care must be taken if the hood is used at the same time as a burner or fireplace (e.g. gas, diesel, coal or wood heaters, water heaters, etc.), as the hood will expel air which is required by these other appliances. Attend to it by opening a window. The negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.

Maintenance and cleaning



Disconnect the cooker hood from the power supply prior to cleaning the appliance, either by removing the plug from the mains or removing the fuse.



Clean the filter regularly. The grease deposits in the filter and discharge tube are fire hazards where a hotplate (or another heat source) is left on by error.

Cleaning the hood

Clean the outside of the hood using a damp cloth and a mild detergent. Never use corrosive, abrasive or flammable cleaning products.

Cleaning the grease filters

Clean the filter every month or every other month according to how much the hood is used. The cleaner the filters, the more grease they collect. To remove the filters (Fig. 4):

- First of all, push the stop **Q** on the metal grease filter **N** back, and then extract the filter by pulling downward. **Fig. 4.**

The filter is made of aluminium wires on which the grease collects. Clean the filter in hot water using a detergent, or in a dishwasher. Let the filter dry before putting it back. Note that a dishwasher may discolour the filter.

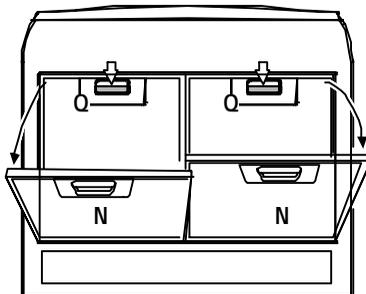


Fig. 4

Changing and cleaning the charcoal filter

The charcoal filter should only be used if you want to use the hood in its filtering function. The charcoal filters absorb smells and odours. Unlike other charcoal filters, the **LONGLIFE** charcoal filter can be cleaned and reactivated. At normal use the filter should be cleaned every second month. The best way to clean the filter is in the dishwasher. Use normal detergent and choose the highest temperature (65° C). Wash the filter separately so that no food parts gets stuck on the filter and later causes bad odours. To reactivate the charcoal, the filter should be dried in an oven for 10 minutes with a temperature of maximum 100° C.

After approximately three years of use, the charcoal filter should be replaced with a new, as the odour reduction capacity will be reduced.

- **Mounting**

Remove the grease filters and fit one LONG LIFE charcoal filter **S** on the rear side of each grease filter, fix each with two metal wires **Z**. **Fig. 5.**

- **To dismantle** proceed in reverse order.

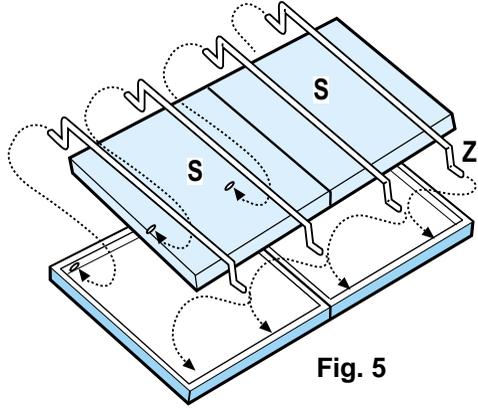


Fig. 5

Changing the light bulb

- Disconnect the unit from the mains power supply.
- Remove the grease filters.
- Replace the old light bulb with a new light bulb of the same kind.
- Refit the grease filters.
- If the light does not come on, make sure the bulb has been inserted in correctly before contacting the technical assistance service.

If the cooker hood will not operate

Check the following prior to calling after sales service:

- Has a fuse burnt? Check both fuses and replace if necessary.
- Is the power supply plug inserted properly in the power outlet?
- Has the flexible tube been mounted correctly?
- Is the anti-grease filter clean?
- Are the light bulbs intact and soundly fitted?

If the problem persists, contact the sales center, the after sales service center or an authorized technician. Only use original spare parts. Under no circumstances carry out modifications to the cooker hood which may cause harm to persons and/or damage objects.

After sales service and spare parts

It is important to always indicate the appliance product number and model type when requesting after sales service or ordering spare parts. This information is indicated on the motor casing label.

Guarantee conditions

Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation. The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book. This guarantee does not cover such parts as light bulbs, removable glass-ware or plastic.
3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer's service or authorised agent). AEG reserves the right to stipulate the place of the repair (i.e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The purchaser's statutory rights are not affected by this guarantee.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

The guarantee starts from the date you first purchased your product.

The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.

This guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area.

The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France Senlis +33 (0)3 44 62 20 13

Germany N.rnberg +49 (0)800 234 7378

ItalyPordenone +39 (0) 800 117511

Sweden Stockholm +46 (0)20 78 77 50

UKSlough +44 (0) 1753 219898

Technical data

Model 1400 D

Size	Height	16,3 cm
	Width	59,9 cm
	Depth	53,5 cm
Light		Max 2x7 W
Grease filter		2 st.
Voltage		230 V
Total power		210 W

Special accessories

Charcoal KF 14

E-Nr. 942 120 604

Installation

Unpacking

Check that the cooker hood is not damaged. Transportation damages should immediately be reported to the transport company. Damages, faults and missing parts should immediately be reported to the retailer. Dispose carefully of the packaging material so that it is out of the way of small children.

Position

The cooker hood should be mounted freely hanging on the wall. The cooker hood must be at least 60 cm above electric hobs or electric ranges, or at least 70 cm above gas burners or gas ranges.



The cooker hood cannot be connected to flues of other appliances that run on energy sources other than electricity. Please, keep to the provisions of official directives regarding fume discharge.

Electrical connection

The hood has a power cable with earth connection and the rated voltage is 220 - 240 V.

Wall unit mounting - Fig. 6

- Make the holes on the bottom of the cupboard (2), using the drilling template (1).
Provide an hole also for exhausting pipe (4) ONLY if it is decided to use the hood in Exhausting version (3).
- From inside the cupboard, insert the 4 supplied screws (5) and tighten them in the appropriate holes on the appliance.

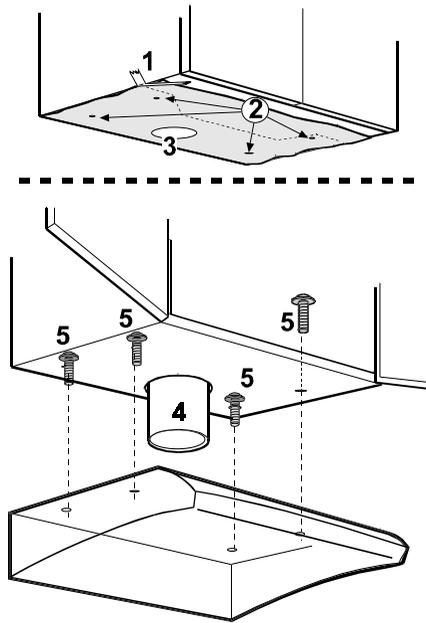


Fig. 6

Wall mounting - Fig. 7

- Sign a centerline onto the wall (1).
- Fit the template onto the wall (2).
- Fix the drilling template to the wall.
- Make 3 \varnothing 8mm holes in the wall (3), 2 at upper points, 1 as desired at lower points.
- Insert the three \varnothing 8mm expansion plugs into the wall (4).
- Insert 2 5x45 screws (5) but do not tighten them completely, hang the hood (6).
- Adjust the unit so that it is positioned at a right angle to the wall by turning the two screws on lower side (7).
- Tighten the 2 upper screws (8).
- From inside the hood, insert the third 5x45 screw into the lower hole (9) and tighten (10).

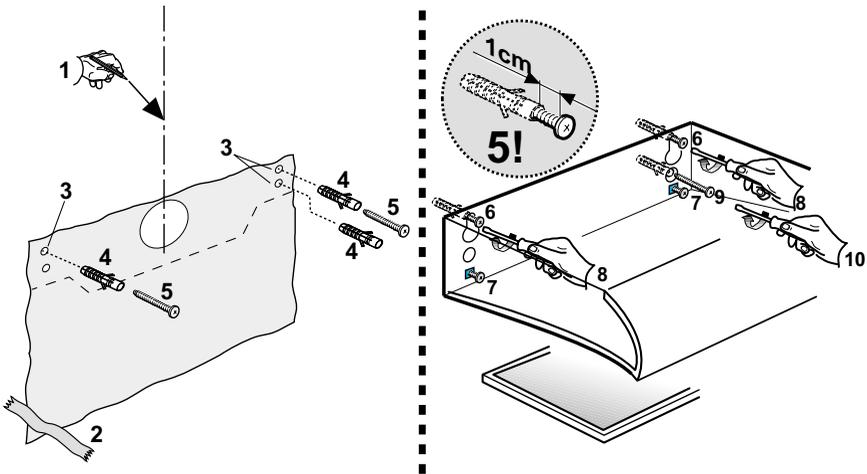


Fig. 7

**AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg**

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

LI1WCB Ed. 07/02