



## **Xbox and Xbox LIVE settings for *LOWRIDERS* for Xbox 360 headphones**

### **Xbox settings-**

1. On the Xbox (not Xbox LIVE) go to dashboard "System Settings" and press "A" button on your controller.
2. Scroll down to "Console Settings" and press "A" again.
3. Select "Audio" then "Digital Output", pressing the "A" button to view each menu, and change the setting from Dolby to Dolby Digital with WMA pro.

### **Xbox LIVE settings-**

1. From the Xbox 360 Dashboard, press the Xbox Guide button (the X button in the center of your controller) to access your Xbox LIVE Settings.
2. Navigate to the "Settings" selection, and press the "A" button on your controller.
3. Select "Preferences" from the menu that follows and press "A".
4. Once in the Preferences menu select "Voice" and press "A" again.
5. On the "Voice" screen, make sure the "Play Through Both" radial is selected for the Voice Output selection and that the volume is set to "10".

### **Wiring Diagram for Xbox 360 and LOWRIDER**

<http://www.skullcandy.com/lowrider-xbox-360-wiring-diagram>

(Xbox, Xbox 360, Xbox LIVE and Dolby names belong to their respective owners)