



PlayStation® 2



Xbox™

 
 


GameCube™



PSone™

User Manual

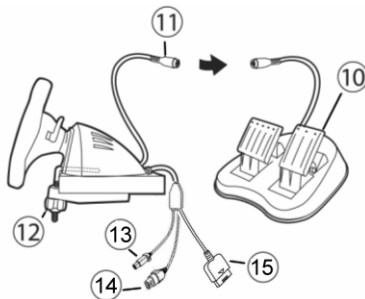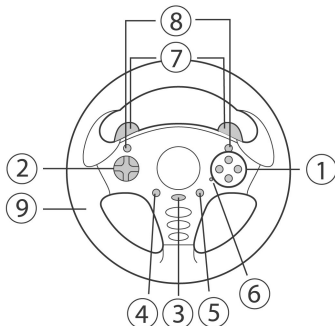

TECHNICAL FEATURES

- ① Action buttons
- ② D-pad
- ③ **Start** button
- ④ **Select / Back / Z** button
- ⑤ **Mode** button for Playstation
- ⑥ LED
- ⑦ 2 digital gearshift levers
- ⑧ Action buttons
- ⑨ Rumble motor for vibration effects (100% compatible)
- ⑩ Analog pedal set
- ⑪ Pedal set connector
- ⑫ Wheel clamping system
- ⑬ Gamecube connector
- ⑭ Xbox connector
- ⑮ Playstation connector

IMPORTANT PRECAUTIONS

- Do not pull on or twist the cable(s).
- Do not attempt to open up or modify this product.
- Switch off your console before connecting or disconnecting the wheel or pedal set.
- When you are done using the Universal Challenge Racing Wheel, switch off your console and disconnect the wheel.

INSTALLING THE WHEEL

Fixing the wheel in place

1. Position the wheel at the edge of a table or other flat surface.
2. Insert the shorter end of the threaded rod into the opening at the base of the wheel.
3. Slide the V-shaped piece onto the threaded rod so that the jaws of the V act as a vise against the table.
4. Place the clamp screw on the threaded rod and tighten the screw until the wheel is perfectly stable. Do not over-tighten the screw as you risk damaging the wheel clamping system and the table.

Connecting the wheel

1. Connect the analog pedal set ⑩ to the pedal set connector ⑪.
2. Make sure that your console is switched off and then connect the console connector ⑬, ⑭, or ⑮ to port 1 of your game console.
3. Switch on your game console.
4. Insert a game into your console.

PROGRAMMING THE WHEEL

PS one console

- Digital mode: as Digital mode is the default mode, the LED ⑥ is off.
- Analog mode (recommended for added realism in most racing games):
 1. To switch to Analog mode, press the **Mode** button ⑤: the LED turns red.
 2. To return to Digital mode, press the **Mode** button ⑤ again.

PlayStation 2 console

The wheel's configuration is Analog by default (the LED ⑥ is red).

PERSONALIZING THE WHEEL

It is possible to use the wheel without the pedal set; in this case, in most games the gas and brake functions will be configured onto the buttons.

To modify the original button configuration in a game:

 
1. Go to the "gamepad control options" of your game.
2. Assign the gas and brake functions to the levers, for example.

Reminder: make sure that your console is switched off before disconnecting the pedal set.



- If your wheel is not working properly, exit the game and disconnect the wheel from your console. Reconnect the wheel and then restart your game.
- When connecting the wheel to your console: to prevent any incorrect calibration, never turn the wheel, press the pedals or buttons.

FUNCTION INDICATION

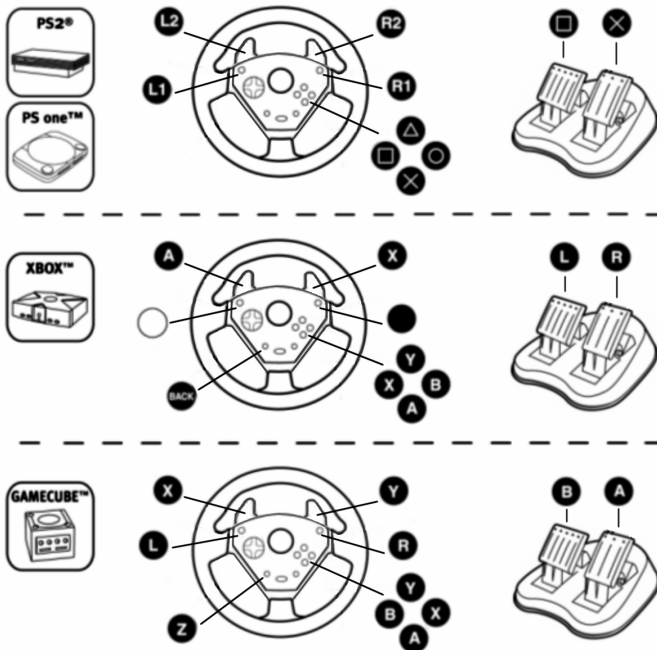

To change the configuration of the other buttons or to disable or re-enable the Vibrations Feedback effects, go to the "gamepad control options" of your game.

COPYRIGHT

© 2005 Guillemot Corporation S.A. All rights reserved. Thrustmaster® is a registered trademark of Guillemot Corporation S.A. Microsoft®, Xbox® and the Xbox™ logo are either registered trademarks or trademarks of Microsoft Corporation in the U.S. and/or other countries. PlayStation® and PS one™ are trademarks and/or registered trademarks of Sony Computer Entertainment, Inc. GameCube™ is a trademark of Nintendo Co. Ltd. All other trademarks and brand names are hereby acknowledged and are property of their respective owners. Illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. Made in China.

ENVIRONMENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling.

This is confirmed by the symbol found on the product, user manual or packaging.

Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment.

Please contact your local authorities for information on the collection point nearest you.



TECHNICAL SUPPORT

If you encounter a problem with your product, please go to <http://ts.thrustmaster.com> and click **Technical Support**. From there you will be able to access various utilities (Frequently Asked Questions (FAQ), the latest versions of drivers and software) that may help to resolve your problem. If the problem persists, you can contact the Thrustmaster products technical support service ("Technical Support"):

By email:

In order to take advantage of technical support by email, you must first register online. The information you provide will help the agents to resolve your problem more quickly. Click **Registration** on the left-hand side of the Technical Support page and follow the on-screen instructions. If you have already registered, fill in the **Username** and **Password** fields and then click **Login**.

By telephone:

United Kingdom	020 7216 0047	price of a national phone call, Monday to Friday, from 12PM to 10PM
United States / Canada	514-279-9911	price of a long distance phone call, Monday to Friday, from 7AM to 5PM (Eastern time)
Australia	1902 262 514	\$1.98/min, Monday to Friday from 9AM to 6PM
Denmark	82 33 28 58	price of a national phone call, Monday to Friday from 1PM to 10PM
Finland	09 81 71 01 54	price of a national phone call, Monday to Friday from 2PM to 11PM
Norway	23 50 01 16	price of a national phone call, Monday to Friday from 1PM to 10PM
Sweden	08-51992032	price of a national phone call, Monday to Friday from 1PM to 11PM

WARRANTY INFORMATION

Worldwide, Guillemot Corporation S.A. ("Guillemot") warrants to the consumer that this Thrustmaster product will be free from material defects and manufacturing flaws for a period of two (2) years from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase (or any other location indicated by Technical Support).

Within the context of this warranty, the consumer's defective product will, at Technical Support's option, be either repaired or replaced. Where authorized by applicable law, the full liability of Guillemot and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Thrustmaster product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This warranty shall not apply: (1) if the product has been modified, opened, altered, or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Guillemot, said software being subject to a specific warranty provided by its publisher.

Additional warranty provisions

In the United States of America and in Canada, this warranty is limited to the product's internal mechanism and external housing. Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited to two (2) years from the date of purchase and are subject to the conditions set forth in this limited warranty. In no event shall Guillemot Corporation S.A. or its affiliates be liable for consequential or incidental damage resulting from the breach of any express or implied warranties. Some States/Provinces do not allow limitation on how long an implied warranty lasts or exclusion or limitation of incidental/consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights which vary from State to State or Province to Province.

FAQs, tips and drivers available at www.thrustmaster.com