

# USER'S GUIDE

# L3D SERIES

## THERMAL DISPENSERS







L3D-15 1.5 gallon




2 gallon

Part # P015 Rev. June 2, 2003



www.fetco.com © 2003 Food Equipment Technologies Company FETCO® and LUXUS® are trademarks or trade names of Food Equipment Technologies Company.

- flashing -

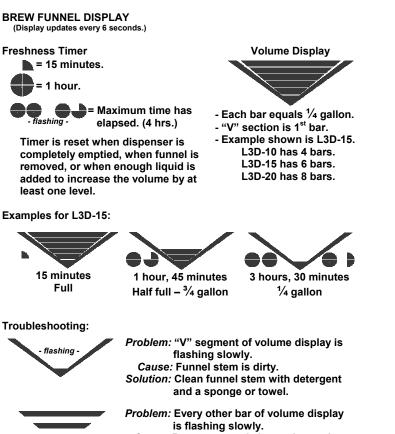

- Cause: Battery power is low or internal malfunction.
- Solution: Replace with new funnel. Battery cannot be replaced.

#### **IMPORTANT SAFEGUARDS**

- To prevent overflows, make sure the dispenser is completely empty before brewing.
- Always remove the funnel for manual filling of the dispenser.
- Do not use bleach or cleaners containing chlorides.
- Use only non-metallic brushes and cleaning pads. ►
- Use only the handle to lift or carry the dispenser.
- Do not use the faucet guard to pull or lift the dispenser.
- Do not submerge the brew funnel.

**CLEANING AND MAINTENANCE** 

Daily:



Important Notice: To maintain proper operation of the funnel display, clean the funnel stem daily under running water with detergent and a sponge or towel. Do not submerge.

- Use any commercial beverage urn cleaner to clean the inside of the dispenser. Follow the cleaner manufacturer's instructions. Make sure to thoroughly rinse the dispenser after cleaning.
- Wash the drip tray and other plastic parts with dish detergent. Avoid abrasives.
- To sanitize the dispenser before filling, brew a batch of water only (no coffee) into the dispenser and allow it to rest for 10 minutes.


Weekly, or as needed:

Remove the faucet upper assembly and inspect the seat cup for wear. Clean or replace if necessary.


**OPENING THE** DISPENSER

> Squeeze tabs together and lift.



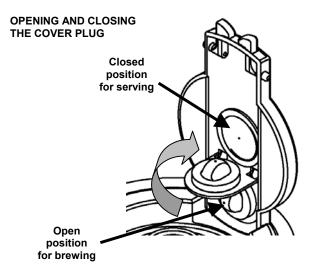


**REMOVING THE BREW FUNNEL** 

 


Important Notice: To maintain proper operation of the funnel display, clean the funnel stem daily under running water with detergent and a sponge or towel. Do not submerge.

- Brew funnel must be removed for manual filling of dispenser. • Removing the funnel resets
- the timer. To extend battery life, remove the funnel when not in use. (Battery cannot be replaced.)


#### **REMOVING THE DRIP TRAY**

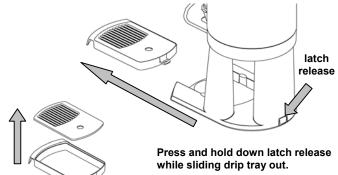

### **REMOVING THE FAUCET GUARD**

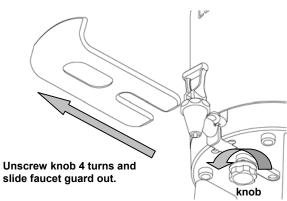

#### **REMOVING THE FAUCET**

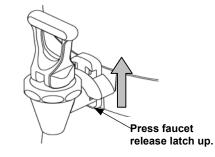

#### **Replacement Parts**

L3D-10	L3D-15	L3D-20
Part #	Part #	Part #
K001	K002	K003
24053	24056	24056
23166	23137	23137
K010	K010	K010
K011	K011	K011
71037	71037	71037
71028	71028	71028
71027	71027	71027
71080	71080	71080
71085	71085	71085
71035	71035	71035
K013	K014	K014
	Part # K001 24053 23166 K010 K011 71037 71028 71027 71080 71085 71035	Part # Part #   K001 K002   24053 24056   23166 23137   K010 K010   K011 K011   71037 71037   71028 71028   71027 71027   71080 71085   71035 71035



Reverse procedure to reinstall faucet. Press release latch down to lock faucet in

Unscrew faucet upper assembly to clean or

replace seat cup.

G

Rotate faucet 180° and pull it out.

