

TV/WB/FM/AM Portable CD Player

Operating Instructions



D-FJ787

©2003 Sony Corporation Printed in Malaysia


<http://www.sony.net/>




Printed on 100 % recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. is a trademark of Sony Corporation.


CD player (front)

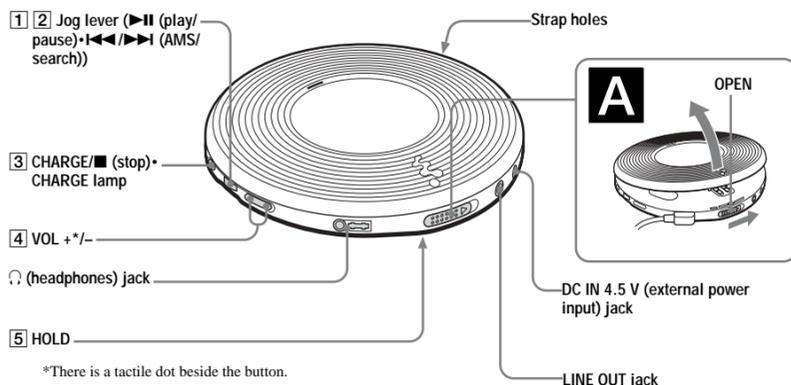




CD player (inside)

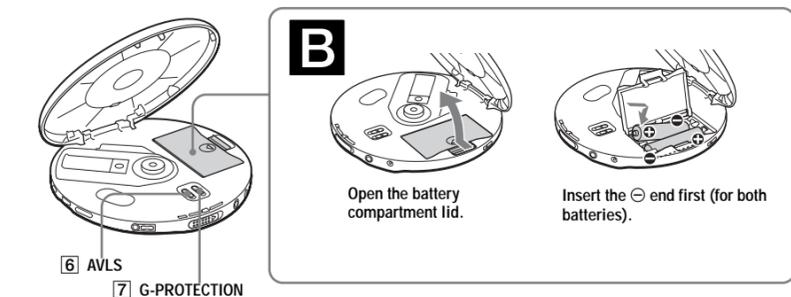

Remote control

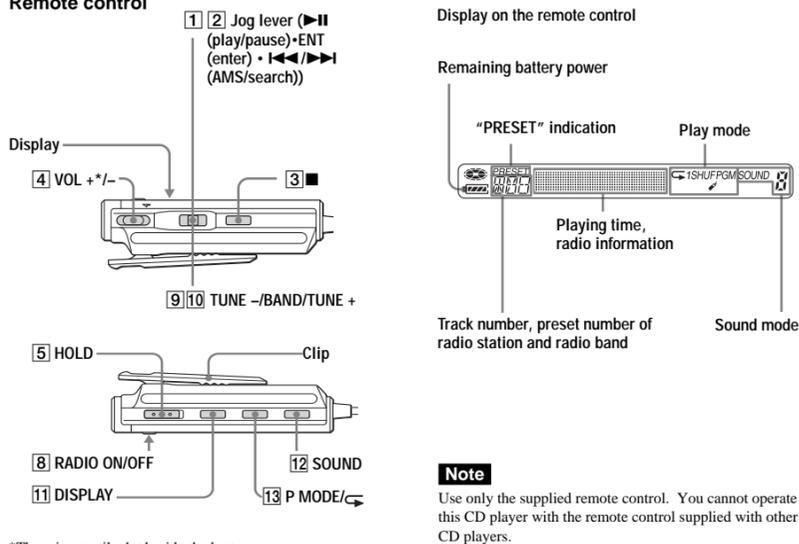

*There is a tactile dot beside the button.

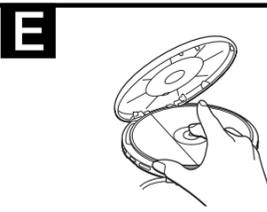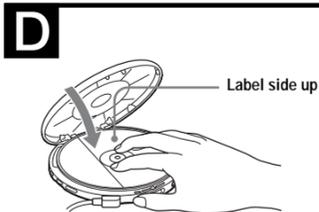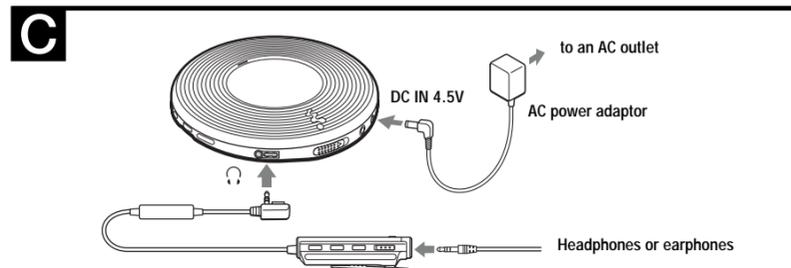

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

• INVISIBLE LASER RADIATION WHEN OPEN
• DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

For the customers in the USA

RECYCLING NICKEL METAL HYDRIDE BATTERIES

Nickel Metal Hydride batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrcc.org/>. **Caution:** Do not handle damaged or leaking Nickel Metal Hydride batteries.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Owner's Record

The model number and the serial number are located at the rear of the CD player. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product. Model No. D-FJ787
Serial No. _____

For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If you have any questions about this product, you may call: Sony Direct Response Center 1-(800)-222-7669 or write to: Sony Direct Response Center 12451 Gateway Blvd. Fort Myers, FL 33913

Declaration of Conformity

Trade Name: SONY
Model No.: D-FJ787
Responsible Party: Sony Electronics Inc.
Address: 680 Kinderkamack Road, Oradell, NJ 07649 USA
Telephone No.: 201-930-6972

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notes on the rechargeable batteries

- To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.
- If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.
- When carrying the rechargeable batteries, use the supplied battery carrying case to prevent unexpected heat. If the rechargeable batteries and the metallic objects get contacted, heat or fire may occur due to a short circuit.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

CD Player

Playing a CD

To insert a CD

- 1 Slide OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (D).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch	Function/Operation
1 Jog lever ▶ (play/pause)	Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.
2 Jog lever ◀◀/▶▶ (AMS*/search)	Flick toward ◀◀ or ▶▶ once to find the beginning of the current/next track. Flick toward ◀◀ or ▶▶ repeatedly to find the beginning of the previous/succeeding tracks. Hold toward ◀◀ or ▶▶ to go backward/forward quickly.
3 CHARGE/■ (■) (stop)	Press to stop playing.
4 VOL +/-	Press to adjust the volume.
5 HOLD	Use to lock the controls on your CD player or remote control to prevent accidental button presses. HOLD on the CD player works only for the player, while HOLD on the remote control works only for the remote control. The CHARGE lamp flashes if you press any button when the HOLD function is activated.
6 AVLS*2	Set to “LIMIT” when you want to keep down the maximum volume to protect your hearing.
7 G-PROTECTION	Protect against sound skipping.*3
8 RADIO ON/OFF	Press to turn on/off the radio.
9 Jog lever BAND	Press to change the band.
10 Jog lever TUNE -/+	When listening to the radio, press to tune in to the station you want. Also press to select the preset station you want.
11 DISPLAY	Press to display the remaining time/tracks. For radio: Press and hold to set the radio to the automatic presetting mode, etc.
12 SOUND	Use to emphasize bass-boosted sound. Press repeatedly to select SOUND 1 or SOUND 2. SOUND 2 enhances bass more than SOUND 1.*4 For radio: Press to switch between “Stereo” and “Mono”.
13 P MODE/↔ (play mode/repeat)	Press repeatedly until the play mode you want appears in the display. No indication: Normal play “1”: Single play “SHUF”: Shuffle play “◀▶”: Bookmarked track play “PGM”: PGM (program) play To repeat the play mode you selected, press and hold until “↔” appears. For radio: Press to switch between the tuning mode and the preset mode.

*1 AMS = Automatic Music Sensor

*2 AVLS = Automatic Volume Limiter System
The AVLS function does not work when listening to the radio.

*3 Sound may skip:
– if the CD player receives stronger continuous shock than expected,
– if a dirty or scratched CD is played or
– when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

*4 If the sound is distorted when using the SOUND function, turn down the volume.
The SOUND function does not work when listening to the radio.

To remove the CD

Remove the CD while pressing the pivot (E).

To turn off the operation beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player. When listening to the radio, you cannot turn off the beep sound for the radio.

- 1 Remove the power source (AC power adaptor, rechargeable batteries or dry batteries) from the CD player.
- 2 Connect the power source while pressing CHARGE/■ on the CD player or ■ on the remote control.

To turn on the beep sound

Remove the power source and then connect the power source without pressing CHARGE/■ or ■.

Playing your favorite tracks by adding Bookmarks (Bookmarked track play)

You can add Bookmarks to up to 99 tracks for each CD. You can use this function for up to 10 CDs.

To add Bookmarks

- 1 During playback of the track where you want to add a Bookmark, press and hold the jog lever until “◀▶” (Bookmark) flashes in the display. When the Bookmark has been added successfully, flashing of “◀▶” becomes slow.
- 2 Repeat step 1 to add Bookmarks to the tracks you want.

To listen to the tracks with Bookmarks

- 1 Press P MODE/↔ repeatedly until “◀▶” flashes.
- 2 Press the jog lever. “◀▶” lights up in the display and the playback of the tracks with Bookmarks starts.

To remove the Bookmarks

During playback of the track with a Bookmark, press and hold the jog lever until “◀▶” disappears from the display.

To check the tracks with Bookmarks

During playback of the tracks with Bookmarks, “◀▶” keeps flashing slowly in the display.

Notes

- During playback of the tracks with Bookmarks, tracks are played in order of track number, and not in the order you added the Bookmarks.
- If you try to add Bookmarks to the tracks on the 11th CD, the Bookmarks of the CD you played back first will be erased.
- If you remove all power sources, all Bookmarks stored in memory will be erased.
- If you continue playing the CD player on the rechargeable batteries without charging the batteries even though “Lobatt” is displayed, all Bookmarks stored in memory will be erased.

Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 64 tracks in your favorite order.

- 1 During playback, press P MODE/↔ repeatedly until “PGM” appears.
- 2 Flick the jog lever toward ◀◀ or ▶▶ to select a track.
- 3 Press the jog lever to enter the selected track. “000” appears and the playing order increases by one.
- 4 Repeat steps 2 and 3 to select the tracks in your favorite order.
- 5 Press and hold the jog lever until the PGM play starts.

To check the program

During programming:

Press the jog lever repeatedly before step 5.

During the PGM play:

Press P MODE/↔ repeatedly until “PGM” flashes, then press the jog lever repeatedly. Each time you press the jog lever, the track number appears.

Notes

- When you finish entering the 64th track in step 3, the first selected track appears in the display.
- If you select more than 64 tracks, the first selected tracks are erased.

