

Honeywell
Barometric Weather Forecaster

(TE653ELW)
USER MANUAL

TABLE OF CONTENTS

INTRODUCTION	3
STANDARD PACKAGE CONTENTS	3
BEFORE YOU BEGIN	4
PRODUCT OVERVIEW	5
REMOTE TEMPERATURE & HUMIDITY SENSOR	5
MAIN UNIT	7
WEATHER FORECAST	14
PRESSURE HISTORY CHART	14
MOON PHASE ICONS	15
PRESSURE MODE	15
REMOTE AND INDOOR TEMPERATURE & HUMIDITY	16
AUTO-SCANNING	17
PROGRAMMABLE TEMPERATURE ALARM	17
COMFORT LEVEL INDICATORS	18
MAXIMUM AND MINIMUM READINGS	19
LOST COMMUNICATION	19
TRANSMISSION COLLISION	20
WWVB RADIO CONTROLLED TIME	20
ATOMIC CLOCK	21
TIME AND CALENDAR DISPLAY MODES	22
MANUAL SETTINGS	22
CLOCK ALARMS	23
SNOOZE	24
BACKLIGHT	25
TROUBLESHOOTING	25
PRECAUTIONS	26
SPECIFICATIONS	26
FCC STATEMENT	28
DECLARATION OF CONFORMITY	29
STANDARD WARRANTY INFORMATION	30

INTRODUCTION



Thank you for selecting the Honeywell Barometric Weather Forecaster. This device combines precise time keeping with monitoring and displaying the temperature/humidity data from up to three remote locations.

In this package you will find:

- One main unit (receiver) **TE653ELW**
- One three-channel remote temperature and humidity sensor (transmitter) **TS33C**
- One User Manual

Please keep this manual handy as you use your new item. It contains practical step-by-step instructions, as well as technical specifications and precautions you should know.

STANDARD PACKAGE CONTENTS

Picture	Components
	Main Unit (receiver)
	Thermo Hygrometer Sensor (transmitter)

BEFORE YOU BEGIN

- We recommend using **alkaline batteries** for the remote temperature and humidity sensor and the main unit when temperatures are **above 32°F (0°C)**. We recommend using **lithium batteries** for the remote sensor when temperatures are **below 32°F (0°C)**
- Avoid using rechargeable batteries. (Rechargeable batteries cannot maintain correct power requirements)
- **ALWAYS** install batteries in the **remote** sensor *before* the main unit
- Insert batteries before first use, matching the polarity in the battery compartment
- Remove protective plastic screen from LCD display (if any)
- During an initial setup, place the remote sensor close to the main unit
- After reception is established (all remote readings will appear on the main unit's display), position the remote sensor and the main unit within the effective transmission range of 100 feet (30 meters). Ideally it should be placed within the line of sight from the main unit.
- Transmission/reception range may be affected by trees, metal structures and electronic appliances, by surrounding building materials and the way how the receiver (main unit) and transmitter (remote sensor) are positioned.
- The main unit must be placed indoors.
- Place the remote sensor so that it faces the main unit (receiver), minimizing obstructions such as doors, walls and furniture.

NOTE: When the temperature falls below freezing, the batteries in the outdoor remote sensor may have reduced voltage supply and a shorter effective range. We recommend using lithium batteries at temperatures of 32°F (0°C) and below.

IMPORTANT: Make sure that remote sensor is easily accessible for cleaning

and maintenance.


We recommend cleaning the remote sensor periodically, as the dirt and debris may affect sensor accuracy.

PRODUCT OVERVIEW

REMOTE TEMPERATURE & HUMIDITY SENSOR

FEATURES

- Remote data transmission to the main unit via 433 MHz frequency
- LCD displays temperature, humidity and channel
- Selection of the temperature display in Celsius or Fahrenheit
- Three (3) transmission channels selection
- Case can be wall mounted using built-in hanger

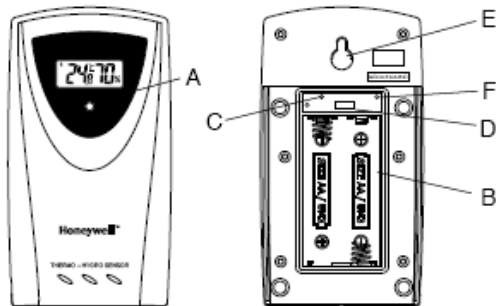

A. LED INDICATOR

- Flashes once when the remote sensor transmits a reading to the main unit.
- Flashes twice when battery power is low.

B. BATTERY COMPARTMENT

- Holds two AA-size batteries

C. RESET

- Resets all previous settings

5

D. CHANNEL SWITCH

- Selects the desired channel -1,2 or 3

E. WALL-MOUNT RECESSED OPENING

- Keeps the remote sensor on the wall

F. °C/°F SWITCH

- Selects the temperature display in Fahrenheit or Celsius

NOTE: Install the batteries; select the channel and temperature in °C or °F before mounting the sensor.

BATTERY INSTALLATION

- Remove the screws from the battery compartment with a small Phillips screwdriver.
- Set the channel 1 through 3. The switch is located in the battery compartment. Channel 1 is typically selected if only one remote sensor is being used.
- Install 2 "AA" size alkaline batteries (not included) matching the polarities shown in the battery compartment.
- Select the temperature unit in °F or °C by pressing °C/°F switch with a paper clip or similar tool
- Replace the battery compartment door and secure the screws.
- Secure the remote sensor in the desired location.

MOUNTING

- The remote thermo-hygrometer sensor can be placed on the flat surface or mounted on the wall in vertical position
- Use the wall mount hardware and screws when mounting the thermo-hygrometer sensor on the wall

PLACEMENT

- The remote thermo-hygrometer sensor should be placed in the area

5

6

with a free air circulation and sheltered from the direct sunlight and an extreme weather conditions.

- Ideally, place the thermo-hygrometer sensor above the natural surfaces (such as a grassy lawn).
- Avoid placing the thermo-hygrometer sensor near sources of heat, such as chimneys and heating elements.
- Avoid any areas collecting and radiating a heat from the sun, such as metal, brick or concrete structures, paving, patios and decks.
- The international standard for the valid air temperature measurements is 4 feet (1.25meters) above the ground.

OPERATION

Immediately after batteries are correctly installed, the remote sensor will start transmitting a temperature and humidity data to the main unit.

MAIN UNIT

The main unit measures pressure, indoor temperature, humidity, and receives atomic time data from the US Atomic Clock and all remote sensors. It should be placed indoors.

FEATURES

Time

- Time automatically sets to the US Atomic Clock
- 12 or 24 hour time format
- Manual adjustment of time and date
- Day of the week displayed in English, Spanish, French, German and Italian
- Moon Phase calendar
- Dual crescendo alarms with programmable snooze
- Programmable Ice Warning Alarm


Weather


- Weather forecast for the next 12 to 24 hour in five large icons: Sunny, Partly Cloudy, Cloudy, Rainy and Snowy
- Barometric pressure in imperial or metric units
- Altitude adjustment for pressure compensation
- 24 hour barometric pressure history chart
- Indoor/Outdoor Temperature & Humidity in up to 3 remote locations (additional sensors required)
- Three Remote Channels Auto-Scan feature
- Minimum and maximum memory for indoor and remote temperature and humidity
- Comfort level indicators
- Programmable Hi/Low Temperature Alarm
- Operating range of 100 feet (30 meters)
- Low Battery Indicators
- Enhanced Blue Backlight

Power


- 2 AA batteries (main unit)
- 2 AA batteries (remote sensor)

FRONT/TOP

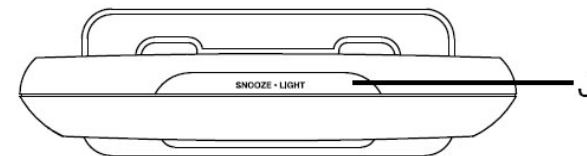

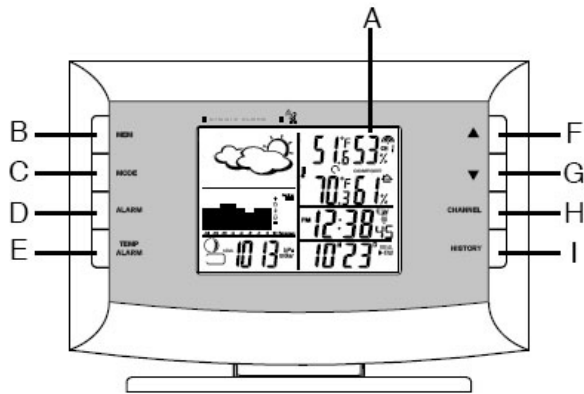

REAR/SIDE

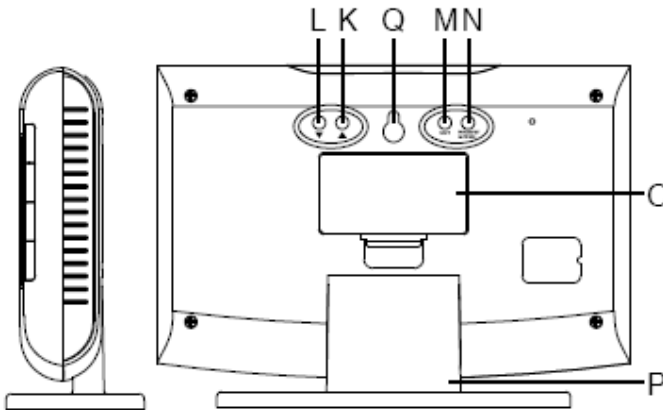

A. WEATHER AND TIME IN EASY-TO READ DIGITS

B. MEM button

- Allows displaying current, minimum, maximum readings of the indoor and remote temperature & humidity
- When depressed and held, clears collected records memory

C. MODE button

- Allows toggling between two different clock modes – time with seconds and time with the day of the week
- When depressed and held, activates clock programming mode
- Confirms programmed parameters

D. ALARM button

- Allows toggling between the calendar display and three time alarm modes
- When depressed and held, enters into the alarm programming mode for a selected parameter

E. TEMP ALARM button

- Allows toggling between high/low limits for temperature alarm and current outdoor temperature reading
- Activates a high/low temperature alarm programming mode

F. UP (▲) button

- Increases the parameters
- When depressed and held, activates manual search for atomic time signal
- Enables or disables time alarms (W) and (S) and Ice Warning Alarm

G. DOWN (▼) button

- Decreases the parameters
- When depressed and held activates manual search for signals from the remote sensors
- Enables or disables time alarms (W) and (S) and Ice Warning Alarm

H. CHANNEL button

- Recalls a different remote sensor reading – 1,2 or 3
- When depressed and held activates the remote channels auto-scan feature

I. HISTORY button

- Allows displaying pressure history records

J. SNOOZE/LIGHT button

- Stops all alarms temporarily
- Activates a backlight for 5 seconds

K. Back panel UP (▲) button

Increases the parameters of pressure and altitude

L. Back panel DOWN (▼) button

Decreases the parameters of pressure and altitude

M. Back panel UNIT button

When depressed and held activates pressure & altitude units programming mode

N. Back panel PRESSURE/ALTITUDE button

- Allows toggling between **SEA LEVEL** pressure, **LOCAL** pressure and **ALTITUDE** modes
- When depressed and held, enters into the altitude programming mode

O. BATTERY COMPARTMENT

Accommodates 2 (two) UM-3 or AA 1.5V alkaline batteries

P. REMOVABLE TABLE STAND

Holds unit in upright position on a flat surface

Q. WALL- MOUNT RECESSED OPENING

Keeps the unit on the wall

BATTERY INSTALLATION

- Remove the battery compartment door located on the back.
- Insert two (2) AA size batteries according to the polarities shown and replace the battery compartment door.
- When placing the main unit on the table or other horizontal surface, unfold the table stand adjusting it to the desired viewing angle.

- When mounting the main unit on the wall or vertical surface, remove the table stand from the unit.

PLACEMENT

- Make sure that the main unit is locating within the operating range of the remote sensor
- Ideally the remote sensor should be mounted within the line of sight of the main unit.
- Transmission range may be affected by trees, metal structures and electronic appliances.
- Test reception before permanently mounting the remote sensor

Avoid placing the main unit in the following areas:

- Direct sunlight and surfaces emitting and radiating heat, such as heating ducts or air conditioners.
- Areas with interference from the wireless devices (such as cordless phones, radio headsets, baby listening devices) and electronic appliances.

OPERATION

The weather forecaster is designed to measure local pressure and calculate the other two parameters based on the Local Pressure. Sea Level Pressure and Altitude are interdependent. If you adjust altitude, it will calculate sea level pressure, if you adjust sea level pressure, it will automatically calculate altitude. You can only adjust one of the two – either sea level barometric pressure or altitude.

If you wish to know pressure changes at your **specific location (house)**, the **LOCAL** barometric pressure should be selected. In this case, the local altitude/elevation must be programmed according to GPS readings, Internet, etc.

If you wish to know pressure changes in your **surrounding metro area**, then

SEA LEVEL barometric pressure option should be selected. In this case, the **SEA LEVEL** barometric pressure value can be adjusted according to the local metro area weather information. (Sources – local TV or radio station, etc).
NOTE: Locate your altitude with a portable GPS receiver or topographical map .Locate barometric pressure at: <http://weather.noaa.gov/weather/ccus.html> or, alternatively, from local radio or TV weather channels.

Once the main unit is powered, the display will show all available LCD segments for a moment

IMPORTANT: All of the display functions will be locked, allowing setting pressure parameters and your local altitude. The locked display will show the abbreviation “hPa/mBar” flashing in the **Pressure Mode**, indoor temperature and humidity readings in **Temperature/Humidity Mode**, default time in **Clock Mode** and a default date in the **Alarm/Calendar Mode**.

If the pressure and altitude are not configured during this time, the unit will self-calibrate in a few minutes and show the default settings for the pressure and altitude (sea level) and the remote sensor reading.

NOTE: This is the only time when you can enter/adjust your local altitude units and value.

To set the pressure & altitude units and program your altitude, use the main unit buttons located on the back:






- Press **UP** or **DOWN** button on the back of the unit selecting the pressure in **inHg** or **hPa/mBar**
- Press **UNIT** button to confirm and move to the altitude unit selection mode
- Press **UP** or **DOWN** button selecting the altitude unit in feet or meters.
- Press **UNIT** button to confirm and move to the altitude value programming mode.

- Press **UP** or **DOWN** to adjust an altitude value. Press and hold either button for the advanced setting.
- Press **PRESSURE/ALTITUDE** button to confirm the programmed altitude.

Unit will show dashes “- - -” instead of local barometric pressure for a moment and then will self-adjust to the new altitude

WEATHER FORECAST

This unit is capable of detecting the atmospheric pressure changes. Based on collected weather data, it forecasts the weather for the next 12 to 24 hours.


When the display shows...					
Forecast is...	Sunny	Partly Cloudy	Cloudy	Rainy	Snowy

Note: The weather forecast accuracy is approximately 70%.

Display shows forecasted, not current conditions. The SUNNY icon indicates clear weather, even when displayed during the night-time

PRESSURE HISTORY CHART

The pressure bar graph shows barometric pressure variations over the past 24 hours. This is very useful for understanding the Barometric trends that are used in weather forecasting. Each bar icon represents 0.06 inHg or 2mBar

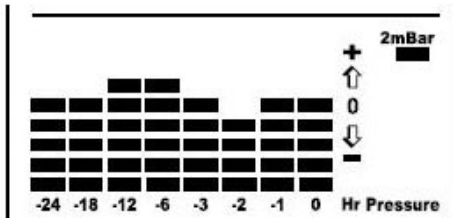

MOON PHASE ICONS



FULL



LAST



NEW




FIRST

PRESSURE MODE

The pressure mode indicates the current local barometric pressure, the sea level pressure and a moon phase. It also displays barometric pressure value for the past 36 hours in 1 hour intervals. Pressure can be set in inHG or hPa/mBar and altitude can be set in feet or meters.

VIEWING PRESSURE AND ALTITUDE INFORMATION

To view a pressure or altitude information, press **PRESSURE/ALTITUDE** button on the back rotating between the sea level pressure, local pressure and local altitude screens.

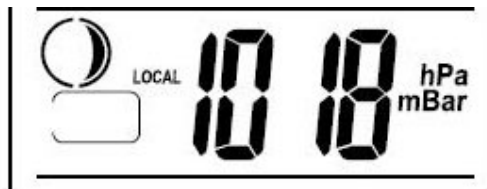

PROGRAMMING SEA LEVEL PRESSURE

- Press **PRESSURE/ALTITUDE** button on the back until the pressure with “SEA LEVEL” mark is displayed.
- Press and hold **PRESSURE/ALTITUDE** button until the pressure digits are flashing.
- Set the sea level pressure by pressing **UP** or **DOWN** buttons. Press and hold either button for the quick digits advance.
- Press **PRESSURE/ALTITUDE** button to confirm selection.

REMOTE AND INDOOR TEMPERATURE & HUMIDITY

After batteries are installed; remote sensor will transmit temperature and humidity data at 45 second intervals. The main unit may take up to two minutes to receive the initial readings. Upon successful reception, remote temperature and humidity will appear next to the weather forecast section of the main unit’s display (the default remote channel is channel one). The main unit will automatically update readings at 45-second intervals.

After communication between the main unit and remote sensor has been established, secure the remote sensor in the desired location.

The wave icon is located above the remote channel number indicates the reception status from the corresponding remote sensor.

There are three following types of the reception status may be displayed:

The unit is in a searching mode.	
Temperature and humidity readings are securely registered.	
No signals detected.	---

The indoor temperature and humidity with the icon **IN** are located below the remote temperature and humidity information line.

NOTE: If the indoor or remote temperature or humidity goes above or below operating range stated in specifications, the main unit's display (weather) will show dashes “- - -” on the corresponding line.

AUTO-SCANNING

Press and hold the **CHANNEL** button for 2 seconds – the icon “**U**” will appear on the main unit display to the left of the **COMFORT LEVEL** indicator. All three remote channels data will be displayed one-by-one automatically with 11 seconds delay in the following sequence: Channel 1, Channel 2 and Channel 3.

To exit from scanning mode, press and hold the **CHANNEL** button for 2 seconds, and the icon “**U**” will disappear, returning the main unit display to the default display mode.

PROGRAMMABLE TEMPERATURE ALARM

This product allows manual programming of a **HIGH** and **LOW** temperature alarms for all three remote channels at the same time. Once the actual remote temperature will reach the pre-set high or low limits, the alarm will sound. The alarm can be set for temperature readings between -58 °F and 158°F.

To program the temperature alarm for all three remote channels,

- Press the **TEMP ALARM** button once to enter into the **High Temperature Alarm** programming mode – the abbreviation “**OF**” with the high temperature limit symbol (**▲**) will be displayed on the remote temperature line
- Press and hold **TEMP ALARM** button until the abbreviation “**OF**” will

flash

- Use **UP**(**▲**) or **DOWN**(**▼**) arrow buttons to adjust the higher temperature limit
- Press the **TEMP ALARM** button to confirm the selected value
- Press the **TEMP ALARM** button once to enter into the **Low Temperature Alarm** programming mode – the abbreviation “**OF**” with the low temperature limit symbol (**▼**) will be displayed on the remote temperature line
- Press and hold **TEMP ALARM** button until the abbreviation “**OF**” will flash
- Use **UP**(**▲**) or **DOWN**(**▼**) arrow buttons to adjust the lower temperature limit
- Press the **TEMP ALARM** button to confirm the selected value

COMFORT LEVEL INDICATORS

This product is capable of detecting and displaying the current indoor comfort levels of surrounding environment. The comfort level is displayed in the weather station portion of the main unit's display. It is based on the combination of the current indoor temperature and humidity readings. There are following comfort levels may be displayed: **COMFORT** (comfortable); **WET** (wet) and **DRY** (dry)

Indicator displayed	Temperature Range	Humidity Range	Shows current condition
<i>COMFORT</i>	20°C to 25°C (68°F to 77°F)	40%RH- 70%RH	Ideal for both relative humidity and temperature

<i>WET</i>	-5°C to 50°C (23°F to 122°F)	OVER 70%RH	Contains excess moisture
<i>DRY</i>	5°C to 50°C (23°F to 122°F)	BELOW 40%RH	Contains inadequate moisture

MAXIMUM AND MINIMUM READINGS

The maximum and minimum record of the indoor and remote temperature and humidity will be automatically stored in the memory of the main unit (receiver).

To display the minimum, maximum or the current reading press **MEM** button.

If no button is pressed for the next 15 seconds, the unit will return to the current temperature and humidity display.

To clear the memory, press and hold **MEM** button for two seconds and all previously stored readings will be erased.

LOST COMMUNICATION

If the main unit display line for the remote sensor reading goes blank, press and hold **DOWN (▼)** button for 2 seconds to begin a new signal search. If the signal still isn't received, please make sure that:

- The remote sensor is in its proper location.
- The distance between main unit and remote sensor(s) is not over 100 feet (30 meters)
- The path between units is clear of obstacles. Shorten the distance if necessary.
- Fresh batteries are installed correctly in both remote sensor and main unit.

If there is no reception, please perform the following steps:

- Bring the main unit and remote sensor close together.
- Remove four (4) small screws from the back of the remote sensor with small Phillips screwdriver, and open the battery compartment.
- Remove the batteries from the battery compartment and reinstall them in the same manner. Remote sensor LED indicator will flash showing transmission of the signal.
- Remove the batteries from the main unit and reinstall them in the same manner.
- On the main unit select the same channel number using **CHANNEL** button as set on the remote sensor. The remote temperature and humidity appeared on the main unit's display will show that transmission is being received successfully.

TRANSMISSION COLLISION

Signals from the other household devices such as wireless doorbells, home security systems, and entry control, may interfere with this product or cause temporary reception interruption. This is normal and will not affect the general performance of the product. The transmission and reception of the temperature and humidity readings will resume once the interference subsides.

WWVB RADIO CONTROLLED TIME

The NIST (National Institute of Standards and Technology) radio station (WWVB) is located in Ft. Collins, Colorado. It transmits an exact time signal continuously throughout the most of the continental United States at 60 KHz frequency. The Barometric Weather Forecaster can receive this WWVB signal through the internal antenna from up to 2,000 miles away. Due to the nature of the Earth's ionosphere, reception can be limited during the daylight hours. The radio controlled clock will search for an alternate station that receives the

atomic time signal from the NIST Atomic clock in Boulder, Colorado.


The WWVB tower icon on the unit's display will flash indicating a radio signal reception from the WWVB station. If the tower icon is not fully lit, or if the time and date are not set automatically, please consider the following:

- During night-time hours, atmospheric disturbances are typically less severe and radio signal reception may improve. A single daily reception is sufficient enough to keep the clock accuracy within 1 second.
- Make sure the unit is positioned at 8 feet (2 meters) distance from any interference source such as a TV, computer monitor, microwave, etc.
- Within concrete wall rooms such as basements or office buildings, the received signal may be weakened. Always place the Weather Forecaster near the window for better reception.

ATOMIC CLOCK

Immediately after establishing communication between the main unit and remote sensor, the atomic time signal receiver will open and start to search for the atomic time signal. The search usually takes between 5-8 minutes.

NOTE: Do not press any buttons on the main unit during auto search as it may interrupt product's operation, and you will need to start set up procedure again.

Once the atomic time signal is received, the date and time will be set automatically, and the  icon will appear.

NOTE: It is necessary to set your Time Zone, having in mind that the default zone is a US Pacific Standard Time (PST). (Refer to **MANUAL SETTINGS** section)

If the time signal has not been received in 8 minutes, you may use the **MODE** button to set the time and date manually. (Refer to the **MANUAL SETTINGS** section).

After the clock is set manually, place the Weather Forecaster by the window for the better reception. The atomic clock receiver is programmed that it will continue to search for the atomic time signal daily for every hour between 1:00 am and 4:30 am.

Once the time signal has been successfully received, the time and date will be updated automatically.

TIME AND CALENDAR DISPLAY MODES

The Barometric Weather Forecaster displays current time in two display modes – in hour-minutes-seconds format and in hour-minutes-day.

The date is displayed in month-date format.

MANUAL SETTINGS

NOTE: Use buttons on the front

It is necessary to set the desired US **TIME ZONE**.

TIME ZONE

- Press **MODE** button **once** so that the **Day of the Week** abbreviation is displayed to the right of the time; for example: **pm 2:37tu**
- Select the Time Zone by pressing and holding **UP (▲)** button for 3 seconds
- Keep holding **UP (▲)** button until the desired US Time Zone (Pacific, Mountain, Central or Eastern) is highlighted on the display's US map, located to the right of the time display and above the day of the week
- Release the **UP (▲)** button. The Time Zone is set

CLOCK

- Press and hold **MODE** button for 3 seconds: the year will flash. Press **UP (▲)** or **DOWN (▼)** to change flashing digits.
- After the year is set, press **MODE** button to confirm and move to the

next parameter (month)

- Continue setting month, date, hour, minutes, language for the day of the week and temperature in Fahrenheit or Celsius
- Press **MODE** for the last time to return to the time of day with seconds, after the last parameter is set

CLOCK ALARMS

The Barometric Weather Forecaster has two time alarms – Weekday alarm (**W**) and Single day alarm(**S**) - and one Ice Warning Alarm (**PRE-AL**).

- If **Weekday (W)** alarm is activated, it will sound at the set time and the alarm icon will flash Mondays through Fridays
- If **Single (S)** day alarm is activated, it will sound at the set time and the alarm icon will flash only for this specific day and will not activate on subsequent days
- If **Ice Warning Alarm (PRE-AL)** is activated, it will sound at the set time and alarm icon will flash once the remote temperature for Channel One (1) will reach 32°F(0°C) and below

NOTE: Ice Warning Alarm can be set only if one or both - Weekday or Single alarm - are programmed.

SETTING THE WEEKDAY (W) AND SINGLE DAY (S) ALARMS

- Press **ALARM** button once to enter into the alarms setting mode. The default alarm is a Weekday alarm (**W**). The abbreviation “**OFF**” with a letter “**W**” next to it will be displayed, if the alarm has not been set previously
- Press and hold **ALARM** button for two seconds. The hour digit will flash
- Adjust the hour using **UP (▲)** or **DOWN (▼)** buttons

- Press **ALARM** button again. The minute digits will flash
- Adjust the minutes using **UP (▲)** or **DOWN (▼)** buttons
- Press **ALARM** button again to confirm and the weekday alarm time will be set
- Set **Single (S)** day alarm if desired in the same manner

SETTING THE ICE WARNING ALARM (PRE-AL)

If Weekday (W) or Single day (S) alarm is set, the Ice Warning Alarm (Pre-AL) can be programmed.

- Press **ALARM** button once to enter into the Ice Warning Alarm setting mode. The abbreviation **OFF** with a **PRE-AL** next to it will be displayed.
- Press and hold **ALARM** button for two seconds. The number **30** will flash, meaning that if selected, the alarm will sound 30 minutes earlier than the Weekday or Single alarm.
- Select the desired Ice Warning Alarm interval in 15 minutes increments between 15 and 90 minutes, using **UP (▲)** or **DOWN (▼)** buttons
- Press **ALARM** button to confirm and exit from the alarm setting mode.

ACTIVATING THE ALARM

- Press **ALARM** button to enter into the desired alarm mode.
- Press **UP (▲)** to activate or **DOWN (▼)** to deactivate desired alarm. When alarms are activated, the corresponding icons **W**, **S** or **PRE-AL** will be displayed.

SNOOZE

When the time alarm sounds, press the **SNOOZE/LIGHT** button to temporarily stop it. After the **SNOOZE/LIGHT** is depressed, the time alarm sound will resume in four minutes.

If the alarm is not disabled after that, it will sound for two more minutes and then will stop by itself.

BACKLIGHT

The backlight feature is enabled only after the time is set.

To activate the backlight press the **SNOOZE/LIGHT** button once, and both – clock and weather station displays - will light up for five seconds.

TROUBLESHOOTING

Check here before contacting customer service.

Issue	Symptom	Solution
Main unit	US Atomic Time signal is not received	Place unit by the window and keep it there overnight
Main unit	The weather readings weather station are different from the TV, radio or official weather reports	The weather data may vary considerably due to different environmental conditions and placement. Check the placement tips included in this manual to site your weather sensors in the best possible way.
Remote sensor	Cannot locate remote sensor	Check batteries
		Check location
		Press and hold DOWN (▼) button on the main unit to search for the signal from the remote sensor
	Cannot change the channel	Press “ RESET ” after setting the channel
	Cannot change the C° to F° and back	Press “ RESET ” after setting C/F
	Data does not match data on the main unit	Initiate manual sensor search (Press and hold DOWN (▼) button on the main unit)

PRECAUTIONS

This product is engineered to give you years of satisfactory service if handled carefully. Here are a few precautions:

- Do not immerse the units in water.
- Do not clean the units with abrasive or corrosive materials. They may scratch the plastic parts and corrode the electronic circuits.
- Do not subject the product to excessive force, shock, dust, temperature, or humidity, which may result in malfunctions, shorter lifespan, damaged batteries, and damaged parts.
- Do not tamper with the units internal components. Doing so will invalidate the warranty and may cause damage. These units contain no user-serviceable parts.
- Use only fresh batteries. Do not mix new and old batteries.
- Read the user's manual thoroughly before operating the units.

SPECIFICATIONS

Main Unit

Radio Frequency: 433 MHz

RF Reception range: 100 feet (30 m)

Weather Forecast in five large graphic icons: Sunny, Partly Cloudy, Cloudy, Rainy and Snowy

Barometric Pressure

Measuring Range: 14.75 inHg to 32.44 inHg (500 Hpa to 1100Hpa); (374.5 mmHg to 823.8 mmHg)

Resolution: 0.003 inHg (0.1 Hpa, 0.08 mmHg)

Sampling interval: 20 minutes

Altitude Compensation Range: -656 ft to 3999 ft (-200m to +1219 m)

Indoor Temperature

Operating Range: 23°F to 122°F (-5°C to 50°C)

Resolution: 0.2°F (0.1°C)

Indoor Humidity

Operating Range: 30% to 80%

Resolution: 1%

Comfort level indicators – **COMFORT**, **WET** and **DRY**

User-selectable (°F or °C) temperature display
Remote channels auto-scan feature
Maximum number of remote sensors: 3 (one included)
Readings update interval: every 45 seconds
Low battery indicators – for each remote channel and main unit
EL backlight

Clock

Precise atomic time
4 US Time Zones
12/24 hour time format
Crescendo 4 minutes alarm with 5 minutes snooze

Remote Sensor

Temperature

Proposed operating range with alkaline batteries:
-4°F to + 158°F (-20°C to + 70°C)
Proposed operating range with lithium batteries:
-38.8°F to +158°F (-38.8°C to + 70°C)
Temperature resolution: 0.1°C/0.2°F

Humidity

Operating Range: 30% to 80%
Resolution: 1%
Low battery indicator
Wall-mount or Table stand

Power

Main unit: 2 x UM-3 or AA 1.5V battery
Remote Thermo Hygrometer: 2 x UM-3 or AA 1.5V battery

Battery life (alkaline)

Main unit: 2 month
Thermo-Hygrometer: over 12 months

Dimensions

Main unit: 7.31 (L) x 3.68 (H) x 1.31 (D) inches
Remote Thermo - Hygrometer: 2.37(L) x 4(H) x 1(D) inch

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment had been tested and found to comply with the limits for a Class B Digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment, installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to improve or correct turning the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

We

Name: Hideki Electronics, Inc.

Address: 7865 SW Mohawk

Tualatin, OR 97062

declare that the product

Product No.: TE653ELW

Product Name: Honeywell Barometric Weather Forecaster

Manufacturer: Hideki Electronics Ltd.

Address: Unit 2304-06, 23/F Riley House, 88 Lei Muk Road, Kwai Chung, New Territories, Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

The information above is not to be used as a contact for support or sales.

Please call our customer service (refer to the Standard Warranty Information) for all injuries instead.

STANDARD WARRANTY INFORMATION

This product is warranted from manufacturing defects for **one year** from date of retail purchase. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and repair.

Note that online product registration is required to ensure valid warranty protection.

To register your product, go to our Company website at:

www.honeywellweatherstations.com. Click Online Product Registration under the Customer Service menu.

Should you require assistance with this product and its operation, please contact our **Customer Service 1(866) 443 3543**.

Please direct all returns to the place of the original purchase. Should this not be possible, contact Hideki Customer Service for assistance and to obtain a Return Merchandise Authorization (RMA). Returns without a return authorization will be refused. Please retain your original receipt as you may be asked to provide a copy for proof of purchase.

Hideki Electronics, Inc. reserves the right to repair or replace the product at our option.

Copyright (2005) Hideki Electronics Inc. All Rights Reserved. The Honeywell Trademark is used under license from Honeywell Intellectual Properties Inc. Honeywell International Inc. makes no representations or warranties with respect to this product.

All user manual contents and information are subject to change.