


TANDBERG® VISION 1000

Quick Reference

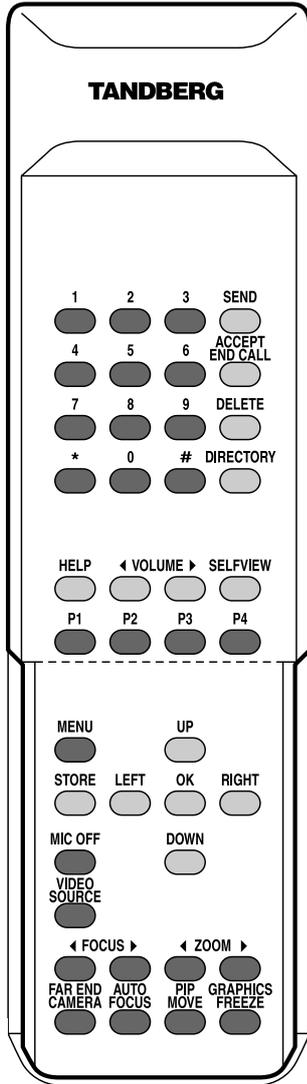

Making/Ending a Call

See other side for how to switch on the system

- Make a call: 12345678 + (number)
- Two different numbers: 12345600**
12345601 +
- Restrict (56Kbps) call: 12345600# +
- Redial last number: +
- Accept/End a call:
- Delete last digit entered:
- Directory: + select entry: / + (Number keys may also be used)

Adjustments

- See outgoing picture:
- Adjust volume:
- Turn microphone on/off:
- Selecting presets (camera positions, video and audio sources) or and a key 0-9

Camera Positioning

Change camera positions,

press: and

Storing presets (see other side)

Far End Camera

Control Far End Camera: Press

The Far End Camera is controlled in the same manner as your own camera (camera, video sources and presets)

Return to local camera: Press

Video Input

Select video input:

+ a number
(see on-screen menu)

Help

Press to obtain on-screen help. If you are within the Menu System you will receive context sensitive help.

Power up

- Power up the monitor.
- Power up the codec (inside the trolley).
- Check network by pressing  (a dial-tone should be heard).
- Adjust camera positions, audio and videosources. Use  to check outgoing video.



Still Image/Freeze

Transmit a still image/freeze video: 

Unfreeze video: 

Request a still image:  +  + source + 

View a still image:  + 0

To stop viewing the still image press any key.

Still Image Setup

Press , 'Utilities', 'Presentation Settings'

Presentation Mode:

Normal: A still image is sent when  is pressed.

Preview: The image is displayed when  is pressed. Pressing  once more will send the still image.

The **Still Image Source** setting is used to select which video source the still image will be sent from.

Store Numbers in Directory

- Select 'Edit Directory' from the main menu
(see below for how to use the Menu System).
 - Select entry to edit with number keys or  /  + .
 - Press  to edit name. Select letters by pressing .
- Move to 'Store' and press  when finished.
- Move to 'Number' and use the number keys to enter the ISDN number.
 - Press  to store.
 - Press  to exit and  to activate stored number.

Store Presets

- Adjust camera position or select video input
(see own menus)
- Select audio source:  + 'Audio Setup'.
Select source. Press  to exit Menu System.
- Store selection:
 +  /  /  /  or key 0-9

Menu System

- Press  to enter the Menu System.
- Use  /  /  /  to highlight option.
- Press  to select.
- Press  to exit the Menu System.