 



What's in the box




Handset
CD 230 or 235

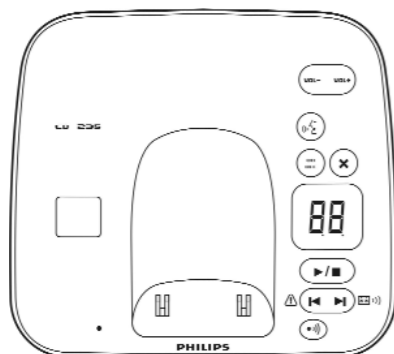

 Base station
CD 230 or 235

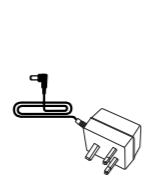

Power supply
unit

 

Line cord



Rechargeable
batteries



Quick start guide



User manual
CD 230 or 235



 
Guarantee

In multipack sets you will find additional handsets, chargers with power supplies and batteries.

Always use the cables and batteries that came with your phone.

1 Connect

A Connect the base station

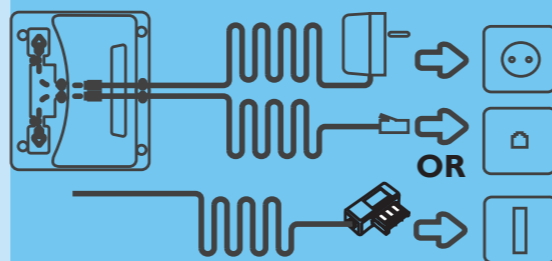


- Insert the plug of the power cord into the socket on the bottom of the base station.
- Insert the plug of the line cord into the socket on the bottom of the base station.
- Plug the power supply unit into your power outlet.
- Plug the line cord into the line socket.

2 Install

Always use rechargeable batteries.

 A Insert batteries

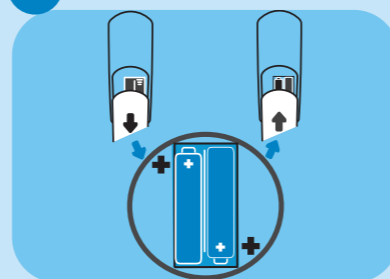

B Charge handset for 24 hours



To set the time

1. Press and scroll to select **CLOCK/ALARM**.
2. Press and scroll to select **TIME**.
3. Press and scroll to select **SET CLOCK**.
4. Enter the current time and press to confirm.

3 Enjoy

To make a call

Press and dial the number.

To answer a call

Press .

TIP : You can predial the number before seizing the line.

Press to turn the loudspeaker on/off during a call (call handsfree).

To adjust earpiece and loudspeaker volume while on line

Press Up or Down to increase or decrease the volume.








To set the handset ring melody

1. Press and scroll to select **PERSONAL SET**.
2. Press and scroll to select **HANDSET TONE**.
3. Press and scroll to select **MELODY**.
4. Press , the melody is played.
5. Press Up or Down to browse the list of melodies.
6. Press to confirm your choice.


To save a name & number in the phonebook


1. Press and scroll to select **PHONEBOOK**.
2. Press and scroll to select **ADD**.
3. Press , enter the name and press to save the name.
4. Enter the number and press to save the number.

To set or change the alarm clock settings







1. Press  and scroll  to select **CLOCK/ALARM**.
2. Press  and scroll  to select **SET ALARM**.
3. Press  and scroll  to select **OFF** or **ON**.
4. Press  to confirm.

If you select **ON** :


Enter the time and press  to confirm.

TIP :When the alarm rings, press  to stop the alarm.

To rename a handset

1. Press  and scroll  to select **PERSONAL SET**.
2. Press  and scroll  to select **HANDSET NAME**.
3. Press  and enter the name (text entry, see manual).
4. Press  to confirm.

Listen to new messages recorded on answer machine

Press  on the base. Playback of the oldest new message will begin.

TIP : For details about answer machine functions, see manual.

Troubleshooting

For expanded overview see user manual.

Problem

- No dialling tone.
- Poor audio quality.
- No symbol on the display.
- No Caller ID, poor connection quality with broadband DSL Internet.

Tip

- Check the connections.
- Use the line cord provided in the box.
- Try to place the base station at least one metre away from any electrical appliances.
- Make sure the product is plugged.
- Recharge the batteries.
- Check you have one DSL filter plugged directly on each line socket used in the house.
- Check the modem and the phone are plugged in correct filter slot (one specific for each).
- Filters can be defective, replace it and make another test.

Need help ?

User manual

See the user manual that came with your CD 230 or 235.

Online help

www.p4c.philips.com

Welcome

Quick start guide

1 Connect

2 Install

3 Enjoy



PHILIPS