

SmartCam mobile

For Android Phone
SNH-1010N

With SmartCam app, you can monitor what matters to you directly from your smart phone.

Download the application from the Play Store and install it on your smart phone.


❖ Search keywords for the application: "Samsung SmartCam", "Smartcam", "SAMSUNG TECHWIN", "TECHWIN".

1. Smart Phone Requirements


Hardware / Operating System	Requirements
OS	- Android 2.3/4.0
CPU	- 1Ghz or higher
RAM	- 128MB or more (recommended), RAM : 50MB (Minimum)
Network	- WIFI or 3G/LTE wireless communication enabled smart phone
Video Codec	- H.264
Recommended Smart Phones	- Galaxy S2, S3
Recommended Tablet PC	- Galaxy Note 10.1

2. Subscription

1. Run the downloaded application.

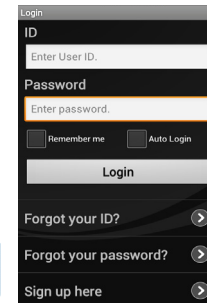

2. Touch <Sign up here>.
3. Enter requested information.
4. Check "Agree to the terms and conditions", and tap <Register>.
 - ID : Your ID, use alphanumeric characters and "." (full stop) and allows 8-14 characters.
 - User ID check : Tap on <Check> to verify the user ID.
 - PW : Password does not allow '-' and ';'. Use 8-14 alphanumeric characters.

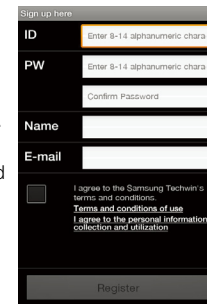

- Confirm Password : Checks whether your password is entered correctly.
- Name : Enter your name.
- E-mail : This e-mail is used to recover your subscription if you forgot your password.
- Country : Enter your country of use.
- Register : Requests registration of your information.




For further details, please refer to the user's manual.

3. Logging In

1. Enter your ID and password created during the subscription on the www.samsungsmartcam.com or on the smartphone application.

- Remember me : Saves your account information for later use.
- Auto Login : If checked, logs in automatically from the next application running.


2. Touch <Login>.

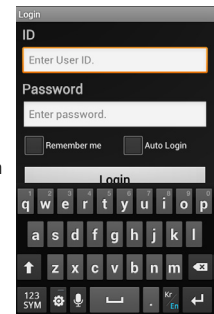

If you forgot your ID or password, use Find ID/Password below the <Login> tab.

4. Camera Registration


1. Touch <Add Camera>.

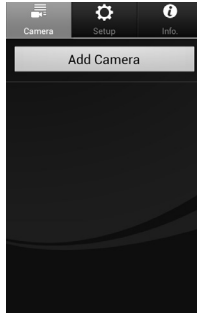

2. Select the camera found and tap <next>.



- When your smartphone is connected to the same WiFi network as the camera, it will automatically search for the camera.

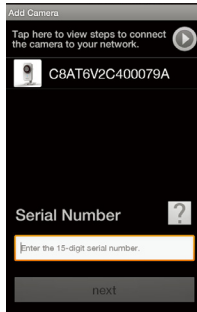

3. If the camera is not detected, please enter the camera serial number manually.




- For camera's power and network connection, refer to [▶].
- For camera's serial number location, refer to [?].



4. Create the <Camera password> and <Camera Name>, and then tap <Add>.



- Create camera password using alphanumeric characters between 1 to 8 without any space.

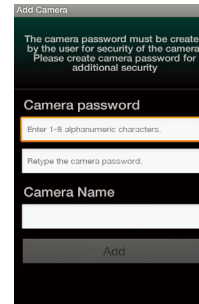


5. Camera

Camera Move


Move to the <Camera> item. From the listed active cameras, touch the desired camera's [▶] on the right.



- You cannot monitor an inactive camera.

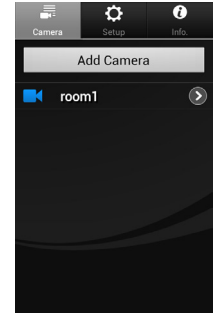


1. You may find the Live, Event or Settings icons.

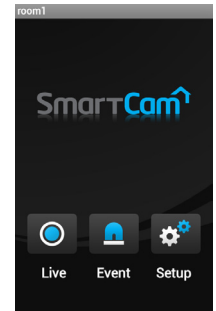


Delete Camera

1. To delete an added camera, touch and hold the desired one from the camera list, and touch <Delete>.

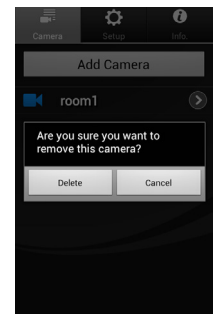


6. Live Video

1. Touch the desired camera's [] or touch the <Live> icon.

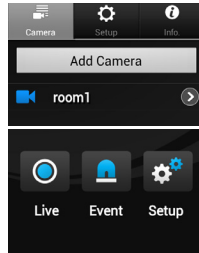

2. Enter the <Camera password> for the camera selected. This is the same private key you created at the time you registered the camera. Check the <SAVE> option to save the private key. Within 20 seconds, it will start streaming.

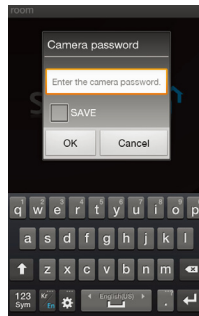


- The loading time may be longer depending on the policy of the service provider or the network connection status.

Live Video



No.	Description
1 Capture	You can capture and save a still image from the video.
2 HQ	Enables high quality video (640x480 resolution). ▪ Video and audio playback depends on the policies of your service provider or the network connection status.
3 Flip	Flips the video image.
4 Brightness	Adjusts the screen brightness.
5 Two-way Audio	Enable 2-way audio between the camera and the phone.
6 Mic	Press and hold to talk. Let go to hear back from the camera.

Two-way Audio

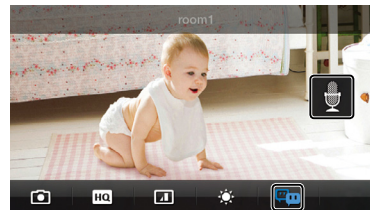

1. Tap on the Two-way Audio icon.
2. The Mic icon will appear.
3. Press and hold the Mic icon and start talking. Press and hold for 2sec after finished talking to properly send the audio over the internet.

4. You do not need to have 2-way Audio enabled to receive audio from the camera. The Mic setting in the camera must be set to 1 and above to have 2-way audio.



- When there are multiple users logged on to the camera, first person who tap the Talk icon will have the control.

Condition	Audio Support
Wi-Fi	O
3G / 4G	Depending on your network.
Relay Mode	X

Relay mode


Depending on your network connection, peer to peer connection may not be available. When peer to peer connection is not available, the camera will connect in Relay Mode, which limits the viewing to 3 minutes initially and will prompt you to extend another 60 seconds up to three times.




- Relay mode is added feature where the video from the camera is transmitted to Samsung server then retransmitted to the user's computer.
- Audio is not supported in Relay Mode.
- If the router's UPnP is not set, then you might be connected in relay mode. The settings may differ depending on the connected Broadband Router model. For more information, refer to the user manual of the applicable router.
- If you have trouble connection to the camera, visit "<http://www.samsungsmartcam.com>", go to support page, and refer to "Troubleshooting" on it.

7. Event List



1. Tap on the <Event> icon to see the YouTube and Picasa event links.

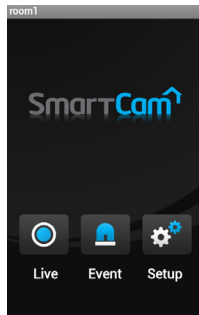

- You will get a notification prompt when event is detected by the camera.
- While transmitting videos to YouTube or Picasa for about 30 seconds, the device does not detect Events.

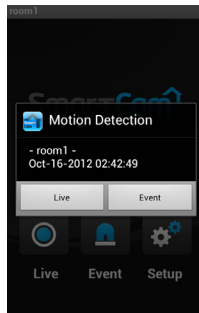


2. The camera must have the Youtube and Picasa notification enabled to have the events listed in the Event list. The event list will be created after the event video and picture is created on your YouTube or Picasa account.

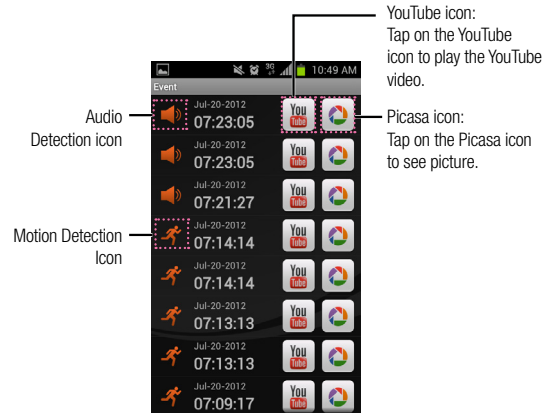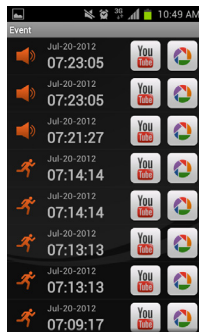

- Phone does not allow you to play the private videos automatically. To see the event videos on your phone, tap on the YouTube app and sign into your account (same YouTube account used for the Camera). Touch the menu button on your smartphone and select "My Channel". Touch "Uploaded Video" and select a desired event video.



Deleting All Events

1. Touch the menu button to display <Delete All> popup.
2. Tap on the <Delete All> to clear the event list.

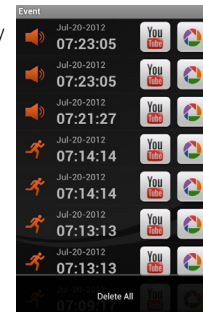


Deleting Each Event

1. Touch and hold the desired event to be deleted.
2. Tap on <OK> to delete the event.

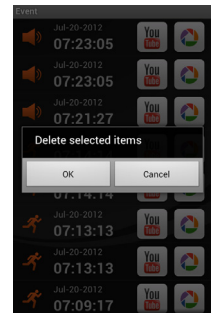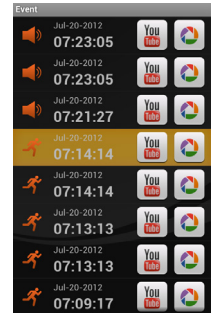

8. Camera Setup


Touch the <Setup> icon to configure a camera to be monitored.

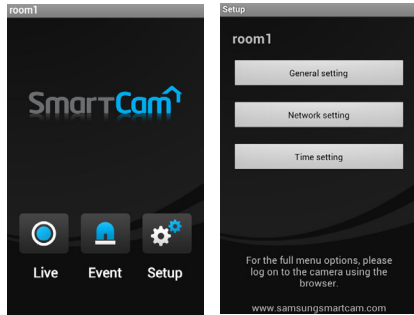

General setting

1. Touch <General setting>.
2. Configure the basic camera settings.


- Camera Name : Camera name is used to easily identify the camera when you have more than one. i.e., Living room, Kitchen, Bedroom.
- Event Alarm : Specify whether to trigger the alarm or not, and specify the sensitivity. The higher the sensitivity is, the subtler motion/audio events will be detected.
- Night Vision : Set the IR lighting. Check <Night Vision> to set the camera to switch to the night vision mode automatically.
- Audio : Adjust the volume of the built-in microphone and speaker of the camera as appropriate.

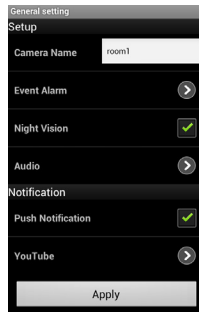

3. Configure the notification.

- Push Notification : Notifies alarm events.
- YouTube : Creates 30 seconds long footage and uploads onto the user's YouTube account.
- Picasa : Sends event images to the user's Picasa account.


4. Touch <Apply>.

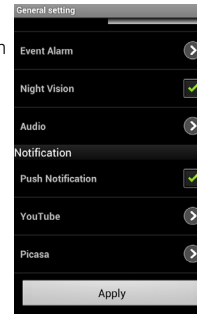


Network setting

1. Touch the <Network setting>.
2. Configure the wireless network.

- Wi-Fi : Shows the list of available access points.
 - : Connecting to the AP requires password.
 - : Connecting to the AP requires no password.
 - Show password : The password entered by user is displayed on the screen when selecting encryption Wifi.
- Other WiFi Networks : Enter the SSID name and password to connect to the network. If selected, it shows guide on SSID and networking procedures.

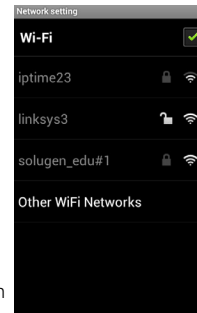


- For further details, please refer to the user's manual.

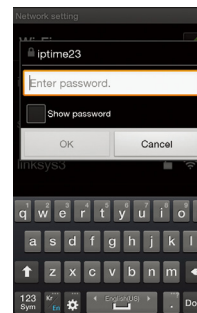


Time setting

1. Touch <Time setting>.
2. Set the camera's clock.
 - Time Zone : Select your region.
 - Summer Time : Check this option if you live in a country or region where DST (Daylight Saving Time) is applied.

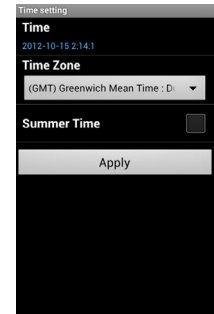

9. Auto Login Setup

1. Move to the <Setup> item.
2. Check <Auto Login> to login automatically from the next application running.

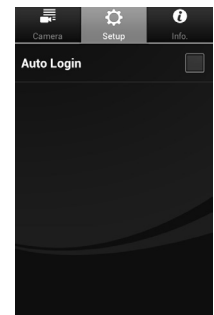

10. Info.

1. Move to the <Info.> item.
2. Shows the information on Samsung Techwin Smartcam Application.

