

4L2J-19G217-BA

Explorer Sport Trac
Litho in U.S.A.

PREMIUM DUAL MEDIA RADIO (if equipped)



- A Volume/Power Control** – Press the control to turn the audio system on or off. Turn the control to raise or lower the volume.
- B AM/FM Select** – In radio mode, press to select AM or FM frequency bands. In tape and CD modes, press to stop play and begin radio play.
- C Seek Function** – In radio mode, press to find the next listenable station up or down the band. In tape mode, press to move to the next/previous selection on the tape. In CD mode, press to select the next/previous track on the disc.
- D Scan Function** – In radio mode, press to hear a sampling of all listenable stations. In tape and CD modes, press to hear a brief sampling of all selections.
- E Tune Adjust** – In radio mode, press to move to the next frequency up or down the band.

- F Tape/CD Select** – Press TAPE to start tape play; pressing during fast forward or rewind will stop the tape. Press CD to start CD play. Pressing CD repeatedly will toggle between single CD play and CD changer play (if equipped).
- G Autoset Memory Preset** – Select AM, FM1, or FM2 band, then press AUTO to activate autoset memory preset, which allows you to set strong radio stations without losing your original manually set preset stations. Press again to deactivate autoset.
- H Setting the Clock** – Press and hold CLK and press SEEK to set the hour. Press and hold CLK and press TUNE to set the minute.
- I Select** – Press to adjust sound output and distribution after selecting BASS, TREB, BAL or FADE.
- J Setting Memory Preset Stations** – Select AM, FM1, or FM2 band, then select a station. Next, press and hold a numbered control until the sound returns.


AUDIOPHILE SATELLITE-READY IN-DASH SIX-CD RADIO (if equipped)



- A Scan Function** – In radio mode, press to hear a sampling of all listenable stations. In CD mode, press to hear a brief sampling of all selections on the current CD.
- B CD/AUX** – Press to select CD/AUX modes. No CD will display if there is not a CD present in the audio system. If a disc is loaded, there will be a number (1-6) inside the circle on the display. When in radio mode, press CD/AUX to play a loaded CD.
- C Loading CD** – Press LOAD and then a preset number to select a slot. Press and hold LOAD to activate autoloader.
- D Volume/Power Control** – Press the control to turn the audio system on or off. Turn the control to raise or lower volume.
- E AM/FM Select** – Press to select AM/FM frequency band. Autostore allows you to set the strongest local radio stations without losing your original manually set preset stations for AM/FM1/FM2. Press and momentarily hold AM/FM. AUTOSTORE will flash on the display. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets. Press again to disengage.
- F Satellite** – Your Audiophile radio comes equipped with satellite-ready capability. The kit to enable satellite reception is available through your Ford dealer. Detailed satellite instructions are included with the dealer-installed kit.
- G Disc/Tune CAT** – In radio mode, press to move to the next frequency up or down the band. In CD mode, press to select a disc in the CD player. CAT is only available when equipped with satellite radio. The kit to enable satellite reception is available through your Ford dealer. Detailed satellite instructions are included with the dealer-installed kit.
- H Digital Signal Processing** – Press DSP and then SEL to choose the desired signal mode.
- I Seek Function** – In radio mode, press to move to the next listenable station up or down the band. In CD mode, press to select the next/previous track on the current disc.
- J Setting the Clock** – Press MENU until SELECT HOUR or SELECT MINUTE is displayed. Press SEL to set the time. Press MENU again to disengage the clock mode.
- K Setting Memory Preset Stations** – Select AM, FM1, or FM2 band, then select a station. Next, press and hold a numbered control until the sound returns.

*CDs with adhesive labels and irregularly shaped CDs may get stuck in the CD player. Homemade CDs should be identified with permanent felt tip marker rather than adhesive labels.

CLIMATE CONTROL SYSTEM

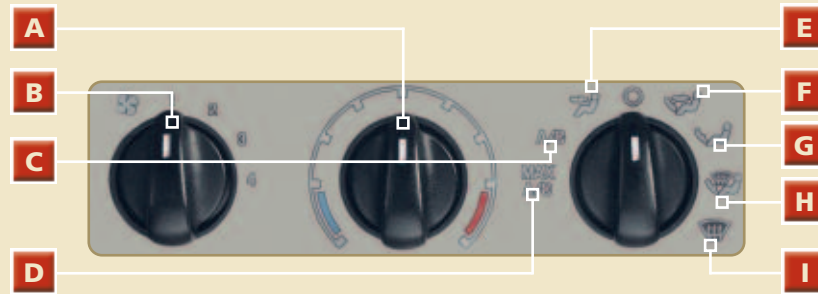

- A Temperature Control** – Rotate the knob to adjust the temperature of the air flow inside the vehicle.
- B Fan Speed Control** – Rotate the knob to adjust the volume of air circulated in the vehicle.
- C A/C** – Uses outside air to cool the vehicle. Air flow will be from the instrument panel vents only. The air conditioning will only function if the outside temperature is about 6°C (43°F) or higher.
- D Max A/C** – Uses recirculated air to quickly cool the vehicle. Air flow will be from the instrument panel vents only. MAX A/C is noisier than A/C, but more economical and efficient. This mode can also be used to help prevent undesirable odors from entering the vehicle. The air conditioning will only function if the outside temperature is about 6°C (43°F) or higher.

- E Panel** – Distributes outside air through the instrument panel vents.
- F Panel and Floor** – Distributes outside air through the instrument panel vents and the floor vents.
- G Floor** – Distributes outside air through the floor vents.
- H Floor and Defrost** – Distributes outside air through the windshield defroster vents and the floor vents.
- I Defrost** – Distributes outside air through the windshield defroster vents. It can be used to clear ice or fog from the windshield.

Operating Tips:
Under normal weather conditions, do not leave the air flow selector in the MAX A/C or OFF position when the vehicle is parked. This allows the vehicle to "breathe" using the outside air inlet vents.

Do not put objects under the front seats that will interfere with the air flow to the back seats.

ESSENTIAL INFORMATION

Tire Pressure – Your tire pressure is properly set at the dealership according to the recommended specifications found on the Tire Pressure Label located on the driver's door jamb. Please check your tire pressure during routine maintenance and seasonal changes.

Fuel Tank Capacity – Explorer Sport Trac has a 22.5-gallon tank. Your vehicle is designed to use "Flex" fuel and "Regular" unleaded gasoline with a pump (R+M)/2 octane rating of 87 for optimum performance. The use of gasoline with lower octane ratings may degrade performance.

Fuses – If electrical components in the vehicle are not working, a fuse may have blown. For more information about changing a fuse, please consult your Owner's Guide.

Fuel Pump Shut-Off Switch – After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have to be reset. The switch is located in the passenger's footwell, by the kick panel. For more information on resetting your fuel pump shut-off switch, please consult your Owner's Guide.

Changing the Tires – If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Your vehicle is equipped with a spare tire that can also be used as a regular tire. For more information on your spare tire, please consult your Owner's Guide.

Location of the Spare Tire and Tools

Item	Location
Spare Tire	Under the vehicle just in front of the rear bumper
Jack, Wheel Nut Wrench	In the passenger-side rear cab compartment behind the access door in the trim panel
Jack Handle, Jack Handle Extension	In the passenger-side rear cab compartment behind the access door in the trim panel

Roadside Emergencies – To fully assist you if you should have a vehicle concern, Ford offers a complimentary roadside assistance program. This program is separate from the New Vehicle Limited Warranty. The service is available 24 hours, seven days a week for the Basic Warranty period (Canada) or New Vehicle Limited Warranty period (U.S.) of three years or 60,000 km (36,000 miles). Roadside assistance will cover:

- | | | |
|---|---|--|
| ☐ Changing a flat tire | ☐ Jump-starts | ☐ Limited fuel delivery |
| ☐ Lock-out assistance | ☐ Towing of your vehicle | |

Roadside Assistance Centers

Country	Phone Number
United States	(800) 241-3673
Canada	(800) 665-2006

For complete details on any roadside assistance concern, please consult the *Roadside Emergencies* chapter or the *Customer Assistance* chapter in your Owner's Guide.



2004
model

EXPLORER SPORT TRAC
Quick Reference Guide

