





# THE NEW 2009 MERCURY MARINER

Your new Mercury Mariner is about to turn your everyday driving experience into an everyday driving adventure. You're going to love the way this smart, stylish and sophisticated SUV handles whatever road life lays out before you. This Quick Reference Guide was designed to help you quickly get to know the many features of your new Mariner. For more detailed information and important safety information, please see your Owner's Guide.

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

## INSTRUMENT PANEL FEATURES



### 1. HEADLAMPS AND FOG LAMPS

Turn the control one position to the right to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right to turn on the headlamps. Turn the control one position to the left to activate the autolamp feature (if equipped), which automatically turns

### 2. MULTI-FUNCTION LEVER

Rotate the end of the control up to increase the speed of the wipers and rotate down to decrease the speed of the wipers. Briefly press the end of the stalk for a single swipe of the wipers without washer fluid. A quick push and hold results in three swipes with washer fluid while a longer push and hold activates the wash pattern for up to five seconds. A 'courtesy wipe' will automatically occur after the washing cycle to ensure that

### 3. PANEL DIMMER CONTROL

Use the dimmer control to adjust the brightness of the instrument panel and all applicable switches in the vehicle when the headlamps and parking lamps are on. Move the control to the full upright position, past the detent, to turn on the interior lamps.

### 4. SPEED CONTROL

Push the flasher control, located on the steering column, and all front and rear direction signals will flash. Use it when your vehicle is disabled or is creating a safety hazard for other

### 5. TILT STEERING WHEEL LEVER

To adjust the steering wheel, push the lever down to unlock the steering column. While the lever is down, tilt the steering wheel to your desired position. Then, while holding the steering column in place, pull the lever up to its original position to lock the steering column.

### 6. HAZARD FLASHER

Push the flasher control, located on the steering column, and all front and rear direction signals will flash. Use it when your vehicle is disabled or is creating a safety hazard for other

### 7. SERVICE ENGINE SOON LIGHT

The service engine soon light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

### 8. LOW TIRE PRESSURE WARNING LIGHT

This light illuminates when the ignition is turned on. If the light does not turn on or begins to flash, contact your authorized dealer as soon as possible. For more information, please refer to Tire pressure monitoring system (TPMS) in the Tires, Wheels and Loading chapter of your Owner's Guide.

### 9. MESSAGE CENTER

The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will also notify you of

### 10. ABS WARNING LIGHT

The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light is also illuminated.

### 11. COMPASS

The compass heading (N, NE, E, SE, S, SW, W or NW) is displayed in the center stack display. The compass reading may be affected when you drive near large buildings, bridges, power lines and powerful broadcast antennas. For more information, please see your Owner's Guide.

### 12. AUXILIARY POWER POINTS (12V)

The 12V power point outlets, located on the instrument panel and

### 13. PASSENGER AIRBAG OFF

The passenger airbag off indicator light will illuminate when the passenger's front airbag is off. Please refer to your Owner's Guide for safety information and more details.

### 14. REVERSE SENSING (if equipped)

Your vehicle may be equipped with a reverse sensing system which can warn you if there is a large object behind the vehicle that you may be unable to see. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. Refer to your Owner's Guide for safety information and more details.

### 15. AUXILIARY INPUT JACK

The auxiliary input jack provides a way to



potential vehicle problems with a display of system warnings followed by a long indicator chime. For more information, please refer to your Owner's Guide.

the rear of the center console, are designed for accessory plugs only. Do not insert any other object; damage may occur and blow the fuse.

connect your portable music player to the in-vehicle audio system. This allows the audio from a portable music player to be played through the vehicle speakers. For more information, please see your Owner's Guide.

to the center position to lock the mirror in place.

## DUAL AUTOMATIC CLIMATE CONTROL WITH HEATED SEATS



### 1. POWER AND FAN

Press to turn the system on/off. Turn the control to increase/decrease the fan speed.

### 2. FLOOR AND DEFROST

Distributes air through the windshield defroster vents, demister vents, floor vents and rear seat floor vents.

### 3. AUTO/DRIVER TEMPERATURE

Press the control to engage full automatic operation. The system will automatically determine fan speed, airflow distribution, recirculated air to heat or cool the vehicle to reach the desired temperature. Note: This control will also determine the temperature on the driver side of the vehicle. When the passenger temperature control (PASS TEMP) is not engaged,

### 4. DEFROST

Press to activate the rear window defroster and clear the rear window of thin ice and fog. Press again to deactivate. The rear window defroster will turn off automatically after a predetermined amount of time, if a low battery condition is detected, or when the ignition is turned off or to the accessory position.

### 5. REAR DEFROSTER

Press to activate the rear window defroster and clear the rear window of thin ice and fog. Press again to deactivate. The rear window defroster will turn off automatically after a predetermined amount of time, if a low battery condition is detected, or when the ignition is turned off or to the accessory position.

### 6. DRIVER HEATED SEAT

Press to activate or deactivate the driver heated seat.

### 7. A/C

Press to activate/deactivate air conditioning. Use with recirculated air

### 8. PANEL AND FLOOR

Press the desired control for airflow to be directed through the Panel (instrument panel vents), Panel and Floor (instrument panel vents, demister vents, floor vents, rear seat floor vents) or the Floor (demister vents, floor vents and rear seat floor vents).

### 9. PASS TEMP

Press to activate passenger side temperature control. Turn the control to decrease/increase the temperature setting for the passenger side of the vehicle. Press again to deactivate (the driver side settings will then determine the temperature for the entire vehicle cabin).

### 10. RECIRCULATED AIR

Press to activate/deactivate air circulation inside the vehicle cabin. Recirculated air may reduce the amount of time needed to cool down the vehicle and may also help reduce undesirable odors from entering the vehicle. Recirculated air engages automatically when MAX A/C is selected.

### 11. PASSENGER HEATED SEAT

Press to activate or deactivate the passenger heated seat.

### 12. MAX A/C

Press to distribute recirculated air through the instrument panel vents to cool the vehicle. This mode is more economical and efficient. Press again to return to normal A/C operation.