

2009 ECLIPSE / ECLIPSE SPYDER QUICK REFERENCE GUIDE





- 1 Climate Cont. & Air Conditioning
- 2 Cruise Control
- 3 Wiper/Window Washer Control
- 4 Warning Lights
- 5 Audio Control
- 5 Steering Wheel Audio Control
- 6 Multi-center Display
- 7 Exterior Light Control

1

CLIMATE CONTROL & AIR CONDITIONING

A Temperature Control Dial

Turn the dial clockwise/counterclockwise to make the air warmer/cooler.

B Air Conditioning Switch

Press the button to turn on/off the A/C.

C Blower Fan Speed Control Dial

Turn the dial clockwise/counterclockwise to increase/decrease the fan speed.

D Air Flow Selection Dial

Turn the dial to a comfortable air flow position.



Face



Face and Foot



Foot



Foot and Windshield (Defrost)




Defrost

E Air Intake Selection Button

Press the button **E** to change the air intake mode from “recirculated” (indicator light on) to “outside” (indicator light off) and vice versa.

F Rear Window Defogger Switch

Press the button to turn on (indicator light on) or off (indicator light off). The rear window defogger will automatically turn off when the ignition is turned off, or after 17 minutes of operation.

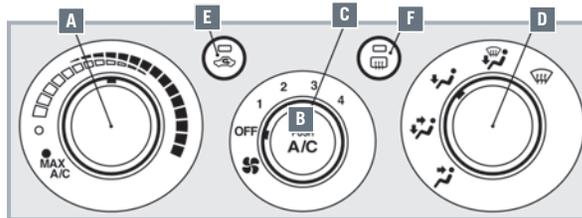

□ TO QUICKLY REMOVE FROST OR FOG FROM THE WINDSHIELD

(1) Set the air flow selection dial **D** to the defroster (☼) position.

(2) Set the blower fan speed control dial **C** to the maximum speed.

(3) Turn the temperature control dial **A** clockwise to the highest temperature position.

□ TO QUICKLY REMOVE FROST OR FOG FROM THE REAR WINDOW

(1) Press the rear window defogger button **F** (indicator light on).

□ TO QUICKLY COOL THE INTERIOR

(1) Set the air flow selection dial **D** to the face (☼) position.

(2) Set the temperature control dial **A** to the “MAX A/C” position.

(3) Set the blower fan speed control dial **C** to the maximum speed.

□ TO QUICKLY HEAT THE INTERIOR

(1) Set the air flow selection dial **D** to the foot (☼) position.

(2) Set the air intake selection button **E** to the outside air mode.

(3) Turn the temperature control dial **A** clockwise to the highest temperature position.

(4) Set the blower fan speed control dial **C** to the maximum speed.

2

CRUISE CONTROL

□ TO SET THE CRUISING SPEED

(1) Momentarily press the main button

(A) at the end of the cruise control lever. The “CRUISE” light comes on.

(2) Move the lever (B) down while driving at the desired speed.

□ TO CANCEL THE CRUISING SPEED

• Press the main switch (A) at the end of the lever.

The indicator light “CRUISE” goes off.

OR

• Pull the cruise control lever (B) toward you.

OR

• Tap the brake pedal slightly or press down on it to slow your vehicle speed.

□ TO INCREASE THE CRUISING SPEED


• Push the cruise control lever up for less than one second. Speed will be increased one mph each time the lever is pushed up.

OR

• Push the cruise control lever up and hold it until the desired speed is reached.

OR

• Press the accelerator pedal until the desired speed is reached. Pull the cruise control lever down, and release it.

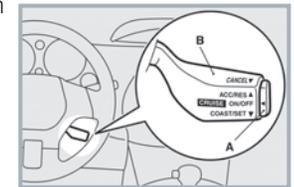

3

WIPER/WINDOW WASHER CONTROL

The ignition switch must be in the "ON" or "ACC" position.

□ WINDSHIELD WIPERS

- To demist the windshield – Move the wiper lever to the "MIST" position and release the lever. The wipers will wipe the windshield one time.

- To deactivate the wipers –

Move the wiper lever to the "OFF" position.

- To wipe slowly – Move the wiper lever to the "LO" position.

- To wipe fast – Move the wiper lever to the "HI" position.

- To wipe the windshield intermittently – Move the wiper lever to the "INT" position. The wiping intervals are adjustable with the "INT" dial (A).





Intervals vary in accordance with vehicle speed. You can activate or deactivate the speed-sensitive operation by using the multi-center display (if equipped).

□ WINDSHIELD WASHER

- To activate – Pull the wiper lever toward you.

□ REAR WINDOW WIPER AND WASHER

- To activate the rear wiper – Turn the rear wiper dial to the "INT" position. The wiper operates continuously for several seconds then

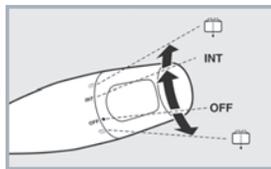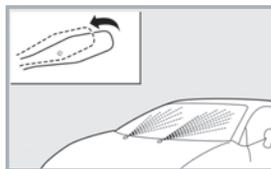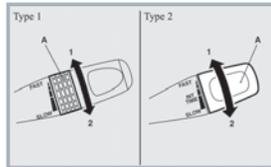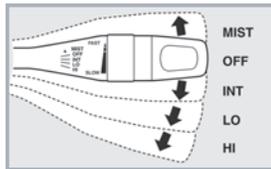

operates intermittently at intervals of about eight seconds. You can adjust the intervals of the operation by using the multi-center display (if equipped).

- To activate the rear washer – Turn the rear wiper dial fully to either direction (↺↻). Washer fluid will be sprayed onto the rear window glass and the wiper will automatically operate two or three times.


- To deactivate the rear wiper – Turn the rear wiper dial to the "OFF" position.

4

WARNING LIGHTS

Service Engine Soon **A**

Supplemental Restraint System **C**

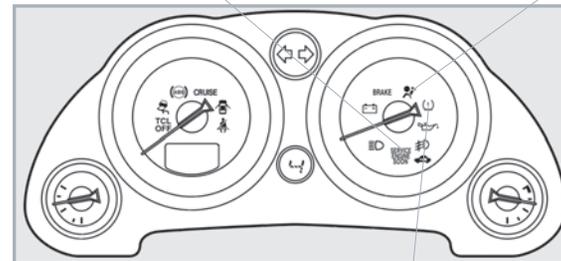

Tire Pressure Monitoring System **B**

A SERVICE ENGINE SOON or  : Service Engine Soon


If the light illuminates and stays on while driving, stop the engine and check if the fuel filler cap has been properly tightened. If the light still stays on, have the vehicle checked by an authorized Mitsubishi Motors dealer as soon as possible.

B  : Tire Pressure Monitoring System

If the warning light comes on, this indicates one or more of the tires has low air pressure. Check the pressure of each tire, including the spare, and fill with air as soon as possible. If the warning light still stays on, the system should be checked by an authorized Mitsubishi Motors dealer.

C  : Supplemental Restraint System

Immediately have the vehicle checked by an authorized Mitsubishi Motors dealer if the light comes on and stays on while driving, because this indicates a problem with the system.

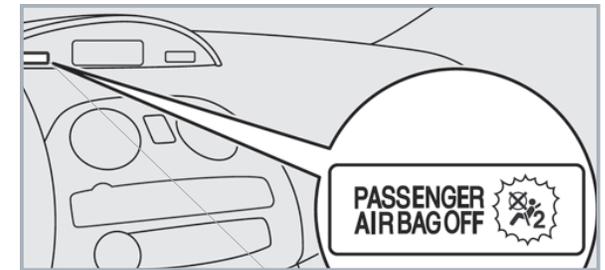

Passenger Airbag Off **D**

D  : Passenger Air Bag Off Indicator

The indicator light will stay on while driving to show that the passenger front air bag is not operational when:

- The passenger seat weight sensors sense a weight of less than about 66 pounds on the front passenger seat.
- The front passenger seat is not occupied.

The indicator light will go off while driving to show that the passenger front air bag is operational when the weight applied to the front passenger seat is sensed at about 66 pounds or greater. This includes a large dog sitting in the front passenger seat or heavy packages.

5

AUDIO TUNING/ CD CONTROL

□ TO SET AND PLAY A CD

Single CD Player

Insert a CD into the CD slot **A** or press the CD button **B** with a CD in the player. The CD indicator will turn on, then the CD player will begin playing.

6-Disc CD Changer

Press the CD button **B** and the CD mode is selected.

CD playback will be started.

Press the disc select button

G to listen to your desired disc. Each indicator light on each disc select button **G** shows the condition of each disc slot.

Light off: No disc

Amber: Disc is set

Green: Disc is played (or selected)

□ TO PLAY MP3 CD

Single CD Player

Insert an MP3 CD into the CD slot **A** or press the CD button **B** with an MP3 CD in the player. If an MP3 CD is already in the slot, playback will start. The folder number and the track number will appear on the display.

6-Disc CD Changer


Press the CD button **B** if MP3 CDs are already in the CD changer; playback will start. The folder number and the track number will appear on the display. Turn the TUNE/FOLDER dial **H** clockwise or counterclockwise to select your desired folder.

□ TO EJECT DISC

Single CD Player

Press the EJECT button **C**; the CD will stop playing and the CD will be ejected. The system then will switch to the radio mode.

6-Disc CD Changer

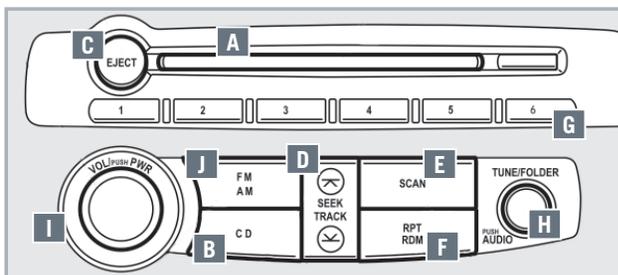

Press the LOAD/EJECT button **C**, then press one of the disc select buttons **G** to select the slot where you wish to eject the disc.

□ TO SELECT TRACK

Use the SEEK/TRACK button **D** to select a desired track or to fast forward or fast reverse the disc: press the **▲** or **▼** side of the SEEK/TRACK button until the desired track is

reached. The TRACK indicator will display the number of the selected track.

□ TO FAST FORWARD

Hold down the **▲** side of the SEEK/TRACK button **D** for more than one second.

□ TO FAST REVERSE.

Hold down the **▼** side of the SEEK/TRACK button **D** for more than one second.

□ TO SCAN CD

Single CD Player

Press the SCAN button **E**. The SCAN indicator will come on, and the first ten seconds of each track of the CD will play.

6-Disc CD Changer

Press the SCAN button **E**. The SCAN indicator will come on, and the first ten seconds of each track of the selected disc will play. To exit SCAN mode, press the SCAN button again.

□ TO REPEAT A CD TRACK

Press the RPT/RDM button **F**. The RPT indicator will turn on when the system is in repeat mode.

□ TO RANDOMLY PLAY CD TRACKS

Press the RPT/RDM button **F**. The RDM indicator will turn on when the system is in random mode. If it is an MP3 CD, tracks selected randomly from all folders in the disc(s) will be played back.

Radio

□ TO LISTEN TO THE RADIO

1) Press the PWR dial **I** or AM-FM button **J** to turn the radio on and off.

(2) Press the AM-FM button **J** to select the desired band.

(3) Press the **▲** or **▼** side of the SEEK/TRACK button **D** to tune to a station or press one of the memory select buttons **G** to recall a station memorized for that button.

□ TO SELECT BAND (AM-FM)

Press the AM-FM button **J** to select the desired band (AM/FM1/FM2).

Satellite Radio

(if equipped)

Press the AM-FM-SAT button **J** to select the desired band (AM/FM1/FM2/SAT1/SAT2/SAT3/SAT4).

□ TO TUNE THE RADIO

Automatic Tuning

Press the **▲** or **▼** side of the SEEK/TRACK button **D**, and reception of the station selected will begin. You can automatically receive available stations, and hear their programs.

Manual Tuning

Turn the TUNE/FOLDER dial **H** clockwise or counterclockwise. The radio station will be changed consecutively by the operation.

□ TO STORE A RADIO STATION IN THE MEMORY

(1) Press the **▲** or **▼** side of the SEEK/TRACK button **D** or turn the TUNE/FOLDER dial **H** to the station you wish to keep in the memory.

(2) Press one of the memory select buttons **G** until you hear a beep. The memory button number and the station will appear on the display. Six stations can be stored in each button for each band.

□ TO RECALL A PRE-SELECTED RADIO STATION

(1) Press the AM-FM button **J** to select the desired band.


(2) Press one of the memory select buttons **G** to recall a station pre-selected for that button.

□ TO SCAN AVAILABLE RADIO STATIONS

Press the SCAN button **E**. The SCAN indicator will come on and the radio will tune consecutively to each available station for about five seconds per station. Press the SCAN button again to stop scanning.

6

MULTI-CENTER DISPLAY

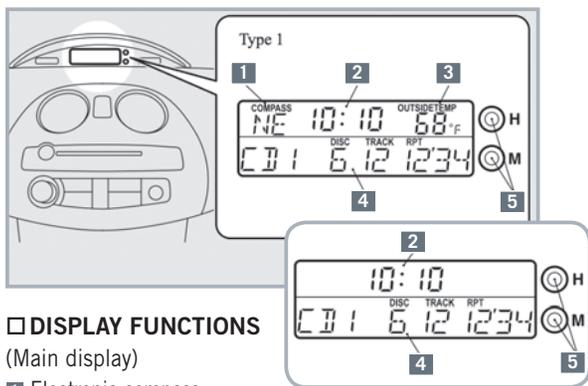

□ DISPLAY FUNCTIONS

(Main display)

- 1 Electronic compass
- 2 Digital clock
- 3 Outside temperature
- 4 Audio Mode
- 5 “H” / “M” Buttons

□ TO ADJUST THE CLOCK TIME

Press the “H” and “M” buttons to set the clock as follows:

H (HOUR) — Press and hold the “H” button until the correct hour appears.

M (MINUTE) — Press and hold the “M” button until the correct minute appears.

□ TO CHANGE THE UNIT OF OUTSIDE TEMPERATURE

Press the “H” and “M” buttons simultaneously for more than ten seconds when the ignition key is in the “ACC” or “ON” position. The display will switch the outside temperature unit between degree F and degree C.

7

EXTERIOR LIGHT CONTROL

□ TO TURN ON/OFF THE COMBINATION HEADLIGHT

Rotate the switch at the end of the turn signal lever.

OFF: All the lights will turn off.

☰☑☑: The parking, tail, front/rear side-marker, license plate and instrument panel lights will turn on respectively.


☰☑: Headlights and other lights will turn on respectively.

If the light switch is at the ☰☑☑ or ☰☑, the ignition key is turned to “LOCK” or “ACC”

position or removed from the ignition switch, and the driver’s door is opened, the lights will automatically turn off. If the light switch is at the ☰☑☑ or ☰☑ position, the ignition key is turned to “LOCK” or “ACC” or removed from the ignition switch, and the driver’s door is closed, the lights will stay on for about three minutes and turn off automatically.

□ TO CHANGE THE HEADLIGHTS FROM HIGH BEAM TO LOW BEAM


Pull the turn signal lever fully toward you to change the headlight beam height. The high beam indicator comes on when the headlights are on high beam, and goes off when the headlights are on low beam.

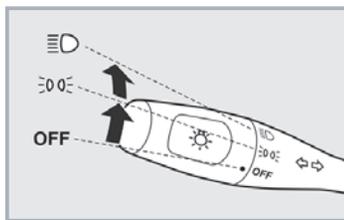

SEAT ADJUSTMENT/CONTROL

□ POWER SEAT (If equipped)

- To adjust the seat position, press the bottom switch **A** toward the front (1) or rear (2) of the vehicle.
- To adjust the seatback angle, pull the seatback lock lever **B** up gently, leaning the seatback forward slightly. Then lean the seatback backward to a comfortable position and release the lever.
- To raise or lower the front part of the seat cushion,

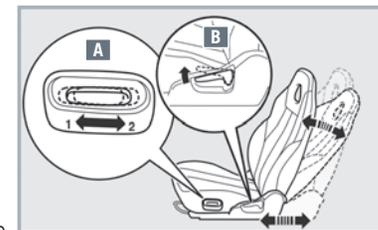

raise or lower the front end of the bottom switch.

- To raise or lower the rear part of the seat cushion, raise or lower the rearward end of the bottom switch.
- To raise or lower the entire seat cushion, raise or lower the center of the bottom switch.

□ HEATED SEAT (If equipped)

- To activate/deactivate heated seats:


Press the switch located in front of the floor console box when the ignition key

is in the “ON” position. The indicator light **A** will illuminate while the heater is on.

1 – Heater high (to heat quickly)

2 – Heater off

3 – Heater low (to keep the seat warm)

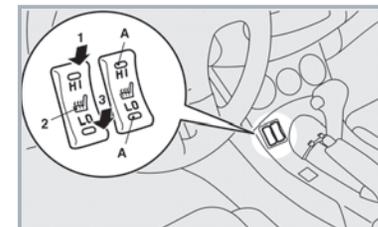


LOCK/UNLOCK REMOTE CONTROL TRANSMITTER

TO LOCK DOORS AND TAILGATE

Press the LOCK button **1** to lock all the doors and tailgate. The dome light will blink once if the dome light switch is set at the DOOR position. The turn signal lights will also blink once.

TO UNLOCK DOORS AND TAILGATE

Press the UNLOCK button **2** to unlock only the driver's door. Press it one more time, and all the doors and the tailgate will unlock. The dome light will turn on for 15 seconds if the dome light switch is set at the DOOR position. The turn signal lights will also blink twice.

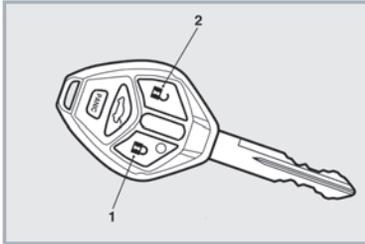

ALARM/ANTI-THEFT SYSTEM

TO ACTIVATE THE PANIC ALARM

If you are near your vehicle and feel threatened and want to call attention:

- (1) Press the PANIC button **3** on the remote control transmitter for one second or more.
- (2) The headlights will blink and the horn will sound for about three minutes.

(3) Press one of the buttons (**1**, **2** or **3**) on the remote control transmitter to turn off the alarm.

THEFT ALARM SYSTEM (If equipped)

Arm the system by locking the doors with the transmitter or power door locks. The horn will sound intermittently and the headlights will blink on and off for three minutes. The system will then be rearmed until the system is disarmed.


To disarm the system:

- (1) All doors or the tailgate are unlocked by the remote control transmitter or by using the key.
- (2) The ignition key is turned to the "ACC" or "ON" position.
- (3) If the UNLOCK button is pressed when all doors and the tailgate are closed and no door is opened within approximately 30 seconds, rearming will automatically occur.

ELECTRONIC IMMOBILIZER

(Anti-theft starting system)

You can start the vehicle with only the keys that have been registered to the vehicle. If you lose the key, you can order a key from your authorized Mitsubishi Motors dealer by referring to the key number. Take your vehicle and all remaining keys to your authorized Mitsubishi Motors dealer to have your ID code changed to prevent vehicle theft.

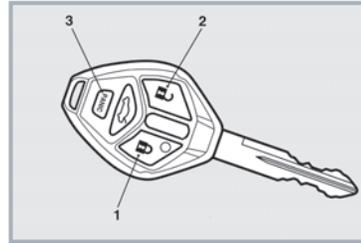


SUNROOF (If equipped)

TO OPEN SUNROOF

Press the sunroof switch **1** once to open the sunroof a few inches. Use this position for minimal wind noise. Press the sunroof switch **1** again to fully open the sunroof. To stop the sunroof movement, press the sunroof switch **1** a third time.

TO CLOSE SUNROOF

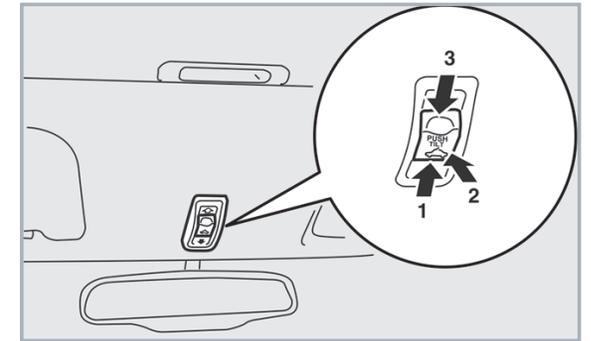

Press the switch **3**, and the sunroof will close while the switch is pressed.


TO TILT UP

Press the switch **2**, and the rear edge of the sunroof will be raised for ventilation.

TO TILT DOWN

Press the switch **3**.



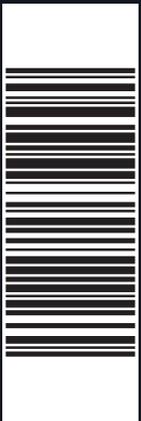

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new Endeavor and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of printing. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Mitsubishi Motors dealer is the best source for the most current information.

9290C047