
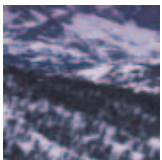
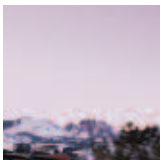
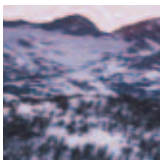
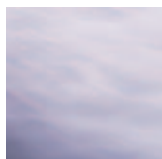
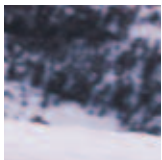
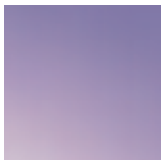
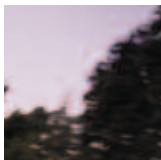


IMPREZA⁰⁵

Owner's Manual.

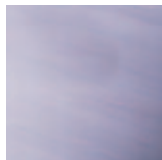

SUBARU 

Foreword

Congratulations on choosing a SUBARU vehicle. This Owner's Manual has all the information necessary to keep your SUBARU in excellent condition and to properly maintain the emission control system for minimizing emission pollutants. We urge you to read this manual carefully so that you may understand your vehicle and its operation. For information not found in this Owner's Manual, such as details concerning repairs or adjustments, please contact the dealer from whom you purchased your SUBARU or the nearest SUBARU dealer.

The information, specifications and illustrations found in this manual are those in effect at the time of printing. FUJI HEAVY INDUSTRIES LTD. reserves the right to change specifications and designs at any time without prior notice and without incurring any obligation to make the same or similar changes on vehicles previously sold. This Owner's Manual applies to all models and covers all equipment, including factory installed options. Some explanations, therefore may be for equipment not installed in your vehicle.


Please leave this manual in the vehicle at the time of resale. The next owner will need the information found herein.

FUJI HEAVY INDUSTRIES LTD., TOKYO, JAPAN


 **SUBARU** is a registered trademark of FUJI HEAVY INDUSTRIES LTD.

© copyright 2004 FUJI HEAVY INDUSTRIES LTD.

This manual describes the following vehicle types.

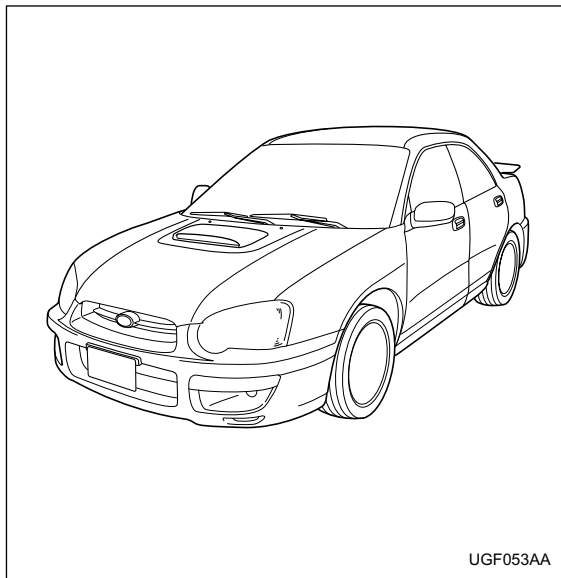

Sedan

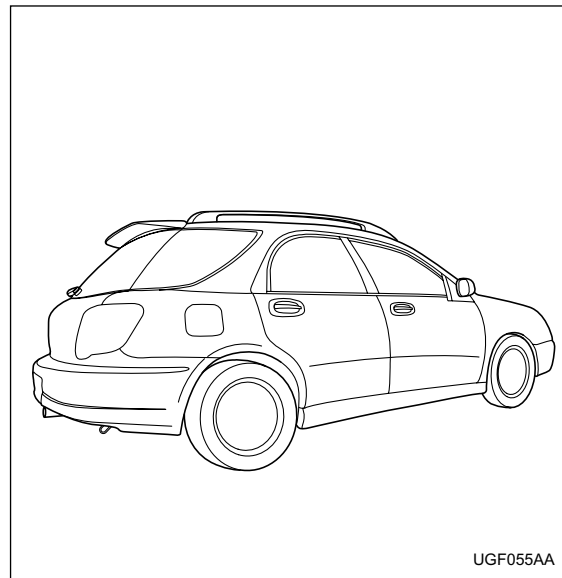

Wagon and OUTBACK SPORT

Warranties

■ Warranties for U.S.A.

All SUBARU vehicles distributed by Subaru of America, Inc. and sold at retail by an authorized SUBARU dealer in the United States come with the following warranties:

- SUBARU Limited Warranty
- Emission Control Systems Warranty
- Emissions Performance Warranty

All warranty information, including details of coverage and exclusions, is in the "Warranty and Maintenance Booklet". Please read these warranties carefully.

■ Warranties for Canada

All SUBARU vehicles distributed by Subaru Canada, Inc. and sold at retail by an authorized SUBARU dealer in Canada come with the following warranties:

- SUBARU Limited Warranty
- Anti-Corrosion Warranty
- Emission Control Warranty

All warranty information, including details of coverage and exclusions, is in the Warranty and Service Booklet. Please read these warranties carefully.

▼ WRX-STi (U.S. model only)

 **NOTE**

WRX-STi models are equipped with High Intensity Discharge (HID) headlights that contain mercury. For that reason, it is necessary to remove HID headlights before vehicle disposal. Once removed, please reuse, recycle or dispose of the HID headlights as hazardous waste.

▼ All models except U.S. model WRX-STi

 **NOTE**

This vehicle does not contain mercury devices or parts.

– CONTINUED –

How to use this owner's manual

■ Using your Owner's manual

Before you operate your vehicle, carefully read this manual. To protect yourself and extend the service life of your vehicle, follow the instructions in this manual. Failure to observe these instructions may result in serious injury and damage to your vehicle.

This manual is composed of fourteen chapters. Each chapter begins with a brief table of contents, so you can usually tell at a glance if that chapter contains the information you want.

Chapter 1: Seat, seatbelt and SRS airbags

This chapter informs you how to use the seat and seatbelt and contains precautions for the SRS airbags.

Chapter 2: Keys and doors

This chapter informs you how to operate the keys, locks and windows.

Chapter 3: Instruments and controls

This chapter informs you about the operation of instrument panel indicators and how to use the instruments and other switches.

Chapter 4: Climate Control

This chapter informs you how to operate the climate control.

Chapter 5: Audio

This chapter informs you how to operate your audio system.

Chapter 6: Interior equipment

This chapter informs you how to operate interior equipment.

Chapter 7: Starting and operating

This chapter informs you how to start and operate your SUBARU.

Chapter 8: Driving tips

This chapter informs you how to drive your SUBARU in various conditions and explains some safety tips on driving.

Chapter 9: In case of emergency

This chapter informs you what to do if you have a problem while driving, such as a flat tire or engine overheating.

Chapter 10: Appearance care

This chapter informs you how to keep your SUBARU looking good.

Chapter 11: Maintenance and service

This chapter informs you when you need to take your SUBARU to the dealer for scheduled maintenance and informs you how to keep your SUBARU running properly.

Chapter 12: Specifications

This chapter informs you about dimension and capacities of your SUBARU.

Chapter 13: Consumer information and Reporting safety defects

This chapter informs you about Uniform tire quality grading standards and Reporting safety defects.

Chapter 14: Index

This is an alphabetical listing of all that's in this manual. You can use it to quickly find something you want to read.

■ Safety warnings

You will find a number of WARNINGS, CAUTIONS and NOTES in this manual.

These safety warnings alert you to potential hazards that could result in injury to you or others.

Please read these safety warnings as well as all other portions of this manual carefully in order to gain a better understanding of how to use your SUBARU vehicle safely.

WARNING

A **WARNING** indicates a situation in which serious injury or death could result if the warning is ignored.


CAUTION

A **CAUTION** indicates a situation in which injury or damage to your vehicle, or both, could result if the caution is ignored.

NOTE

A **NOTE** gives information or suggestions how to make better use of your vehicle.

■ Safety symbol

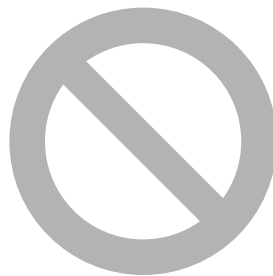

HSF019AA









You will find a circle with a slash through it in this man-










– CONTINUED –











ual. This symbol means “Do not”, “Do not do this”, or “Do not let this happen”, depending upon the context.

Vehicle symbols


 




There are some of the symbols you may see on your vehicle.

Mark	Name
	CAUTION
	Power door lock and unlock
	Passenger's windows lock and unlock
	Fuel
	Front fog lights
	Parking lights
	Hazard warning flasher
	Cigarette lighter

Mark	Name
	Engine hood
	Trunk lid (Sedan)
	Seat heater
	Child restraint top tether anchorages
	Child restraint lower anchorages
	Horn
	Windshield wiper deicer
	Wiper intermittent
	Windshield wiper and washer

Mark	Name
	Rear window wiper and washer
	Lights
	Parking lights, tail lights, license plate light and instrument panel illumination
	Head lights
	Illumination brightness
	Fan speed
	Instrument panel outlets
	Instrument panel outlets and foot outlets
	Foot outlets
	Windshield defroster and foot outlets

– CONTINUED –

Mark	Name
	Windshield defroster
	Rear window defogger/Outside mirror defogger
	Air recirculation
	Outside air
	Engine oil
	Washer

Safety precautions when driving

■ Seatbelt and SRS airbag

WARNING

- All persons in the vehicle should fasten their seatbelts **BEFORE** the vehicle starts to move. Otherwise, the possibility of serious injury becomes greater in the event of a sudden stop or accident.
- To obtain maximum protection in the event of an accident, the driver and all passengers in the vehicle should always wear seatbelts when the vehicle is moving. The SRS (Supplemental Restraint System) airbag does not do away with the need to fasten seatbelts. In combination with the seatbelts, it offers the best combined protection in case of a serious accident. Not wearing a seatbelt increases the chance of severe injury or death in a crash even when the vehicle has the SRS airbag.
- The SRS airbags deploy with considerable speed and force. Occupants who are out of proper position when the SRS airbag deploys could suffer very serious injuries. Because the SRS airbag needs enough space for deploy-

ment, the driver should always sit upright and well back in the seat as far from the steering wheel as practical while still maintaining full vehicle control and the front passenger should move the seat as far back as possible and sit upright and well back in the seat.

Carefully read the sections “Seatbelts” and “*SRS airbag (Supplemental Restraint System airbag)” in chapter 1 of this owner’s manual for instructions and precautions concerning the seatbelt system and SRS airbag system.

■ Child safety

WARNING

- Never hold a child on your lap or in your arms while the vehicle is moving. The passenger cannot protect the child from injury in a collision, because the child will be caught between the passenger and objects inside the vehicle.
- While riding in the vehicle, infants and small children should always be placed in the REAR seat in an infant or child restraint system which is appropriate for the child’s age, height and

weight. If a child is too big for a child restraint system, the child should sit in the REAR seat and be restrained using the seatbelts. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Never allow a child to stand up or kneel on the seat.

- Put children aged 12 and under in the REAR seat properly restrained at all times in a child restraint device or in a seatbelt. The SRS airbag deploys with considerable speed and force and can injure or even kill children, especially if they are 12 years of age and under and are not restrained or improperly restrained. Because children are lighter and weaker than adults, their risk being injured from deployment is greater.

- NEVER INSTALL A REARWARD FACING CHILD SEAT IN THE FRONT SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD’S HEAD TOO CLOSE TO THE SRS AIRBAG.

- Always use the child safety locks whenever a child rides in the rear seat. Serious injury could result if a child accidentally opened the door and fell out. Refer to the “Child safety locks” section in chapter 2.

– CONTINUED –

- **Always lock the passenger's windows using the lock switch when children are riding in the vehicle. Failure to follow this procedure could result in injury to a child operating the power window. Refer to the "Windows" section in chapter 2.**

- **Never leave unattended children in the vehicle. They could accidentally injure themselves or others through inadvertent operation of the vehicle. Also, on hot or sunny days, temperature in a closed vehicle could quickly become high enough to cause severe or possibly fatal injuries to them.**

- **Help prevent young children from locking themselves in the trunk. When leaving the vehicle, either close all windows and lock all doors or cancel the inside trunk lid release. Also make certain that the trunk is closed. On hot or sunny days, the temperature in a trunk could quickly become high enough to cause death or serious heat-related injuries including brain damage, particularly for small children.**

Carefully read the sections "Child restraint systems", "SRS airbag (Supplemental Restraint System airbag)", and "Seatbelts" in chapter 1 of this owner's manual for instructions and precautions concerning

the child restraint system, seatbelt system and SRS airbag system.

■ Engine exhaust gas (Carbon monoxide)

WARNING

- **Never inhale engine exhaust gas. Engine exhaust gas contains carbon monoxide, a colorless and odorless gas which is dangerous, or even lethal, if inhaled.**

- **Always properly maintain the engine exhaust system to prevent engine exhaust gas from entering the vehicle.**

- **Never run the engine in a closed space, such as a garage, except for the brief time needed to drive the vehicle in or out of it.**

- **Avoid remaining in a parked vehicle for a lengthy time while the engine is running. If that is unavoidable, then use the ventilation fan to force fresh air into the vehicle.**

- **Always keep the front ventilator inlet grille free from snow, leaves or other obstructions to ensure that the ventilation system always works properly.**

- **If at any time you suspect that exhaust fumes**

are entering the vehicle, have the problem checked and corrected as soon as possible. If you must drive under these conditions, drive only with all windows fully open.

- Keep the trunk lid or rear gate closed while driving to prevent exhaust gas from entering the vehicle.

■ Drinking and driving

WARNING

Drinking and then driving is very dangerous. Alcohol in the bloodstream delays your reaction and impairs your perception, judgment and attentiveness. If you drive after drinking – even if you drink just a little – it will increase the risk of being involved in a serious or fatal accident, injuring or killing yourself, your passengers and others. In addition, if you are injured in the accident, alcohol may increase the severity of that injury.

Please don't drink and drive.

Drunken driving is one of the most frequent causes of

accidents. Since alcohol affects all people differently, you may have consumed too much alcohol to drive safely even if the level of alcohol in your blood is below the legal limit. The safest thing you can do is never drink and drive. However if you have no choice but to drive, stop drinking and sober up completely before getting behind the wheel.

■ Drugs and driving

WARNING

There are some drugs (over the counter and prescription) that can delay your reaction time and impair your perception, judgment and attentiveness. If you drive after taking them, it may increase your, your passengers' and other persons' risk of being involved in a serious or fatal accident.

If you are taking any drugs, check with your doctor or pharmacist or read the literature that accompanies the medication to determine if the drug you are taking can impair your driving ability. Do not drive after taking any medications that can make you drowsy or otherwise affect your ability to safely operate a motor vehicle. If

– CONTINUED –

you have a medical condition that requires you to take drugs, please consult with your doctor.

Never drive if you are under the influence of any illicit mind-altering drugs. For your own health and well-being, we urge you not to take illegal drugs in the first place and to seek treatment if you are addicted to those drugs.

■ Driving when tired or sleepy

WARNING

When you are tired or sleepy, your reaction will be delayed and your perception, judgment and attentiveness will be impaired. If you drive when tired or sleepy, your, your passengers' and other persons' chances of being involved in a serious accident may increase.

Please do not continue to drive but instead find a safe place to rest if you are tired or sleepy. On long trips, you should make periodic rest stops to refresh yourself before continuing on your journey. When possible, you should share the driving with others.

■ Modification of your vehicle

CAUTION

Your vehicle should not be modified. Modification could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranties.

■ Mobile phones and driving

CAUTION

Do not use a hand-held phone while driving; it may distract your attention from driving and can lead to an accident. If you use a hand-held phone, pull off the road and park in the safe place before using your phone. In some States/Provinces, only hands-free phones may legally be used while driving.

■ Driving with pets

Unrestrained pets can interfere with your driving and distract your attention from driving. In a collision or sudden stop, unrestrained pets or cages can be thrown around inside the vehicle and hurt you or your passengers. Besides, the pets can be hurt under these situations. It is also for their own safety that pets should be properly restrained in your vehicle. Restrain a pet with a special traveling harness which can be secured to the rear seat with a seatbelt or use a pet carrier which can be secured to the rear seat by routing a seatbelt through the carrier's handle. Never restrain pets or pet carriers in the front passenger's seat. For further information, consult your veterinarian, local animal protection society or pet shop.

■ Tire pressures

Check and, if necessary, adjust the pressure of each tire (including the spare) at least once a month and before any long journey.

Check the tire pressure when the tires are cold. Use a pressure gauge to adjust the tire pressures to the values shown on the tire placard.

Refer to the "Tires and wheels" section in chapter 11 for detailed information.

WARNING

Driving at high speeds with excessively low tire pressures can cause the tires to deform severely and to rapidly become hot. A sharp increase in temperature could cause tread separation, and destruction of the tires. The resulting loss of vehicle control could lead to an accident.

■ California proposition 65 warning

WARNING


Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. In addition, certain fluids in vehicles and certain components of product wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Table of contents


<i>Seat, seatbelt and SRS airbags</i>	1
<i>Keys and doors</i>	2
<i>Instruments and controls</i>	3
<i>Climate control</i>	4
<i>Audio</i>	5
<i>Interior equipment</i>	6
<i>Starting and operating</i>	7
<i>Driving tips</i>	8
<i>In case of emergency</i>	9
<i>Appearance care</i>	10
<i>Maintenance and service</i>	11
<i>Specifications</i>	12
<i>Consumer information and Reporting safety defects</i>	13
<i>Index</i>	14

Illustrated index

■ Exterior

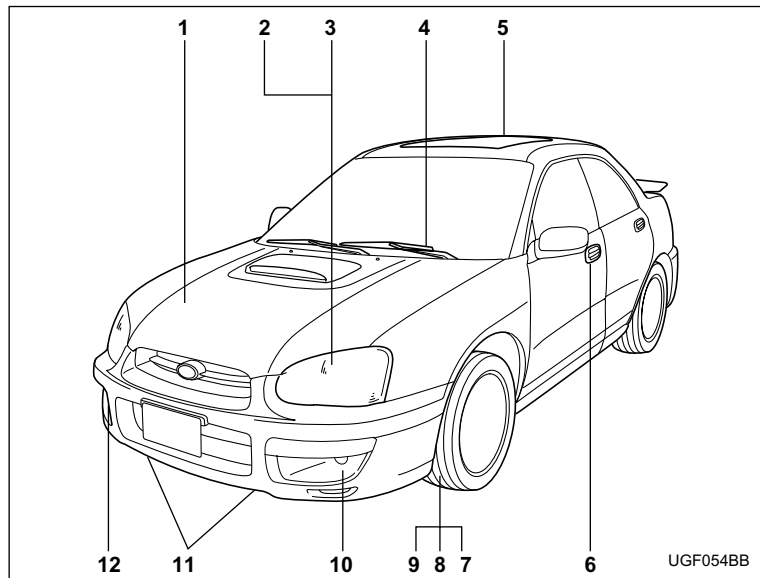

- 1) Engine hood (page 11-5)
- 2) Headlight switch (page 3-30)
- 3) Replacing bulbs (page 11-69)
- 4) Wiper switch (page 3-38)
- 5) Moonroof (page 2-33)
- 6) Door locks (page 2-6)
- 7) Tire pressure (page 11-48)
- 8) Flat tires (page 9-5)
- 9) Tire chains (page 8-16)
- 10) Front fog light button (page 3-36)
- 11) Tie-down hooks (page 9-17)
- 12) Towing hooks (page 9-17)

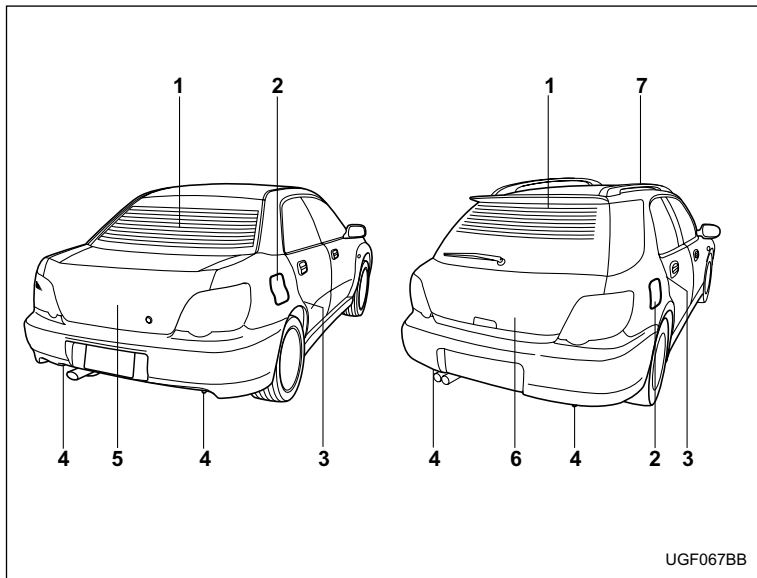


- 1) Rear window defogger button (page 3-41)
- 2) Fuel filler lid and cap (page 7-4)
- 3) Child safety locks (page 2-23)
- 4) Tie-down/Towing hook (page 9-18)
- 5) Trunk lid (page 2-27)
- 6) Rear gate (page 2-31)
- 7) Roof rail (page 8-20)


– CONTINUED –

■ Interior

▼ Passenger compartment area

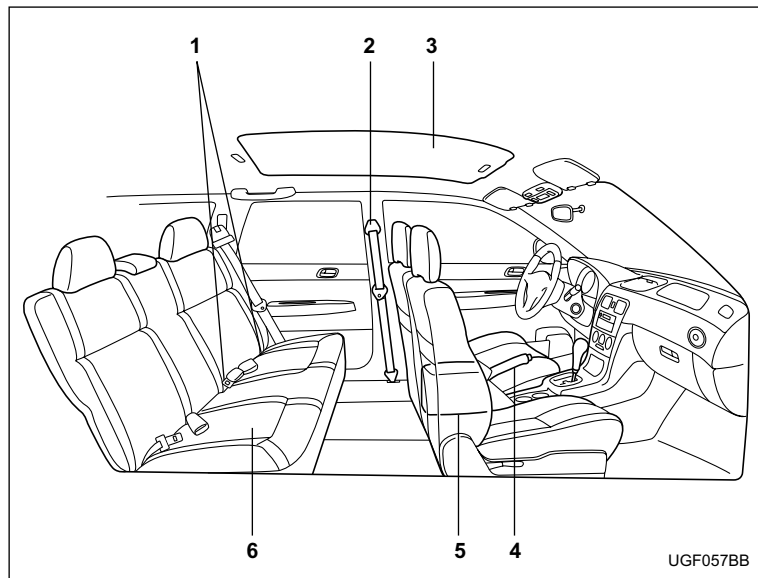


- 1) Lower anchorages for child restraint system (page 1-43)
- 2) Seatbelt (page 1-13)
- 3) Moonroof (page 2-33)
- 4) Parking brake lever (page 7-36)
- 5) Front seat (page 1-2)
- 6) Rear seat (page 1-8)

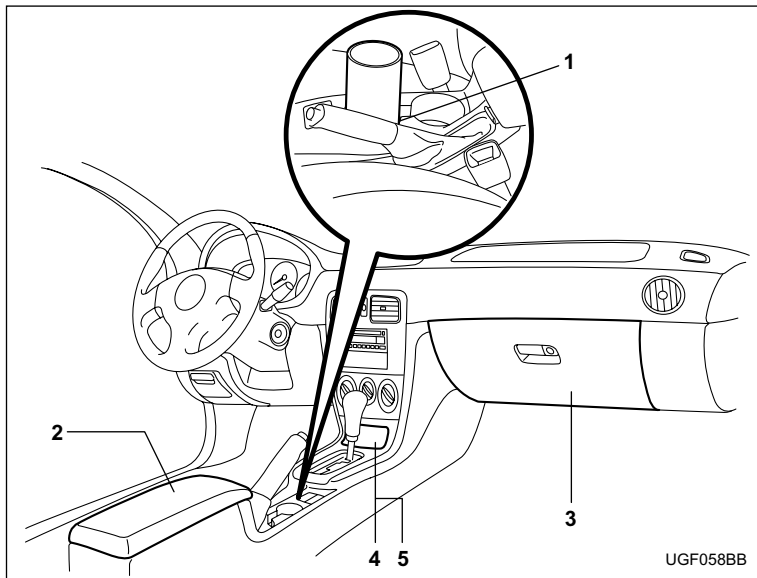

- 1) Cup holder (page 6-7)
- 2) Center console (page 6-6)
- 3) Glove box (page 6-5)
- 4) Cigarette lighter (page 6-9)
- 5) Ashtray (page 6-12)


– CONTINUED –

■ Instrument panel

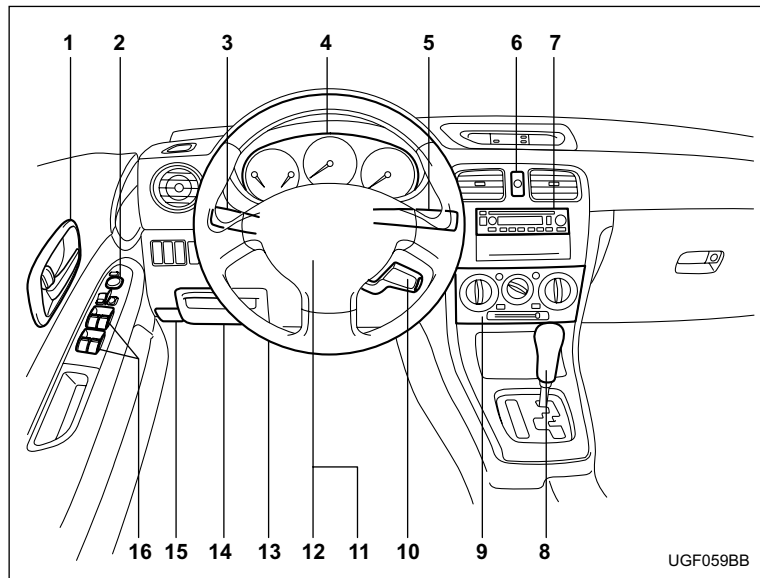

- 1) Door locks (page 2-6)
- 2) Outside mirror switch (page 3-49)
- 3) Light control lever (page 3-30)
- 4) Combination meter (page 3-15)
- 5) Wiper control lever (page 3-36)
- 6) Hazard warning flasher switch (page 3-7)
- 7) Audio (page 5-1)
- 8) Gear shift lever (MT) (page 7-15) /Selector lever (AT) (page 7-22)
- 9) Climate control (page 4-1)
- 10) Cruise control (page 7-38)
- 11) Horn (page 3-51)
- 12) SRS airbag (page 1-53)
- 13) Tilt steering (page 3-50)
- 14) Fuse box (page 11-65)
- 15) Hood lock release knob (page 11-5)
- 16) Power window (page 2-24)

■ Light control and wiper control levers/switches

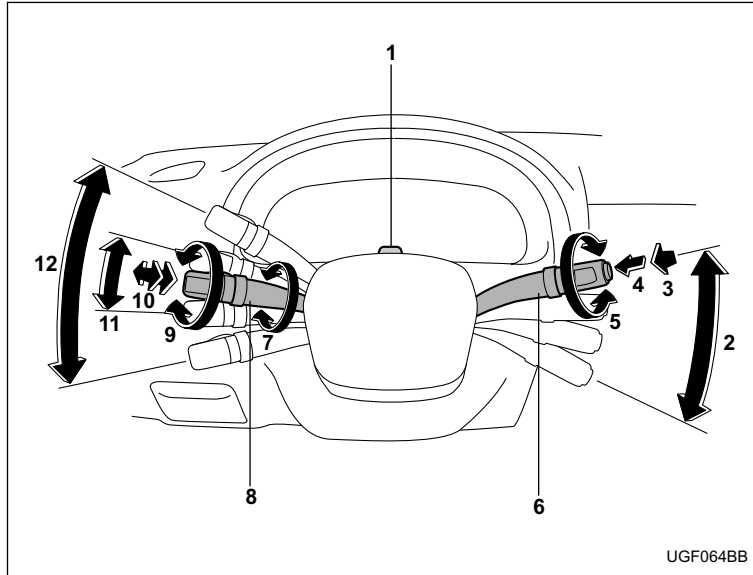


- 1) Parking light switch (page 3-35)
- 2) Windshield wiper (page 3-38)
- 3) Mist (page 3-39)
- 4) Windshield washer (page 3-39)
- 5) Rear window wiper and washer switch (page 3-40)
- 6) Wiper control lever (page 3-38)
- 7) Illumination brightness control (page 3-33)
- 8) Light control lever (page 3-30)
- 9) Headlight ON/OFF (page 3-30)
- 10) Headlight flasher High/Low beam change (page 3-30)
- 11) Turn signal (for lane change) (page 3-32)
- 12) Turn signal (page 3-32)

– CONTINUED –


■ Combination meter

▼ WRX

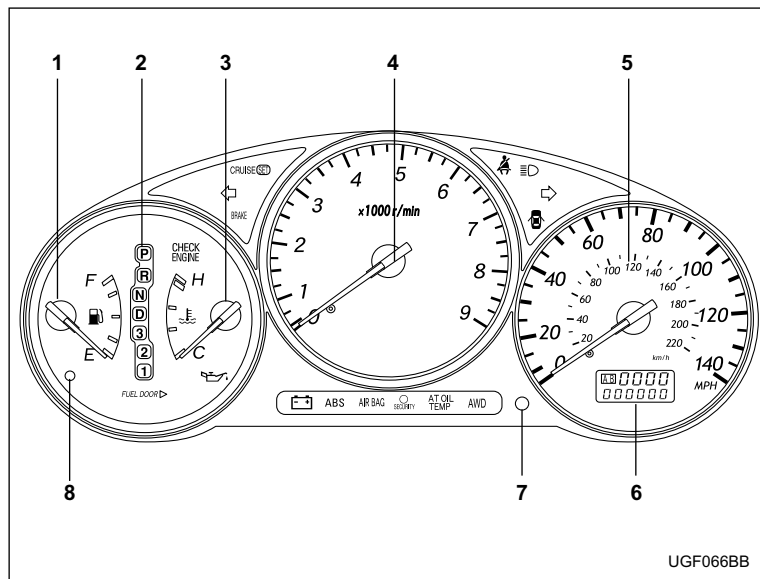

- 1) Fuel gauge (page 3-17)
- 2) Selector lever position indicator (page 3-27)
- 3) Temperature gauge (page 3-18)
- 4) Tachometer (page 3-16)
- 5) Speedometer (page 3-15)
- 6) Odometer and trip meter (page 3-15)
- 7) Trip meter A/B selection and trip meter reset knob (page 3-16)
- 8) Low fuel warning light (page 3-17)


▼ WRX-STI

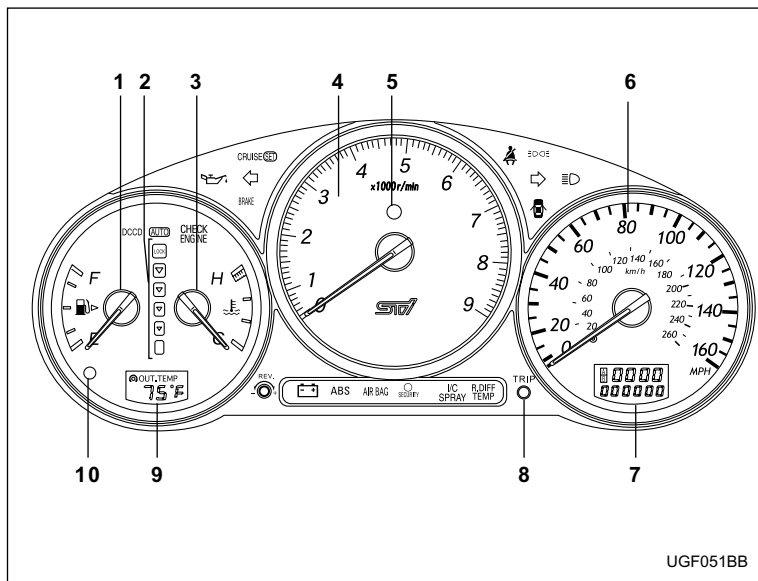

- 1) Fuel gauge (page 3-10)
- 2) DCCD indicator (page 3-28)
- 3) Temperature gauge (page 3-11)
- 4) Tachometer (page 3-9)
- 5) REV indicator (page 3-13)
- 6) Speedometer (page 3-8)
- 7) Odometer and trip meter (page 3-8)
- 8) Trip meter A/B selection and trip meter reset knob (page 3-9)
- 9) Outside temperature indicator (page 3-12)
- 10) Low fuel warning light (page 3-10)


 


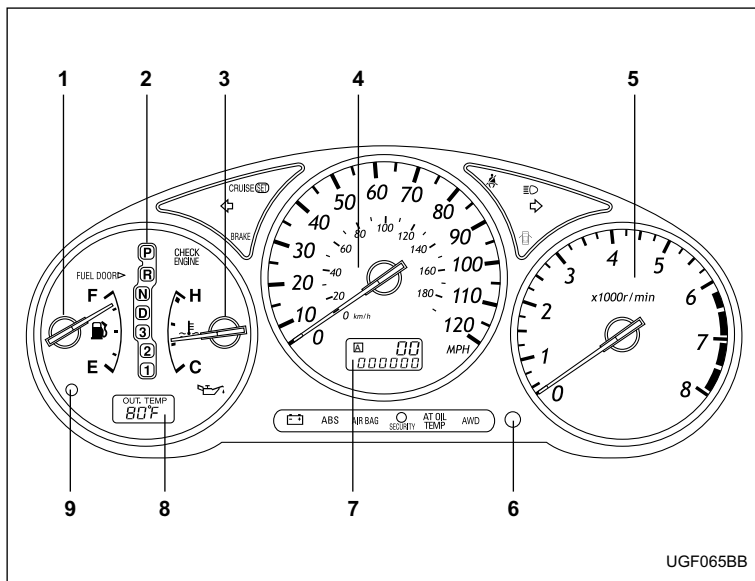

- CONTINUED -








▼ Except turbo models



- 1) Fuel gauge (page 3-17)
- 2) Selector lever position indicator (page 3-27)
- 3) Temperature gauge (page 3-18)
- 4) Speedometer (page 3-15)
- 5) Tachometer (page 3-16)
- 6) Trip meter A/B selection and trip meter reset knob (page 3-16)
- 7) Odometer and trip meter (page 3-15)
- 8) Outside temperature indicator (page 3-19)
- 9) Low fuel warning light (page 3-17)


▼ Warning and indicator light

Mark	Name	Page
	Seatbelt warning light	3-20
AIR BAG	SRS airbag system warning light	3-20
CHECK ENGINE	CHECK ENGINE warning light/ Malfunction indicator lamp	3-21
	Charge warning light	3-22
	Oil pressure warning light	3-22
AT OIL TEMP	AT OIL temperature warning light (if equipped)	3-22
ABS or 	ABS warning light	3-23
BRAKE or 	Brake system warning light	3-24
	Door open warning light	3-26
AWD	All-wheel drive warning light (if equipped)	3-26

Mark	Name	Page
	Turn signal indicator lights	3-27
	High beam indicator light	3-27
	Security indicator light (if equipped)	2-5, 2-17
I/C SPRAY	Intercooler water spray warning light (if equipped)	3-26
	Light indicator light (if equipped)	3-28
CRUISE	Cruise control indicator light (if equipped)	3-27
	Cruise control set indicator light	3-27
	REV indicator light (if equipped)	3-28
R.DIFF TEMP	Rear differential oil temperature warning light (if equipped)	3-23
	Electronic driver's control center differential auto indicator (if equipped)	3-28

– CONTINUED –

■ Tire changing tools

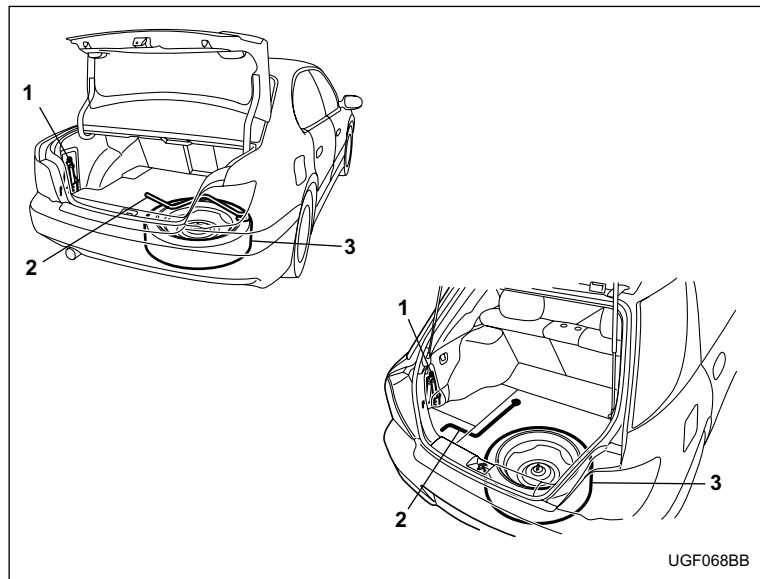

- 1) Jack (page 9-24)
- 2) Jack handle (page 9-24)
- 3) Spare tire (page 9-24)

A

ABS (Anti-lock Brake System)	7-31
Warning light	3-23, 7-32
Accessories	5-3, 11-68
Accessory power outlet	6-8, 6-11
Active head restraint	1-6
Air cleaner element	11-24
Air conditioner operation	4-9
Air filtration system	4-18
Air flow selection	4-2
All-wheel drive warning light (for AWD AT vehicles)	3-26
Aluminum wheels	11-54
Antenna system	5-2
Anti-lock Brake System (ABS)	7-31
Arming the system	2-17
Armrest	1-9
Ashtray	6-12
AT OIL TEMPerature warning light	3-22
Audio set	5-3
Auto-dimming mirror/compass	3-46
Automatic climate control system	4-11
Automatic transmission	7-22
Capacities	12-4
Fluid	11-32
Selector lever	7-23
Shift lock release	7-27

Temperature warning light	3-22
Automatic/Emergency Locking Retractor (A/ELR)	1-15

B

Battery	11-63
Jump starting	9-13
Replacement (Remote keyless entry system)	2-11
Brake	
Booster	11-42
Fluid	11-40
Pad and lining	11-45
Pedal	11-43
Brake pedal	
Free play	11-43
Reserve distance	11-43
Brake system	7-30
Warning light	3-24
Braking	7-30
Breaking-in of new brake pads and linings	11-45
Tips	7-30
Bulb	
Chart	12-10
Replacing	11-69

-
- C**
- Capacities 12-4
 - Cargo
 - Area cover 6-14
 - Area light 6-2, 11-81
 - Tie-down hooks 6-17
 - Catalytic converter 8-4
 - Center
 - Console 6-6
 - Ventilators 4-3
 - Changing
 - Flat tire 9-5
 - Oil and oil filter 11-12
 - Charge warning light 3-22
 - CHECK ENGINE warning light/
 - Malfunction indicator lamp 3-21
 - Checking
 - Brake pedal free play 11-43
 - Brake pedal reserve distance 11-43
 - Clutch function 11-44
 - Clutch pedal free play 11-44
 - Engine oil level 11-11
 - Fluid level 11-32, 11-38, 11-40, 11-41
 - Gear oil level 11-30, 11-35, 11-36
 - Child restraint systems 1-32
 - Installation with A/ELR seatbelt 1-36
 - Lower and tether anchorages 1-43
 - Child safety 7
 - Locks 2-23
 - Chime
 - Key 3-5
 - Seatbelt 1-15, 3-20
 - Cigarette lighter socket 6-9
 - Cleaning
 - Aluminum wheels 10-3
 - Interior 10-6
 - Ventilator grille 4-17
 - Climate control system
 - Automatic 4-11
 - Manual 4-4
 - Clock 3-29
 - Clutch fluid 11-41
 - Clutch pedal 11-44
 - Coat hook 6-14
 - Coin tray 6-6
 - Cooling system 11-18
 - Corrosion protection 8-14, 10-4
 - Cruise control 7-38
 - Indicator light 3-27
 - Set indicator light 3-27
 - Cup holder 6-7
- D**
- Daytime running light system 3-32
-

Differential gear oil	
Front	11-35
Rear	11-36
Dimensions	12-2
Disarming the system	2-19
Disc brake pad wear warning indicators	7-31
Dome light	6-2, 11-81
Door locks	2-6
Door open warning light	3-26
Drive belts	11-29
Driver's control center differential	7-18
Auto indicator light	3-28
Indicator lights	3-28
Driving	
Drinking	9
Drugs	9
Foreign countries	8-6
Mobile phone	10
Pets	11
Snowy and icy roads	8-13
Tips	7-14, 7-17, 8-7
Tired or sleepy	10

E

EBD (Electronic brake force distribution)	
system	7-34
Electrical system	12-3

Electronic Brake Force Distribution (EBD)

system	7-34
Emergency Locking Retractor (ELR)	1-14
Engine	
Compartment overview	11-8
Coolant	11-19
Exhaust gas (Carbon monoxide)	8, 8-3
Hood	11-5
Oil	11-11
Overheating	9-16
Starting	7-9
Stopping	7-11
Exterior care	10-2

F

Flat tires	9-5
Floor mat	6-13
Fluid level	
Automatic transmission	11-32
Brake	11-40
Clutch	11-41
Power steering	11-38
Fog light button	3-36
Folding down the rear seat	1-12
Front	
Differential gear oil	11-35
Fog light	11-78

Seatbelt pretensioners	1-28	Horn	3-51
Seats	1-2	Hose and connections	11-19
Turn signal light	11-73	I	
Fuel	7-2	Ignition switch	3-3
Economy hints	8-2	Illuminated entry	2-11
Filler lid and cap	7-4	Illumination brightness control	3-33
Gauge	3-10, 3-17	Immobilizer	2-3
Requirements	7-2	Indicator light	
Fuses	11-65	High beam	3-27
Fuses and circuits	12-7	Selector lever position	3-27
G		Turn signal	3-27
GAWR (Gross Axle Weight Rating)	8-19	Inside mirror	3-45
Glove box	6-5	Intercooler water spray	11-55
GVWR (Gross Vehicle Weight Rating)	8-19	Switch	3-44
H		Warning light	3-26
Hazard warning flasher	3-7	Interior light	6-2
Head restraint adjustment (Front)	1-5	Internal trunk lid release handle	2-28
Headlight beam leveler	3-34	J	
Headlight flasher	3-31	Jack and jack handle	9-24
Headlight indicator light	3-28	Jump starting	9-13
Headlights	3-30, 11-70	K	
Headrest adjustment (Wagon)	1-11	Key	
Heater operation	4-6	Interlock release	3-6
High beam indicator light	3-27		
High mount stop light	11-83		

Number	2-3
Reminder chime	3-5
Keys	2-2

L

Leather seat materials	10-6
Light	
Cargo area	6-2, 11-81
Dome	6-2, 11-81
Map	6-3, 11-81
Light control switch	3-30
Limited slip differential (LSD)	7-28
Loading your vehicle	8-17
LSD (Limited slip differential)	7-28

M

Main fuse	11-68
Maintenance	
Precautions	11-3
Schedule	11-3
Seatbelt	1-27
Tools	9-24
Malfunction indicator lamp (Check Engine light)	3-21
Manual climate control system	4-4
Manual transmission	
5 speeds	7-15

6 speeds	7-12
Map light	6-3, 11-81
Maximum load limits	8-29
Meters and gauges	3-7, 3-15
Mirrors	3-45
Moonroof	2-33, 9-23

N

New vehicle break-in driving – the first 1,000 miles (1,600 km)	8-2
--	-----

O

Odometer/Trip meter	3-8, 3-15
Off road driving	8-8
Oil filter	11-12
Oil level	
Engine	11-11
Front differential (AT vehicles)	11-35
Manual transmission	11-30
Rear differential	11-36
Oil pressure warning light	3-22
Outside mirrors	3-48
Outside temperature indicator	3-12, 3-19
Overheating engine	9-16

-
- P**
- Parking
 - Brake 7-36
 - Brake stroke 11-46
 - Light switch 3-35
 - Tips 7-36
 - Periodic inspections 8-6
 - Power
 - Door locking switches 2-8
 - Steering 7-29
 - Steering fluid 11-38
 - Windows 2-24
 - Preparing to drive 7-9
 - Printed antenna 5-2
- R**
- Rear
 - Combination lights 11-78
 - Differential gear oil 11-36
 - Differential oil temperature warning light 3-23
 - Gate 2-31
 - Seats 1-8
 - Rear seat
 - Folding down (Wagon) 1-12
 - Rear window
 - Defogger button 3-41
 - Wiper and washer switch 3-40
- Recommended
 - Automatic transmission fluid 11-34
 - Brake fluid 11-40
 - Clutch fluid 11-42
 - Oil grade and viscosity 11-16, 11-18, 11-31, 11-35, 11-37
 - Power steering fluid 11-39
 - Spark plugs 11-28
 - Remote keyless entry system 2-9
 - Replacement
 - Brake pad and lining 11-45
 - Wiper blades 11-57
 - Replacing
 - Air cleaner element 11-24
 - Battery (Remote keyless entry system) 2-11
 - Lost transmitters (keyless entry system) 2-13
 - Replacing bulbs 11-69
 - Cargo area light 11-81
 - Dome light 11-81
 - Front fog light 11-78
 - Front turn signal light 11-73
 - Headlights 11-70
 - High mount stop light 11-83
 - License plate light 11-81
 - Map light 11-81
 - Parking light 11-74
 - Rear combination lights 11-78
-

Trunk light	11-82
REV indicator light and buzzer	3-13
Rocking the vehicle	8-16
Roof rail and crossbar	8-20

S

Seat	
Fabric	10-6
Heater	1-7
Seatbelt	6
Maintenance	1-27
Pretensioners	1-28
Safety tips	1-13
Warning light and chime	1-15, 3-20
Seatbelts	1-13
Security system	2-17
Selector lever	7-23
Position indicator	3-27
Shift lock release	7-27
Side ventilators	4-3
Snow tires	8-14
Sounding a panic alarm	2-11
Spark plugs	11-28
Specifications	12-2
Speedometer	3-8, 3-15
SRS airbag (Supplemental Restraint System airbag)	6, 1-53

SRS airbag system monitors	1-73
SRS airbag system servicing	1-74
SRS airbag system warning light	3-20
SRS frontal airbag	1-57
SRS side airbag	1-65
Starting the engine	7-9
State emission testing (U.S. only)	7-7
Stopping the engine	7-11
Storage compartments	6-5
Sun shades	2-35
Sun visors	6-4
Supplemental Restraint System airbag (SRS)	1-53
Synthetic leather upholstery	10-6


T

Tachometer	3-9, 3-16
Temperature gauge	3-11, 3-18
Temporary spare tire	9-3
Tilt steering wheel	3-50
Tire	
Chains	8-16
Inspection	11-47
Pressures and wear	11-48
Replacement	11-53
Rotation	11-52
Tires	12-5

Types	11-47	Symbols	4
Tires and wheels	11-47	Ventilator	4-2
Top tether anchorages	1-47		
Towing	9-17	W	
All wheels on the ground	9-21	Warning and indicator lights	3-20
Flat-bed truck	9-20	Warning lights	
Trailer		ABS	3-23
Hitch	8-25	All-wheel drive	3-26
Hitches	8-34	Anti-lock Brake system	3-23
Towing	8-29	AT OIL TEMPerature	3-22
Towing tips	8-37	Brake system	3-24
Trunk lid	2-27	Charge	3-22
Release handle	2-28	CHECK ENGINE	3-21
Trunk light	11-82	Door open	3-26
Turn signal		Oil pressure	3-22
Indicator lights	3-27	R.Diff TEMPerature	3-23
Lever	3-32	Seatbelt	1-15, 3-20
		SRS airbag system	3-20
U		Warranties and maintenance	8-29
Under-floor storage compartment	6-18	Washing	10-2
		Waxing and polishing	10-3
V		Wear indicators	11-51
Valet mode	2-20	Wheel	
Vanity mirror	6-4	Alignment	12-6
Vehicle		Balance	11-51
Capacity weight	8-19	Replacement	11-53
Identification	12-11	Windows	2-24

Windshield	
Windshield washer fluid	11-56
Wiper and washer switches	3-38
Wiper deicer	3-43
Winter driving	8-11
Wiper and washer	3-36

U.S. Compass Calibration Zones

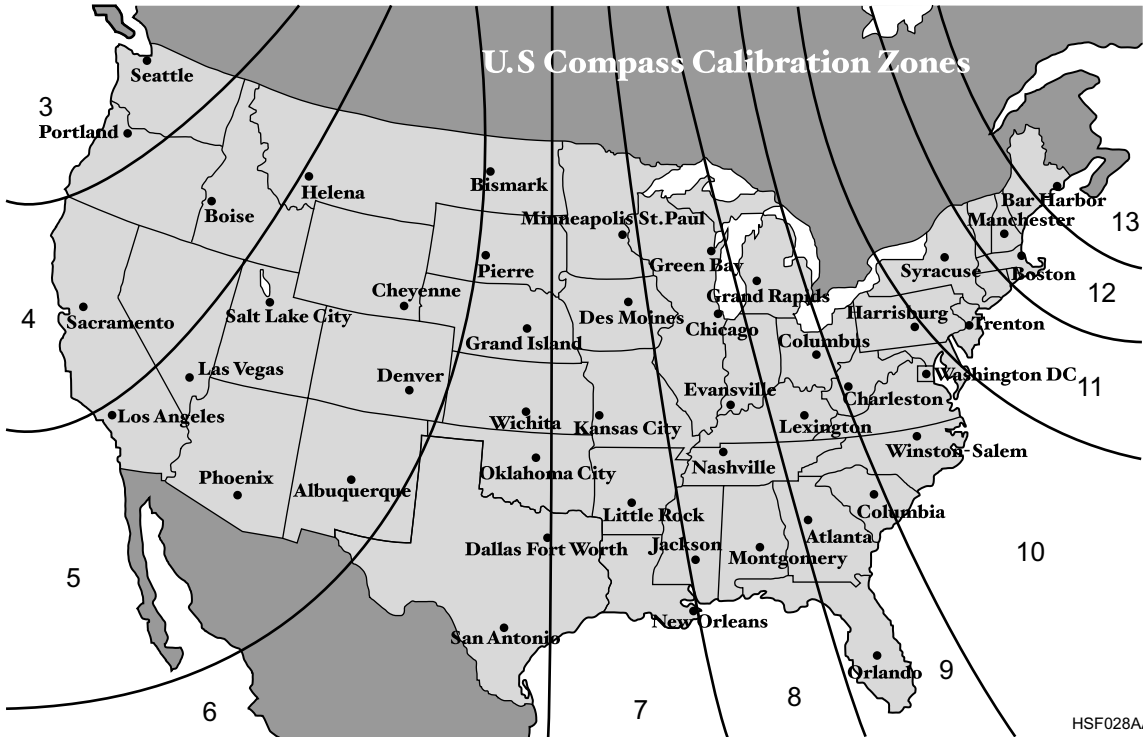

GAS STATION REFERENCE

Fuel:

▼ 2.5-liter non-turbo models

Use only unleaded gasoline with an octane rating of 87 AKI or higher.

▼ 2.0-liter turbo models

Use premium unleaded gasoline with an octane rating of 91 AKI or higher. If premium unleaded gasoline is not available, regular unleaded gasoline with octane rating of 87 AKI or higher may be temporarily used. For optimum engine performance and driveability, it is required that you use premium grade unleaded gasoline.

▼ 2.5-liter turbo models

Use premium unleaded gasoline with an octane rating of 93 AKI or higher. If premium unleaded gasoline with an octane rating of 93 AKI is not available, premium unleaded gasoline with octane rating of 91 AKI or higher may be temporarily used. For optimum engine performance and driveability,

it is required that you use premium grade unleaded gasoline with an octane rating of 93 AKI or higher.

■ Fuel octane rating

This octane rating is the average of the Research Octane and Motor Octane numbers and is commonly referred to as the Anti Knock Index (AKI). Refer to “Fuel” section in this manual.

Fuel capacity:

15.9 US gal (60 liters, 13.2 Imp gal)

Engine oil:

Use only API classification SL with the words “ENERGY CONSERVING” and the New API certification mark (starburst mark) displayed on the container.

Engine oil capacity:

4.2 US qt (4.0 liters, 3.5 Imp qt)

Cold tire pressure:

Item		RS, RS sport package, WRX	WRX (option tire) ^{*1}	WRX-STi
Tire size		P205/55R16 89V	215/45R17 87W	225/45R17 90W
Wheel size		16 × 6 ¹ / ₂ JJ	17 × 7 JJ	17 × 8 JJ
Pressure	Front	32 psi (220 kPa, 2.2 kgf/cm ²)	33 psi (230 kPa, 2.3 kgf/cm ²)	36 psi (250 kPa, 2.5 kgf/cm ²)
	Rear	29 psi (200 kPa, 2.0 kgf/cm ²)	32 psi (220 kPa, 2.2 kgf/cm ²)	30 psi (210 kPa, 2.1 kgf/cm ²)
Temporary spare tire	Size	T135/70 D16		T135/70 D17
	Pressure	60 psi (420 kPa, 4.2 kgf/cm ²)		

*1: The recommended cold tire pressure for the 215/45R17 87W tire is not indicated on the vehicle placard attached to the driver's side B-pillar since this tire is a dealer option for the WRX. If your vehicle is equipped with 215/45R17 87W tires, be sure to adjust them to the air pressure shown on this page.