

Barbie™

Tune Blossom™ Personal CD Player



OWNER'S MANUAL

BAR100

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

SAFETY PRECAUTIONS



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this unit near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this unit during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as the following: the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen into the unit; and/or the unit has been exposed to rain or moisture, does not operate normally, has changed its performance or has been dropped.
14. This unit should not be exposed to dripping or splashing water and no object filled with liquids such as vases should be placed on the unit.
15. Do not overload wall outlet. Use only power source as indicated.
16. Use replacement parts as specified by the manufacturer.
17. The product may be mounted to a wall only if recommended by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

Emerson Radio Corp. has produced this audio product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



WARNING

Choking Hazard—Small Parts and Packaging Materials. Not for children under 5 years.

- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

NOTES:

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.

Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel

<u>Level</u>	<u>Example</u>
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet

 
THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet engine
180	Rocket launching pad



Information courtesy of the Deafness Research Foundation.


LOCATION OF CONTROLS

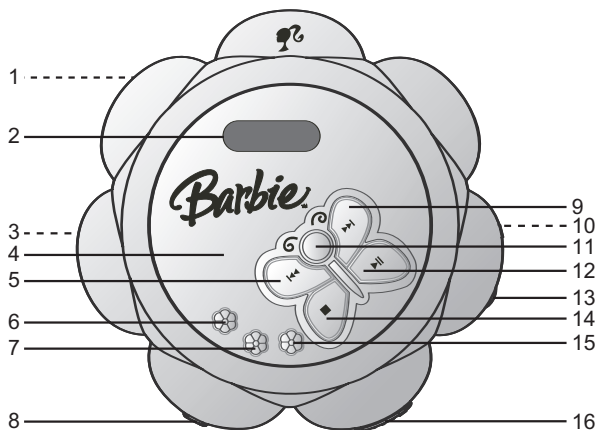

- | | |
|--|---|
| 1. DC 4.5V Jack
(Side of Unit) | 10. PHONES Jack
(Side of Unit) |
| 2. Display | 11. GEMSTONE FUN Button |
| 3. Battery Compartment
(Rear of Unit) | 12. POWER ON/PLAY/
PAUSE >>>> Button |
| 4. CD Compartment | 13. VOLUME Control |
| 5. SKIP/SEARCH <<>> Button | 14. POWER OFF/
STOP ■ Button |
| 6. PROG. Button | 15. MODE Button |
| 7. ASP (Anti-Shock
Protection) Button | 16. CD Door OPEN Switch |
| 8. HOLD (ON/OFF) Switch | |
| 9. SKIP/SEARCH >>>> Button | |

LOCATION OF CONTROLS (CONTINUED)

 LCD DISPLAY

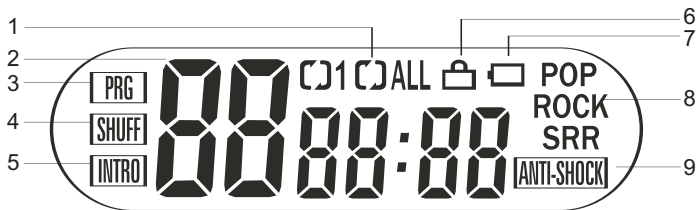


1. REPEAT 1 (C1)/ALL (C2) Indicator
2. Track/Time Display
3. PRG (Program) Indicator
4. SHUFF (Shuffle) Indicator
5. INTRO Indicator
6. Hold (C) Indicator
7. Battery Low (C) Indicator
8. EQ (Equalizer) Indicators
9. ANTI-SHOCK Indicator

 
POWER SOURCES

This CD player requires either two (2) "AA" batteries (not included) or an AC adapter (not included).

BATTERY INSTALLATION

The Battery indicator () will appear in the CD display when the batteries need replacing.


1. Open the Battery Compartment door by pressing in on the tab and then lifting it. **To prevent the possibility of losing the cover, it cannot be removed.**
2. Insert two (2) "AA" batteries (not included) according to the polarity diagram inside the battery compartment. Alkaline batteries are recommended for the longest playing time.

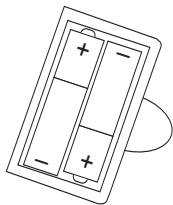

BATTERY PRECAUTIONS

- * Replacement of batteries must be done by an adult.
- * Do not mix old and new batteries.
- * Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- * The supply terminals are not to be short-circuited.
- * Non-rechargeable batteries are not to be recharged.
- * Exhausted batteries are to be removed.
- * Only batteries of the equivalent type are to be used.
- * Batteries are to be inserted with the correct polarity.
- * Dispose of batteries properly.
- * Do not dispose of batteries in fire; batteries may explode or leak.

AC OPERATION

 
To operate the unit using AC power, connect an AC adapter (not included) to an AC outlet having 120V, 60Hz AC only. Plug the small end into the DC4.5V  jack on the side of the unit and connect the other end into the AC outlet. The batteries are automatically disconnected when the AC adapter is used.

CAUTION: When not using AC power, disconnect the AC adapter from the wall outlet by pulling the plug (not the cord). Do not touch the AC adapter with wet hands. Fully insert the plug without exposing any part of the blade.

OPERATION

TO INSERT AND PLAY A CD

1



Open the CD compartment door by sliding the CD Door OPEN switch.

Insert a disc onto the center spindle (label side up) and push down gently to make sure it is securely on the spindle. Close the CD compartment door.


Insert the headphones into the PHONES jack.

2




Press the POWER ON/PLAY/PAUSE ►|| button to turn on the unit and begin playback on Track 1.

 3

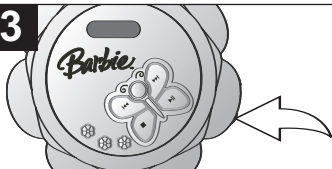

Adjust the VOLUME control as desired.

 4

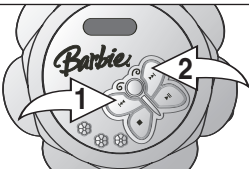

To skip forward or backward through the tracks on the disc, press and release the SKIP/SEARCH ◀ ❶ or ▶ ❷ button.

To search forward or backward through the disc, press and hold the SKIP/SEARCH ◀ ❶ or ▶ ❷ button.

CONTINUED ON THE NEXT PAGE

OPERATION (CONTINUED)



When the disc is through playing, it will stop. Press the **POWER OFF/STOP ■** button to stop the disc before it is finished.


Press the **POWER OFF/STOP ■** button again while in the Stop mode to turn the unit off or wait approx. 60 seconds and the unit will automatically turn off (Auto Power Off).


TO PAUSE PLAYBACK



Press the **POWER ON/PLAY/PAUSE ►||** button to pause playback; the display will blink. Press the **POWER ON/PLAY/PAUSE ►||** button to continue playback; the display will stop blinking and playback will continue.

 HOLD SWITCH

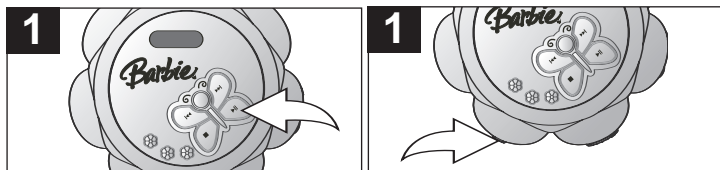

To prevent accidentally pressing a button while walking, etc., slide the **HOLD** switch to the **ON** position; the Hold indicator () will appear in the display. When you want to use these buttons again, slide the **HOLD** switch back to the **OFF** position.

PLEASE SEE NOTES ON THE NEXT PAGE

OPERATION (CONTINUED)

CD PLAYBACK NOTES:

- This unit is capable of playing standard CDs or 3" singles; no adapter is required.
- If a disc is inserted incorrectly, dirty, damaged or not present at all, "disc" will appear in the display.
- As each track is played, the track number and elapsed time are shown in the display.
- To remove the disc, open the CD compartment, hold the edge of the CD and gently press the center spindle and lift the CD.
- "OPEN" will appear in the display when the CD Compartment door is open.
- Although this unit can read CD-R and CD-RW discs, in addition to normal CDs, the playability of those discs may be affected by the type of software that was used to create the discs, as well as the blank media you are using. 100% playability cannot be guaranteed. This is not an indication of a problem with this unit.

ANTI-SHOCK SYSTEM

This CD player has a built-in anti-shock system that cuts down on CD skipping, which is useful when using the CD player in the car or while jogging/walking.

When the unit is turned on, the anti-shock system will start automatically, the sound will mute for just a moment and the display will show the blinking ANTI-SHOCK indicator. Within a few seconds, the ANTI-SHOCK indicator will fill to indicate music signals are stored memory.

 
 
To turn the anti-shock system off, press the ASP button. To turn the anti-shock system on again, press the ASP button again.

NOTES:

- When the CD player is used in a stable location, turn the anti-shock system off by pressing the ASP button. When the anti-shock system is OFF, battery consumption is less.
- The anti-shock system provides for continuous sound output when the unit is subject to vibration, but it will not correct errors, such as a defective or dirty CD.

OPERATION (CONTINUED)



TO REPEATEDLY PLAY BACK ONE TRACK

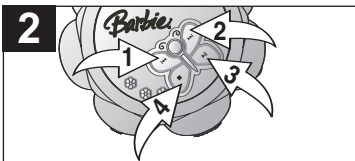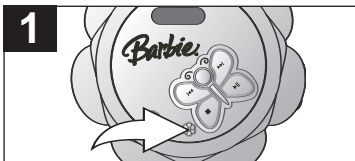

While in CD Stop mode, press the MODE button once; the Repeat One indicator "C1" will appear in the display.

Press the SKIP/SEARCH ❶ or ❷ button to select a track and press the POWER ON/PLAY/PAUSE ❸ button to start playback. The unit will play the selected track over and over until the POWER OFF/STOP button ❹ is pressed.

  TO REPEATEDLY PLAY BACK ALL TRACKS

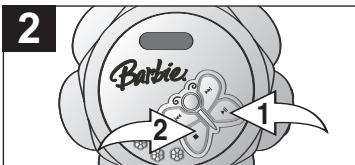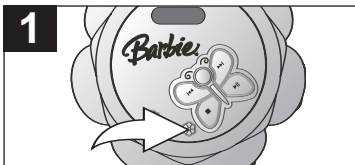

While in CD Stop mode, press the MODE button twice; the Repeat All indicator "C ALL" will appear in the display.

 
Press the POWER ON/PLAY/PAUSE ❶ button to start playback and the unit will then play all the tracks on the CD over and over until the POWER OFF/STOP button ❷ is pressed.

TO CANCEL OR STOP REPEAT PLAYBACK:

- **TO STOP REPEAT PLAYBACK**, press the POWER OFF/STOP button once.
- **TO CANCEL REPEAT PLAYBACK**, press the MODE button until no indicators appear in the display; normal playback will continue.

OPERATION (CONTINUED)

INTRO PLAY

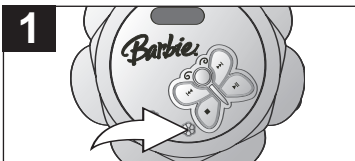


While in CD Stop mode, press the MODE button three times; the INTRO indicator will appear in the display.



Press the POWER ON/PLAY/PAUSE ►|| button ❶ to start playback and the unit will then play the first 10 seconds of each track until the POWER OFF/STOP ■ button ❷ is pressed.

 TO RANDOMLY PLAY BACK A CD

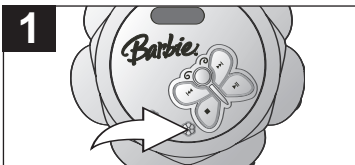

While in CD Stop mode, press the MODE button four times; the SHUFF indicator will appear in the display.



Press the POWER ON/PLAY/PAUSE ►|| button ❶ to start playback and the unit will then play all the tracks on the CD in random order until the POWER OFF/STOP ■ button ❷ is pressed.

TO CANCEL OR STOP INTRO OR RANDOM PLAYBACK:

- **TO STOP INTRO OR RANDOM PLAYBACK**, press the POWER OFF/STOP ■ button once.
- **TO CANCEL INTRO OR RANDOM PLAYBACK**, press the MODE button until no indicators appear in the display; normal playback will continue.

OPERATION (CONTINUED)

TO PROGRAM THE MEMORY (UP TO 20 TRACKS)



 
While in CD Stop mode, press the PROG. button; the track number and PRG indicator will blink in the display.



Select the first track to be played back using the SKIP/SEARCH ◀ ❶ or ▶ ❷ button, then press the PROG. button ❸ again. Repeat this step to program additional tracks (up to 20 tracks).



Press the POWER ON/PLAY/PAUSE ▶ ❶ button to begin Programmed playback; the PRG indicator will appear. Adjust the VOLUME control ❷ as desired.

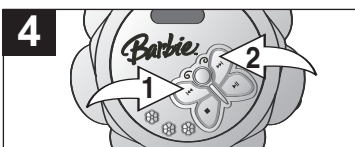

To skip forward or backward through the programs, press the SKIP/SEARCH ◀ ❶ or ▶ ❷ button. When the disc is through playing, it will stop.

NOTES:

- Programming is the ability to preselect the order in which a series of tracks will be played.
- Each track may be stored in the program memory as many times as desired up to 20 tracks.
- Press the POWER OFF/STOP ■ button to stop the disc before it is finished.
- To clear the memorized program, press the POWER OFF/STOP ■ button again while in the Stop mode, wait approx. 60 seconds and the unit will turn off or open the CD compartment.

 
OPERATION (CONTINUED)



Barbie™ has a surprise just for you! Just follow the instructions below and see what you can do with your GEMSTONE FUN button!



Step 1

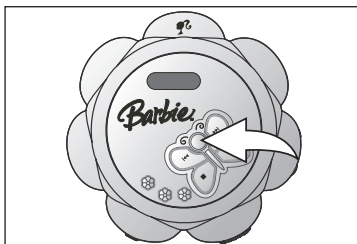

Press the GEMSTONE FUN button on your CD player.



Step 2

 
 
- ✿ Pop
- ✿ Rock
- ✿ SRR (Surround)
- ✿ Normal

SURPRISE! Your GEMSTONE FUN button is really a secret EQ (Equalizer) button. You can now set your CD player to: Pop, Rock, Surround or Normal.

CARE AND MAINTENANCE

Caring for Compact Discs

- Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.

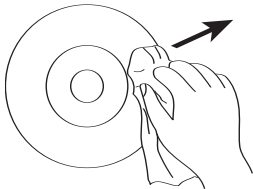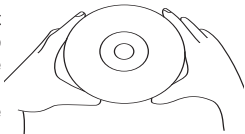

- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.
- Compact Discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc. Sharp writing instruments, or the ink, may damage the surface.



Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC adapter when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	CAUSE	SOLUTION
Unit will not turn on.	Weak or dead batteries.	Replace batteries.
	Batteries not inserted correctly.	Insert correctly.
	AC adapter not connected.	Check AC adapter connection.
Disc will not play.	CD compartment not closed.	Close CD compartment.
	Disc inserted incorrectly.	Reinsert disc correctly.
	HOLD switch is set to ON.	Slide HOLD switch to OFF.
	Dirty or defective disc.	Try another disc.
	Moisture condensation on disc.	Wipe disc with soft cloth.
No sound from headphones.	Headphone plug not inserted correctly.	Reinsert headphone plug correctly.
	VOLUME control set to minimum.	Increase volume.
	Weak batteries.	Replace batteries.
	Defective disc.	Try another disc.
Erratic playback.	Dirty or defective disc.	Clean or replace disc.

EMERSON RADIO CORP.
LIMITED WARRANTY (Valid in the United States)

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.
5101 Statesman Drive
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

Model Number: **BAR100**
Serial Number: _____



Emerson®

SERVICE

TO FIND THE LOCATION AND PHONE
NUMBER OF YOUR NEAREST SERVICE
CENTER PERMITTED TO PERFORM
WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.,
Consumer Affairs Dept.,
5101 Statesman Drive,
Irving, TX 75063.

EMERSON® WARRANTY (Valid in Canada)
Consumer Electronics, Home Appliances and Home Office Products

Thank you for choosing EMERSON®!

SYNNEX Canada Limited gives the following express warranty to the original consumer purchaser or gift recipient for this EMERSON product, when shipped in its original container and sold or distributed in Canada by SYNNEX Canada Limited or by an Authorized EMERSON Dealer:

SYNNEX Canada Limited warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, SYNNEX Canada Limited shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- b. Any EMERSON product tampered with, modified, adjusted or repaired by any party other than SYNNEX Canada Limited or EMERSON's Authorized Service Centres.
- c. Damage caused or repairs required as a result of the use with items not specified or approved by SYNNEX Canada Limited, including but not limited to head cleaning tapes and chemical cleaning agents.
- d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
- e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- g. Any product received without appropriate model, serial number and CSA /cUL /cULus /cETL /cETLus markings.
- h. Any products used for rental or commercial purposes.
- i. Any installation, setup and/or programming charges.

Should this EMERSON product fail to operate during the warranty period, warranty service may be obtained upon delivery of the EMERSON product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized EMERSON Service Centre. This warranty constitutes the entire express warranty granted by SYNNEX Canada Limited and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of SYNNEX Canada Limited. To the extent the law permits, SYNNEX Canada Limited disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this EMERSON product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of SYNNEX Canada Limited to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

CARRY-IN PARTS & LABOUR WARRANTY PERIODS:

- Audio Products: 1 Year (Remote Control, if applicable – 90 Days)
- Home Appliances: 1 Year
 - Microwave Magnetron parts only additional 3 Years
 - Refrigerator / Freezer Compressor parts only, additional 4 years
- Home Office Products: 1 Year

To obtain the name and address of the nearest Authorized EMERSON Service Centre or for more information on this warranty

- visit www.emersonelectronics.ca
- mail your inquiry to: SYNNEX Canada Limited, EMERSON Customer Service
200 Ronson Drive, Toronto, ON M9W 5Z9, or
- call toll free 1-800-663-5954, Monday to Friday 9:00am – 5:00pm Eastern Standard Time.

08.2007

