

# *Matrix 1*

---

➤ *Owner's Guide*

# *limited lifetime consumer warranty*

Directed Electronics ("Directed®") promises to the original purchaser to repair or replace with a comparable reconditioned model any Directed® unit (hereafter the "unit"), excluding without limitation the siren, the remote transmitters, the associated sensors and accessories, which proves to be defective in workmanship or material under reasonable use dur-

FEDERAL LAWS SHALL APPLY AND GOVERN THE DISPUTE. THE MAXIMUM RECOVERY UNDER ANY CLAIM AGAINST DIRECTED® SHALL BE STRICTLY LIMITED TO THE AUTHORIZED DIRECTED® DEALER'S PURCHASE PRICE OF THE UNIT. DIRECTED® SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR THE LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, THE MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE. Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights that vary from State to State.

This product may be covered by an Anti-Theft Guarantee. See your authorized Directed® dealer for details of the plan or call Directed® Customer Service at 1-800-876-0800. Directed® security systems, including this unit, are deterrents against possible theft. Directed® is not offering a guarantee or insurance against vandalism, damage or theft of the automobile, its parts or contents; and hereby expressly disclaims any liability whatsoever, including without limitation, liability for theft, damage and/or vandalism. Directed® does not and has not authorized any person or entity to create for it any other obligation, promise, duty or obligation in connection with this security system.

Make sure you have all of the following information from your dealer:

A clear copy of the sales receipt, showing the following:

- Date of purchase
- Your full name and address
- Authorized dealer's company name and address
- Type of alarm installed
- Year, make, model and color of the automobile
- Automobile license number
- Vehicle identification number
- All security options installed on automobile
- Installation receipts

## ***trademarks and copyrights***

---

Bitwriter®, Clifford®, Code-Hopping™, Directed®, Doubleguard®, ESP™, FailSafe®, Ghost Switch™, Learn Routine™, Nite-Lite®, Nuisance Prevention®, Circuitry, NPC®, Revenger®, Silent Mode™, Soft Chirp®, Stealth Coding™, Stinger®, Valet®, Vehicle Recovery System®, VRS®, and Warn Away® are all Trademarks or Registered Trademarks of Directed Electronics

# *table of contents*

---

<b>limited lifetime consumer warranty</b> . . . . .	<b>i</b>
<b>what is included</b> . . . . .	<b>2</b>
<b>important information</b> . . . . .	<b>2</b>
system maintenance . . . . .	2
your warranty . . . . .	3
fcc/id notice . . . . .	3
<b>transmitter functions</b> . . . . .	<b>4</b>
Standard configuration . . . . .	4
<b>using your system</b> . . . . .	<b>5</b>
active arming . . . . .	5
passive arming . . . . .	5
multi-level security arming (optional feature) . . . . .	7
disarming . . . . .	9
siren silencing . . . . .	9
remote controlled chirp muting . . . . .	11
valet mode . . . . .	11
false alarm control technology (FACT) . . . . .	12
<b>diagnostics</b> . . . . .	<b>13</b>
arming diagnostics . . . . .	14
disarming diagnostics . . . . .	14
table of zones . . . . .	16
interpreting zone diagnostics . . . . .	16
<b>anti-code grabbing</b> . . . . .	<b>17</b>
<b>high frequency</b> . . . . .	<b>18</b>
<b>owner recognition</b> . . . . .	<b>18</b>
<b>smart power up II</b> . . . . .	<b>19</b>
<b>power saver mode</b> . . . . .	<b>19</b>
<b>programming options</b> . . . . .	<b>20</b>
<b>installation options</b> . . . . .	<b>23</b>
<b>vehicle recovery system (vrs®)</b> . . . . .	<b>24</b>
arming the vrs® . . . . .	25
vrs® triggered sequence . . . . .	25
disarming the vrs® . . . . .	26
<b>glossary of terms</b> . . . . .	<b>28</b>
<b>security &amp; convenience expansions</b> . . . . .	<b>30</b>
<b>quick reference guide</b> . . . . .	<b>33</b>

# *what is included*

---

- One control module
- A pair of three-button transmitters
- A dual-stage shock sensor (on-board the control module)
- A 6-tone siren
- Status LED indicator light
- A push-button Valet button
- Your warranty registration
- Faultproof starter interrupt ready circuitry (may require extra labor)
- HF+ external receiver/antenna

# *important information*

---

Congratulations on the purchase of your state-of-the-art vehicle security system. This system has been designed to provide years of trouble-free operation. Due to the complexity of this system, it must be installed by an authorized dealer only. Installation of this product by anyone other than an authorized dealer voids the warranty. All dealers are provided with preprinted dealer certificates to verify that they are authorized.

This owner's guide should help you to get the most out of your system. Please take the time to read it prior to using the system.

## **→ system maintenance**

The system requires no specific maintenance. Your remote control is powered by a small, lightweight 3 volt lithium battery

that will last approximately one year under normal use. When the battery weakens, operating range will be reduced and the LED on the remote will dim.


### → **your warranty**

Your warranty registration must be returned and the bar code serial number must not be removed. If the warranty registration is not returned, you do not have a warranty. It is also necessary to keep your proof of purchase, which reflects that the product was installed by an authorized dealer. Make sure that you receive the warranty registration from your dealer.

### → **fcc/id notice**

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

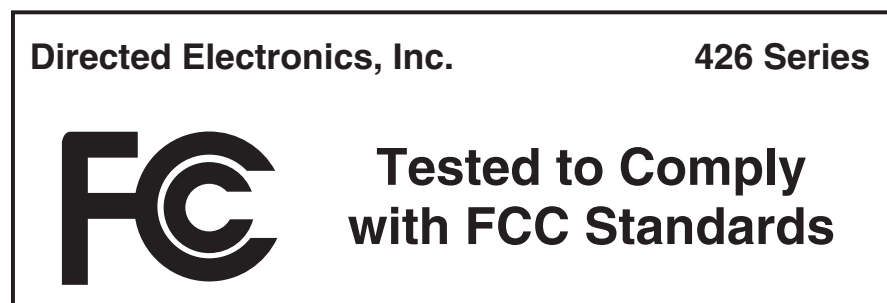

# *transmitter functions*

---

The system uses a computer-based learn routine to learn the transmitter buttons. This makes it possible to assign any transmitter button to any system function. The transmitter initially comes programmed with Standard Configuration, but may also be customized by an authorized dealer. The buttons in all of the instructions in this manual correspond to a Standard Configuration transmitter.

## → **Standard configuration**






**Button**

The arm, disarm, and panic functions are controlled by this button.




**Button**

Remote Controlled Chirp Muting and an optional accessory function are controlled by . (Remote Controlled Chirp Muting works by pressing  for less than one second before arming or disarming the system. An optional accessory function, such as trunk release, can be controlled by pressing  for 1.5 seconds.) This accessory output controls \_\_\_\_\_.



**Button**


An optional accessory convenience or expansion function that you have added to your system can be activated by pressing . This accessory output controls \_\_\_\_\_.

# *using your system*

---

The buttons used in the instructions in this manual correspond to the standard configuration. Remember, this is not the only way your transmitter may be set up. It can be custom configured to meet your needs.

## **→ active arming**

You can activate, or arm, the system by pressing  on your transmitter for one second. When the system arms, you will hear a short siren sound, or chirp, and the parking lights will flash once. If the vehicle's power door locks have been connected to the system, the doors will lock.

While the system is armed, the status LED will flash approximately once per second, indicating that the system is actively protecting your vehicle. If you hear a second chirp after arming, and see the status LED flashing in groups, refer to the *Diagnostics* section of this guide. This extra chirp is called Bypass Notification.

## **→ passive arming**

The system also can be programmed to arm itself automatically (called passive arming). If the system is programmed for passive arming, it will automatically arm 30 seconds after the ignition is turned off and the system "sees" you leave the vehicle by opening and closing a door. Whenever the system is in its 30-second passive-arming countdown, the status LED will flash twice as fast



as it does when the system is armed. The siren will chirp one time 20 seconds after the last door has been closed. The system is not actually armed at that point. The system arms and the doors lock (if connected and programmed for passive locking) at the 30 second mark, but the siren will not chirp. The early chirp provides you with a 10-second warning prior to arming.

**note:** If any protected entry point (such as a door or a switch-protected trunk or hood) is open, the system will not passively arm (unless forced passive arming is programmed on). See Programming Options section of this guide. Additionally, each time a protected entry is triggered during the arming countdown, the 30-second countdown starts over.

**When armed, your vehicle is protected as follows:**

- Light impacts will trigger the Warn Away® signal. When triggered, the siren will chirp and the parking lights will flash for a few seconds.
- Heavy impacts will trigger the system. The triggered sequence is between 1-180 seconds of constant siren and flashing parking lights.
- If a door is opened, the system will immediately start chirping the siren and flashing the parking lights. Three seconds later, the siren output changes to a continuous blast. This progressive response gives you time to disarm the system with your transmitter if you inadvertently open the door while the system is armed, while still providing an instant response (even if the door is immediately closed).

- Turning on the ignition key will trip the same two-stage response as opening a door.
- The optional starter kill prevents the vehicle's starter from cranking.

### ➔ **multi-level security arming (optional feature)**


**note:** Multi-Level Security Arming is only available when using an optional Radar Master transmitter that has been configured with separate transmitter buttons for arming and disarming.

Multi-Level Security Arming allows you to select which of the security system's inputs or sensors will be active and which will be bypassed at the time that the system is armed. (See Table of Zones section.) Pressing the arm button again within five seconds of arming the security system will activate the Multi-Level Security Arming feature. Each time the arm button is pressed again, a different security level is selected. The different security levels can be selected as follows:

- Pressing the arm button one time: The siren chirps once. The system is armed.
- Pressing the arm button a second time within five seconds: The siren chirps twice followed by a long chirp. Zone Two is now bypassed.
- Pressing the arm button a third time within five seconds: The siren chirps three times followed by a long chirp. Zone Four is now bypassed.


- Pressing the arm button a fourth time within five seconds: The siren chirps four times followed by a long chirp. Zones Two and Four are now bypassed.
- Pressing the arm button a fifth time within five seconds: The siren chirps five times followed by a long chirp. All input zones, except the ignition, are now bypassed.

## arming while driving



Your system can be armed while driving the vehicle. Simply press  on your transmitter for two seconds while the vehicle is running or while the ignition is on. The siren will chirp once and then once more to indicate that the ignition is on. The security system will not respond to any input except the door triggers and the Faultproof Starter Kill (if installed) will not be activated. The security system will disarm automatically whenever the ignition is turned off or the remote's arm/disarm button is pressed. The siren will chirp twice and the LED will stop flashing.

**note:** If programmed for the optional Vehicle Recovery System (VRS<sup>®</sup>) feature, arming with the transmitter will arm the VRS<sup>®</sup> feature. (See VRS<sup>®</sup> section of this guide.)

## disarming

To disarm the system, press  . You will hear two chirps, and the parking lights will flash twice. If the power locks are connected to the system, the doors will unlock. If the siren chirps either four or five times when disarming, refer to the *Diagnostics* section of this guide. This is called Tamper Alert.


### → siren silencing

This system offers Siren Silencing. Siren Silencing is a feature that makes it possible to silence and reset the system when it is triggering without disarming the system. If the system is triggered, and the siren has been sounding for longer than six seconds, pressing  on the transmitter will stop the trigger and return the unit to the armed state. The system will not disarm, but rather reset. This prevents you from disabling the system should you wish to disarm it without visually checking the vehicle. Pressing the disarm button again, after resetting the system, will disarm the system. Pressing  during the first six seconds of the triggered sequence will disarm the system immediately. The six second timer is provided for your convenience, in case you accidentally trigger the system.


### → disarming without a transmitter

This feature allows you to disarm the security system without the remote transmitter should it be lost, damaged, or disabled. In order to disarm the system without a remote transmitter, you must have

the vehicle's ignition key and know where the Valet button is located. Be sure to check with the installer for the location and the number of presses of the Valet button required to disarm the system.

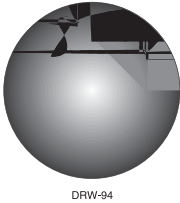

To disarm the security system, turn the ignition to the ON position. Press the Valet button the preset number of times (one to five times) within 15 seconds. After 5 seconds, the system will now disarm. If the system does not disarm, you may have waited too long; turn the ignition off and on and try again.

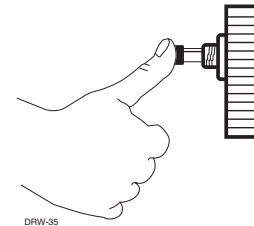

**Location of Valet Button** \_\_\_\_\_

**Number of Pulses** \_\_\_\_\_

**important!** The unit can be programmed to respond to one to five pulses of the Valet button for the disarm function. Be sure to check with the installer for the desired programming.








but all convenience functions (door locks, trunk release, etc.) will continue to work normally.

**To enter or exit Valet Mode:**

1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the Valet switch within 10 seconds.

The status LED will light solidly if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.

**To enter or exit Valet Mode using the transmitter:**

1. Open any vehicle door.
2. Press  /  .
3. Press  .
4. Press  /  again.

The status LED will light solidly if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.

**→ false alarm control technology (FACT)**

Your system offers FACT, a feature that prevents annoying repetitive trigger sequences due to a faulty sensor or environmental conditions such as thunder, jackhammers, airport noise, etc.

Here's how it works: The alarm triggers three times. Each time, the same sensor is triggering the alarm. The three triggers are within 60 minutes of each other. FACT will interpret this pattern of triggers as false alarms. After the third trigger, FACT

ignores, or bypasses, that sensor (along with any other sensors sharing the same zone) for 60 minutes.

If the bypassed sensor tries to trigger the system while it is being bypassed, the 60-minute bypass period will start over. This ensures that a sensor that continually triggers will remain bypassed.

Doors are covered by FACT differently: If the alarm is triggered by an open door for three full cycles, the doors will be bypassed until the trigger ceases.

FACT is programmable. See the Programming Options section of this guide.

**note:** Arming and disarming the system does not reset this function! The only ways to reset a bypassed zone are for it to not trigger for 60 minutes, or to turn on the ignition. If testing your system, it is important to remember that the FACT programming can cause zones to be bypassed and appear to stop working. If five chirps are heard when disarming, FACT has been engaged. If you wish to clear the FACT memory, turn the ignition key on.

## *diagnostics*

---

The microprocessor at the heart of your security system is constantly monitoring all of the switches and sensors that are connected to it. It detects any faulty switches and sensors and prevents them from disabling the entire system. The microprocessor will also record and report any triggers that occurred



during your absence. Refer to the *System Status Chirps* and *Table of Zones* charts for diagnostic information.

### → **arming diagnostics**

If the system is armed while an input is active (door open, sensor triggering, etc.) the unit will chirp once when arming and then one more time a few seconds later. This is called Bypass Notification.

**note:** Bypass Notification will not occur when using Remote Controlled Chirp Muting or if chirps have been programmed OFF.

The security system will ignore the input that was active when the system was armed, until the input goes away. Three seconds later the system will monitor that input normally. For example, if your vehicle has interior light exit delay, and you arm the system before the interior light goes out, you may hear Bypass Notification chirps. Once the light shuts off, however, the doors are monitored normally.

### → **disarming diagnostics**

Extra disarm chirps are the Tamper Alert. If four chirps are heard when disarming, the system was triggered in your absence. If five chirps are heard, a zone was triggered so many times that False Alarm Control Technology (FACT) has bypassed that zone. In either case, the LED status indicator will indicate which zone

was involved (see Table of Zones section). The system will retain this information in its memory, and continue to chirp four or five times each time it is disarmed, until the next time the ignition key is turned on.

## → system status chirps

The siren will chirp when arming/disarming the system. The pattern of chirps will audibly report the system's status as described below.

Action	Number of Chirps	Description
Arm	1	System armed
Arm	1 (3 second delay), 1	System armed with zone active
Disarm	2	System disarmed
Disarm	4	System disarmed with zone violation report
Disarm	5	System disarmed FACT active

## → table of zones

The zone number is the number of LED flashes used by the system to identify that input. The standard input assignments are listed below, along with spaces to write in any optional sensors or switches you have had installed.

<b>Zone - Number of LED Flashes</b>	<b>Description</b>	<b>Dealer-Installed Options</b>
1	Instant trigger - often used for hood/trunk pinswitches	
2	Instant trigger - a heavier impact detected by the shock sensor	
3	Door switch trigger	
4	Instant trigger - for optional sensors	
5	Ignition trigger	

## → interpreting zone diagnostics

Warn Away responses are not reported by arming or disarming diagnostics. If you receive a Bypass notification when arming or a Tamper Alert notification when disarming, look at the LED. Active or triggered zones will be indicated by a pattern of blinks by the LED.


### **Example**

If zone 3 was active or triggered, the LED will blink three times with a two-second pause. Then it will blink three times again, and repeat until the ignition is turned on.

**note:** Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details.

## *anti-code grabbing*

---

The receiver and transmitters each use mathematical formulas called algorithms to change their codes each time the transmitter is used. This technology has been developed to increase the security of the unit. The control unit knows what the next codes should be. This helps to keep the transmitter "in sync" with the control unit even if you use the remote control out of range of the vehicle. However, if the transmitter has been pressed many times out of range of the vehicle, or if the battery has been removed, it may get out of sync with the control unit and fail to operate the system. To re-sync the remote control simply press  of the transmitter several times within range of the vehicle. The alarm will automatically re-sync and respond to the transmitters normally.

## *high frequency*

---

Your system transmits and receives at 434 MHz. This provides a cleaner spectrum with less interference and a more stable signal. Enjoy a phenomenal increase in range – even in areas with high radio interference.

## *owner recognition*

---

Owner Recognition is a feature available exclusively from Directed. Using the Directed Bitwriter, a hand-held programming tool, your dealer can program many of the system settings. The programmer makes it possible to program different settings for each transmitter that is used with the system. Then, whenever a specific transmitter is used, the system will recall the settings assigned to that transmitter. Owner Recognition lets up to four users of the system have different settings that meet their specific needs. It is almost like having four separate alarms in your vehicle, one for each user.

**note:** Owner Recognition cannot be programmed without a Directed Bitwriter and the necessary software. Check with your dealer for more information.

## *smart power up II*

---

This Directed system will store its current state to non-volatile memory. If power is lost and then reconnected, the system will recall the stored state from memory. This means if the unit is in Valet Mode and the battery is disconnected for any reason, such as servicing the car, when the battery is reconnected the unit will still be in Valet Mode. This applies to all states of the system including arm, disarm, VRS®, and Valet Mode.

## *power saver mode*

---

Your system will automatically enter Power Saver Mode while armed or in Valet Mode, after a period of time in which no operation has been performed. This lowers the current draw to the vehicle's battery. Power Saver Mode takes over under the following conditions:

- Power Saver when the system is armed: After the system has been armed for 24 hours, the LED will flash at half its normal rate, decreasing the system's current draw.
- Power Saver in Valet Mode: When the system enters Valet Mode the LED illuminates steadily. If the vehicle is not used (ignition is not turned on) for a period of one hour while the system is in Valet Mode, the LED will shut off. If the system remains in Valet Mode, the LED will come back on the next time the ignition is turned on and then back off.

# *programming options*

---

Programming options control what your system does during normal operation, and require few or no additional parts. However, some may require additional installation labor.

The following is a list of the program settings, with the factory settings in **Bold**:

- **Active** arming (only with the transmitter) or passive arming (automatic arming 30-seconds after the last door has been closed).
- Arming/disarming confirmation siren chirps **on** or off.
- The ignition controlled door lock feature on or off: With this feature on, the doors will lock three seconds after the ignition is turned on, and unlock when the ignition is turned off. The system will not lock the doors when the ignition is turned on with any door open. If your installer is programming the security system with the Directed Bitwriter, ignition lock and unlock are independent features and can be programmed separately.
- Passive door locking (with passive arming) or **active door locking** (only when arming with the transmitter). Passive locking allows the vehicle's doors to lock when the security system passively arms (after the 30 second countdown). This feature only works if passive arming has been programmed.

- Panic mode **enabled**/disabled with the ignition on: Some states have laws against siren capability in a moving vehicle.
- Forced passive arming **on** or off: If your system is programmed for passive arming and the forced passive arming feature has been programmed on, the system will passively arm after one hour, even if a protected entry has been left open. This feature is useful if a door has been left ajar when leaving the vehicle. Forced passive arming ensures that the security system will be armed in every situation.
  
- Automatic Engine Disable (AED) on or



system with the transmitter. It is also possible to disarm the AED feature by turning the ignition key to the RUN position and pressing the Valet button the programmed number of times. AED is disabled when the system is in Valet Mode.

**note:** This feature will only function if the Failsafe® Starter Kill relay has been installed.

- Comfort closure: Windows will close upon locking the vehicle.
- Full trigger response 30 or 60 seconds: This determines how long the full triggered sequence lasts. Some states have laws regulating how long a security system can sound before it is considered a nuisance. If your installer is programming the security system with the Directed Bitwriter®, the full triggered response can be programmed for any duration ranging from 1 to 180 seconds.
- False Alarm Control Technology (FACT) **on** or **off**: Please refer to the FACT section of this guide for a complete explanation of how FACT operates. If FACT is programmed off, the security system will respond to inputs from any sensor indefinitely.

**note:** Because many states have laws regulating security systems, programming FACT off may cause your system to violate state laws.


- Progressive door trigger **on** or **off**: When the system is armed and a door is opened, the system responds with ten chirps prior to beginning the full triggered sequence. If an instant

trigger is desired, the progressive door trigger can be programmed off.

- Valet pulse count: The number of presses of the Valet button required to disarm the security system, AED, or the VRS® system can be programmed from one to five presses. The default setting is **one** press.
- Siren tones and chirp volume: The output of the siren consists of six different tones in sequence. Any of these tones can be eliminated by your dealer, resulting in a unique, easily identifiable siren sound. The siren chirps can be either full volume or **six decibels quieter** than the full alarm blast.

## *installation options*

The system has many options that may require extra parts and labor. Some of the possibilities are listed here.

- Progressive unlocking: In most cars with electric power door locks, the system can be configured so that when the system is disarmed, only the driver's door unlocks. A second press of the  button unlocks the other doors. (This feature is available with the four-button transmitter only.)
- Vehicle Recovery System (VRS®): VRS® is an anti-carjacking device designed to help in the safe recovery of your vehicle in case of a carjacking. Please refer to the Vehicle Recovery System section of this guide for a complete explanation of how the Vehicle Recovery System operates.

# vehicle recovery system (vrs®)

The optional VRS® feature is designed to ensure that any unauthorized user of your vehicle (even if using your keys and remote control) will not be able to permanently separate you from your vehicle.

The VRS® cannot prevent a carjacking attempt; however, it does ensure that if your vehicle is taken by an unauthorized user, it will be disabled (after several progressive warnings) as safely as possible. Should a carjacking occur, the VRS® allows you to concern yourself with your personal safety without worrying about your property.

Directed has engineered this vehicle security system, the Failsafe® Starter Kill, and the VRS® feature to provide the best combination of personal safety and property protection available. When properly installed, the system can never inadvertently stop your vehicle in traffic or on railroad tracks while the vehicle is in operation. It is unlike other systems that shut down your engine while it is running. This system is designed to perform starter interrupt, or starter kill. The Failsafe® Starter Kill cannot shut down an already-running engine – it can only prevent an engine from starting in the first place.

**important!** Any installation that allows this product to shut down a vehicle's engine when it is running is contrary to the product's design and intended usage, and Directed hereby expressly disclaims any liability resulting therefrom.

## → arming the vrs®

To arm the VRS®, turn the ignition to the ON position and press the arm button on the remote transmitter for one second. The parking lights will flash and the siren will chirp once. This can be done before driving or while driving the vehicle. Once the system is armed, it will initiate its triggered sequence (see below) if any door is opened and closed. If you are forced from the vehicle, the system will trigger as the door is opened and closed. This is how the system works to combat intersection carjacking. To protect against parking lot carjacking, arm the VRS® before leaving the vehicle. The system will now trigger automatically the next time you or anyone drives the vehicle. This helps to protect the vehicle if someone takes your keys and remote transmitter by force in a parking lot.

**note:** If the VRS® system is armed while operating the vehicle and not disarmed prior to leaving the vehicle, it is still armed and will trigger the next time the vehicle is driven.

## → vrs® triggered sequence

**Fifteen seconds** after the last door has closed, the system's status LED will begin flashing. This delay is intended to allow you time to distance yourself from your vehicle in the event of a carjacking.

**Forty-five seconds later**, the siren begins chirping and the parking lights begin flashing. This time could be used to notify authorities that your vehicle has been hijacked, and tell them what the VRS® will do next.

**Fifteen seconds** after the siren chirps begin, the siren's output will change to a continuous blast.

From this point on, when the ignition key is turned off, the VRS® will immediately turn on the starter kill. This will prevent the vehicle from being restarted, thus immobilizing it at that spot.


**Three minutes** after the constant siren output begins, the flashing parking lights and the siren will stop. The starter kill will remain active until the system is disarmed. If the door is opened or the ignition is turned off and on in an attempt to restart the car, the siren and light flashing will begin again.


## **disarming the vrs®**

Take the time to familiarize yourself with the VRS® triggering sequence and the disarm procedure. It is important to recognize and identify the VRS® trigger sequence and know how to disarm it in case of accidental activation.

Once the VRS® is armed, it does not disarm automatically. You must disarm it the next time you operate the vehicle. You must disarm it with one of the following procedures:

If the system has not entered the triggered sequence (siren has not started chirping):

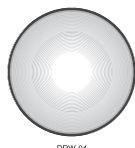


1. Turn the ignition on.
2. Press  on the transmitter for one second.  
The lights will flash and the siren will chirp

twice.

If the system has entered the triggered sequence (siren has begun chirping), pressing the disarm button of the transmitter will not disarm VRS®. To disarm the VRS® during a VRS® trigger sequence:



1. Turn the ignition on.
2. Press the Valet switch the pre-programmed number of times to disarm the VRS® system.

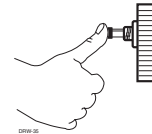

**note:** If the VRS® system has begun its chirping sequence, the ignition must be turned off, then on to disarm. If you are driving the vehicle at the time, pull to a safe place away from traffic and follow the triggered sequence disarm procedure.

# *glossary of terms*

---

**Control Unit:** The "brain" of your system. Usually hidden under the dash area of the vehicle. It houses the microprocessor which monitors your vehicle and controls all of the system's functions.

**Fault-Proof Starter Kill:** An automatic switch controlled by the security system which prevents the vehicle's starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in Valet mode, or should the starter interrupt switch itself fail. Your system is ready for this feature, however installation may require additional labor.

**Input:** A physical connection to the system. An input can be provided by a sensor, pinswitch or through an existing system in the vehicle, such as ignition or courtesy lights.

**LED:** Blue light mounted somewhere in the vehicle. It is used to indicate the status of your system. It is also used to report triggers and faults in the system or sensors.

**Shock Sensor:** This is a sensor mounted in the vehicle that is designed to pick up impacts to the vehicle or glass.

**Siren:** Noise generating device usually installed in the engine compartment of the vehicle. It is responsible for generating the "chirps" you hear, as well as the six tones you hear while the

alarm is triggered.

**Transmitter:** Hand-held, remote control which operates the various functions of your system.

**Trigger or Triggered Sequence:** This is what happens when the alarm "goes off" or "trips". The triggered response of your system consists of the siren sounding and parking light flashing for the programmed duration.

**Valet Switch:** A small push-button switch mounted somewhere inside the vehicle. It is used to override the alarm when a transmitter is lost or damaged, or to enter or exit Valet mode.

**Warn-Away Response:** Lighter impacts to the vehicle will generate the Warning Zone response. It consists of several seconds of siren chirps and parking light flashes.

**Zone:** A zone is a separate input that the alarm can recognize as unique. Each input to the system is connected to a particular zone. Two or more inputs often share the same zone.



# *security & convenience expansions*

Here we have listed only some of the many expansion options available. Please contact your dealer for a complete explanation of all the options available to you.

**Audio Sensor:** Metal on glass, glass cracking, and breaking glass each produce distinctive acoustic signatures. The 506T audio sensor uses a microphone to pick up sounds, and then analyzes them with proprietary acoustic software to determine if the glass has been struck.

**Backup Battery:** The 520T keeps the system armed, triggers the alarm and keeps the starter kill active if main battery power is disconnected.

**Field Disturbance Sensor:** An invisible dome of coverage is established by installing the 508D "radar" sensor. Your security system can then react to any intrusions into this field with the triggered sequence.

**Headlight and Parking Light Automation:** The 545T Nite-Lite® will automatically turn on your parking and headlights when it gets dark. In addition, the 545T will turn your headlights on whenever the windshield wipers are used. A transmitter function can also be used to turn on your parking and headlights for a programmed time.

**Power Trunk Release:** The channel two output of the system can operate a factory power release for the vehicle's trunk or hatch. (An additional relay may be required.) If the factory release is not power activated, then Directed's 522T trunk release solenoid can often be added.

**Power Window Control:** Automatic power window control is provided with the 529T and 530T systems.

**Valet Start System:** For the ultimate in convenience, the Valet start system can start your vehicle, monitor engine functions, and power your climate control system with a push of a button. Over-rev protection, open-hood lockout, brake pedal shutoff, and automatic timer shutoff are all included. (This feature is only for automatic transmission, fuel-injected gasoline vehicles.)

**543T XHFplus External Receiver/Antenna:** The 543T XHFplus external receiver/antenna can be used to upgrade the transmitter/receiver performance in areas of high radio interference such as military bases, airports, and hospitals.







# *quick reference guide*

Cut along dotted line and fold for a quick and easy reference to keep in your purse or wallet.


## **To arm using your remote**

- You can activate, or arm, the system by pressing  on your transmitter for one second. When the system arms, you will hear a short siren sound, or chirp, and the parking lights will flash once. If the vehicle's power door locks have been connected to the system, the doors will lock.

## **To disarm using your remote**

- To disarm the system, press . You will hear two chirps, and the parking lights will flash twice. If power locks are connected to the system, the doors will unlock. If the siren chirps either four or five times when disarming, see Diagnostics section. This is called Tamper Alert.

## **Arming while driving**

- Press  on your transmitter for two seconds while the vehicle is running. The system will chirp once and then once more to indicate that the ignition is on.

## **Disarming without a transmitter**

- Turn on the ignition. Press the Valet button the programmed number of times within 15 seconds. The system should now disarm. If it does not, you may have waited too long. Turn the ignition off and on and try again.


## **To enter or exit Valet Mode**

- Turn ignition to RUN position, then turn to OFF position. Press and release the Valet button within 10 seconds. The status LED will light solid if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.


## **To activate Panic Mode**

- Press and hold  down for one second.

## **To exit Panic Mode**

- Press  on the transmitter.

## **To activate remote controlled chirp muting**

- Press  briefly before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only.

**Location of Valet Button** \_\_\_\_\_

**Number of Valet Button pulses for disarming** \_\_\_\_\_



## The company behind this system is Directed Electronics.

Since its inception, Directed® has had one purpose, to provide consumers with the finest vehicle security and car stereo products and accessories available. The recipient of nearly 100 patents and Innovations Awards in the field of advanced electronic technology, Directed® is ISO 9001 registered.

Quality Directed Electronics products are sold and serviced throughout North America and around the world.

Call (800) 274-0200 for more information about our products and services.



Directed Electronics is an ISO 9001 registered company.

Directed® is committed to delivering world-class quality products and services that excite and delight our customers.

*driven to excel*  
**Directed**<sup>®</sup>  
ELECTRONICS, INC.

Vista, CA 92083

[www.directed.com](http://www.directed.com)

© 2005 Directed Electronics - All rights reserved

G909429 07-05