

Colors and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.



Keep these instructions for future reference as they contain important information.

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 6:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing.



Bead it and make it beautiful!

- To remove the cover, turn dial back to the clear chamber with unlock symbol:
- To decorate doll clothing, put clothes on mannequin and insert mannequin post into hole in the base of the unit. To decorate purses, place purses on pegs on purse stand and insert purse stand post into hole in the base of the unit.







• Peel off top layer of desired sticker(s).



Choose your bead color! Dial it!

- Place cover onto base.
- Select a bead color from 3 different colors. Turn chamber dial to the bead color you want to apply.
 - (Note: Dial cannot be turned if cover is off.)





Decorate with beads! Shake, shake, shake!

 Turn wardrobe upside down and shake.





Get ready for your next color! • Turn wardrobe upright. Drain

- excess beads back into base. (Gently tapping on wardrobe can help.) Make sure all the beads have returned back to the container before removing the cover.
- When drained, turn dial back to the clear chamber (with unlock symbol) to remove the cover.
- Lift off tab layer of the next desired sticker(s) and repeat steps 2 & 3.
- To decorate the purse stickers, exchange the mannequin with the purse pole and follow the same steps as for the clothes.

