



Stage 1 – Lay & Play Gym



Stage 3 – Stand & Play Piano



Stage 2 – Sit & Play

Please keep this instruction sheet for future reference,
as it contains important information.

Requires three "C" batteries (included).

Adult assembly is required.


Tool required for battery replacement: Phillips screwdriver (not included).




Parts

⚠ WARNING


- To prevent possible entanglement injury, NEVER place gym or suspend links in a crib or playpen.
- NEVER add strings, ties or other products to this gym.

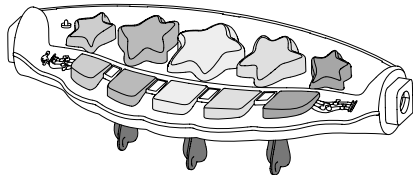


Keyboard

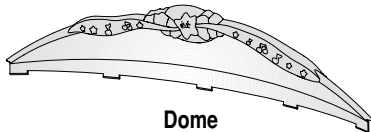


Dome

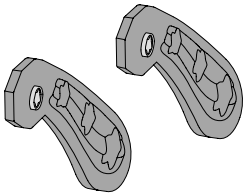

2 Supports

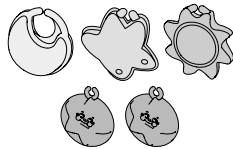


5 Toys

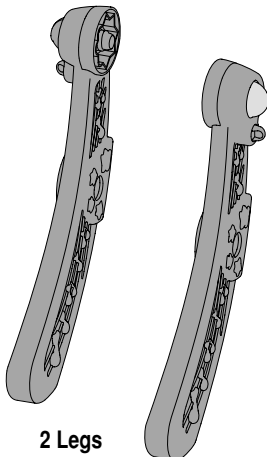

2 Legs

One-Time Assembly

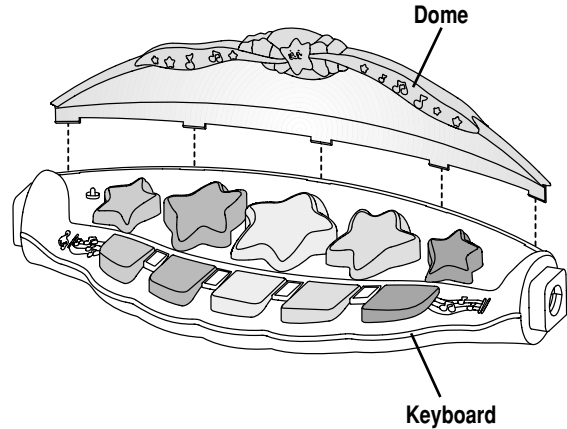

- Fit the dome tabs into the slots in the keyboard.
 - Press to “**snap**” the dome into the keyboard.
- Hint: This may require a lot of force.*
- Pull up on the dome to be sure it is secure.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:
Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052, U.S.A.

For countries outside the United States:

CANADA

Questions? **1-800-567-7724**, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND



16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China..

Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline “C” (LR14) batteries.

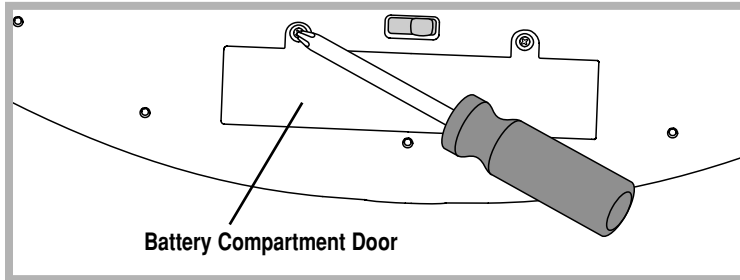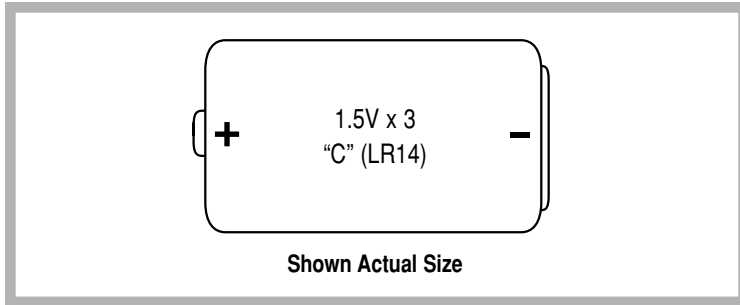

- Locate the battery compartment door on the bottom of the keyboard.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three “C” (LR14) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to replace the batteries!

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Do not drop this toy on a hard surface.


FCC Note (United States Only)



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

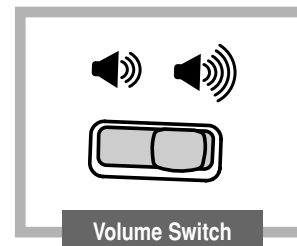
Volume Switch




- Locate the volume switch on the bottom of the keyboard. Adjust volume to high  or low , for your child's comfort.




Stage 1 - Lay & Play Gym

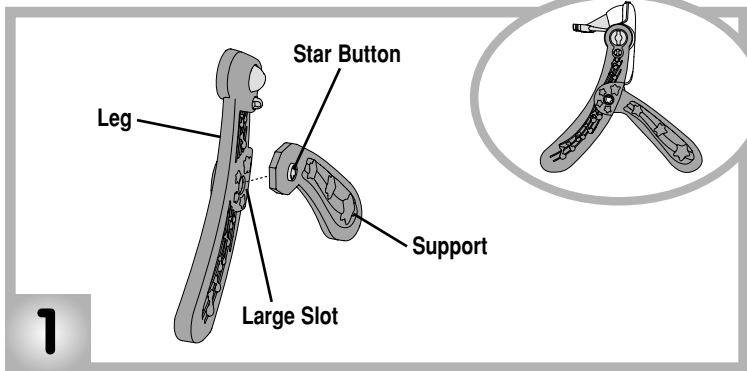


- While pressing the star buttons on a support, fit the end of the support into the large slot in one of the legs, as shown. Push the support until it “snaps” into place.
- Repeat this procedure to attach the other support to the remaining leg.

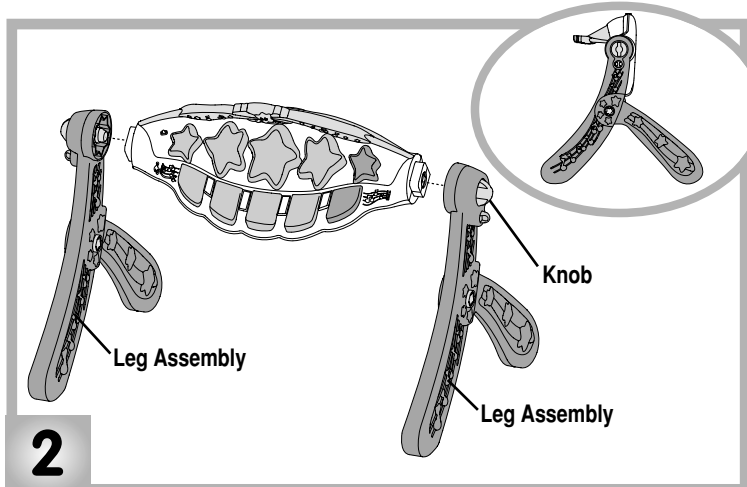

- Position the keyboard so it faces you.
- Fit a leg assembly to the side of the keyboard, as shown.
- Turn the knob clockwise to secure the leg assembly to the keyboard. Make sure the knob is fully tightened.
- Repeat this procedure to attach the other leg assembly to the keyboard.

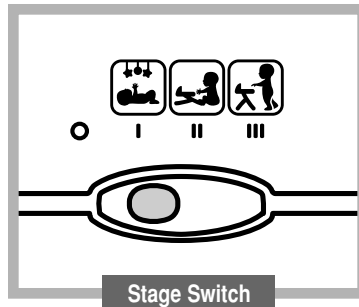

Stage Switch

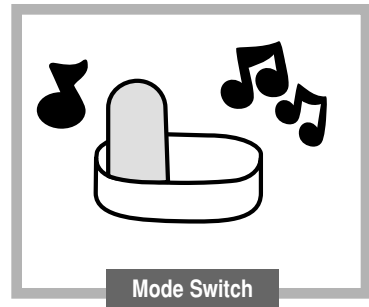


Mode Switch

- Slide the stage switch to for use with babies lying down.
- Slide the mode switch to for shorter play. When baby bats the toys, a single song plays with “singing” light-up stars.
- Slide the mode switch to for longer play. When baby bats the toys, the music plays for about 10 minutes with “singing” light-up stars.
- Locate the volume switch on the bottom of the keyboard. Adjust volume to high ; or low , for your child’s comfort.

Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- Be sure to slide the stage switch to the off position when not in use.

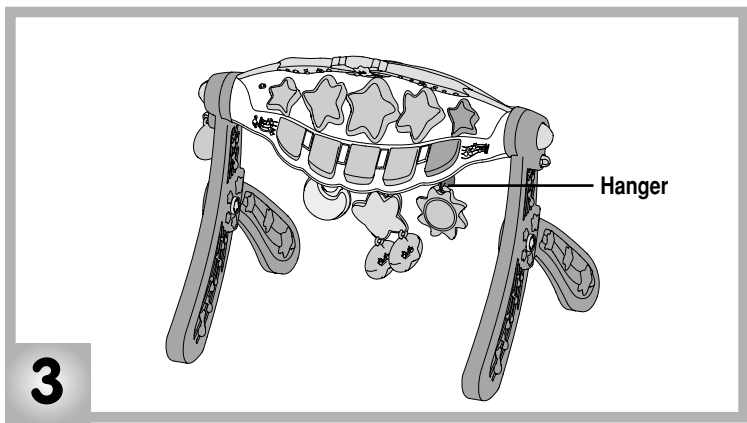

- Grasp each hanger under the keyboard and pull it down so it swings freely.
- Attach the toys to the hangers, as shown.




Stage 2 - Sit & Play

If you have not used this toy before, and are assembling it for first-time use in Stage 2, start with Step 2.

1


To change from Stage 1 to Stage 2

- Turn the threaded knobs counter-clockwise and detach the leg assemblies from the keyboard.
- Press the star buttons and remove the two supports from the legs. Now, proceed to step 2.

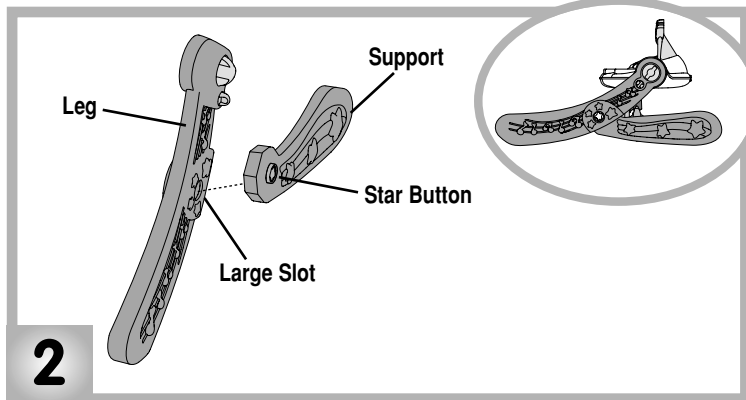


2

- While pressing the star buttons on a support, fit the end of the support into the large slot in one of the legs, as shown. The support should “snap” in place.
- Repeat this procedure to attach the other support to the remaining leg.

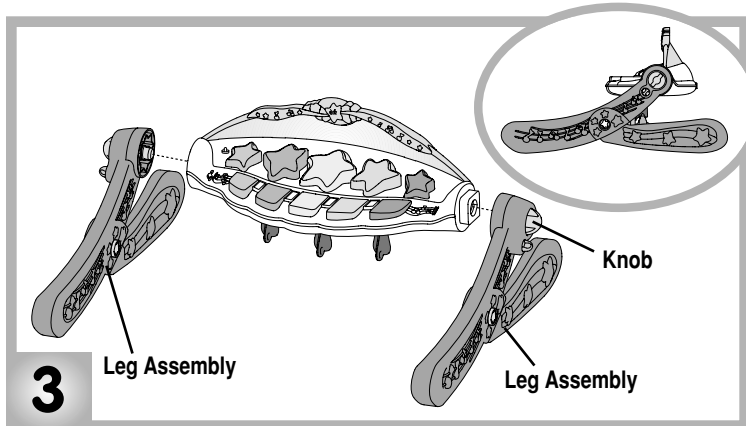


3

- Position the keyboard so it faces up.
- Fit a leg assembly to the side of the keyboard, as shown.
- Turn the knob clockwise to secure the leg assembly to the keyboard. Make sure the knob is fully tightened.
- Repeat this procedure to attach the other leg assembly to the keyboard.

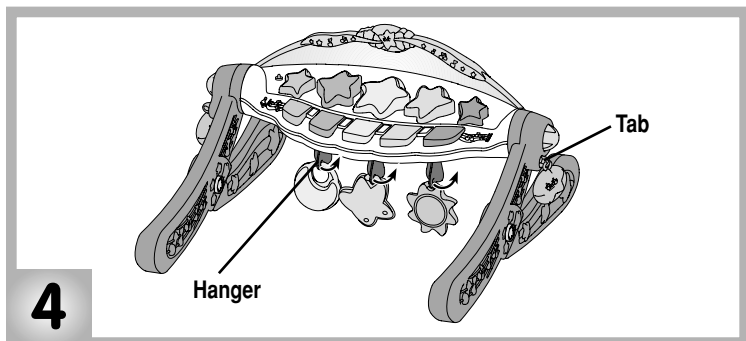


4

- Rotate the hangers up and “snap” them into place.
- Attach the toys to the hangers and tabs as shown.

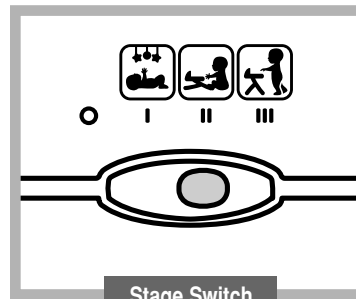

Stage Switch

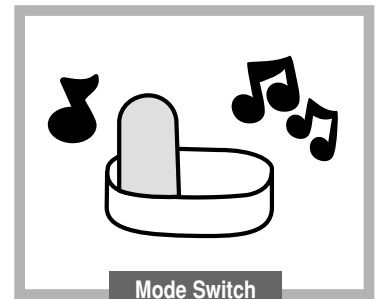

Mode Switch

- Slide the stage switch to for use with babies sitting up.
 - Slide the mode switch to . When baby presses a key, part of a song plays with twinkling lights. With each press of a key, the song continues building, a little at a time.
 - Slide the mode switch to . When baby presses a key, musical scales or chords play as twinkling lights follow along.
- Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).*
- Be sure to slide the stage switch to the off position when not in use.



Stage 3 - Stand & Play Piano


If you have not used this toy before, and are assembling it for first-time use in Stage 3, start with Step 2.

1

To change from Stage 2 to Stage 3


- Turn the threaded knobs counter-clockwise and detach the leg assemblies from the keyboard.
- Press the star buttons and remove the two supports from the legs. Now, proceed to step 2.

2

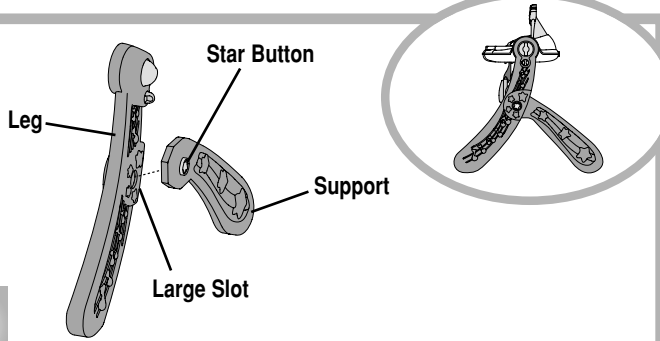


- While pressing the star buttons on a support, fit the end of the support into the large slot in one of the legs, as shown. Push the support until it “snaps” into place.
- Repeat this procedure to attach the other support to the remaining leg.

3

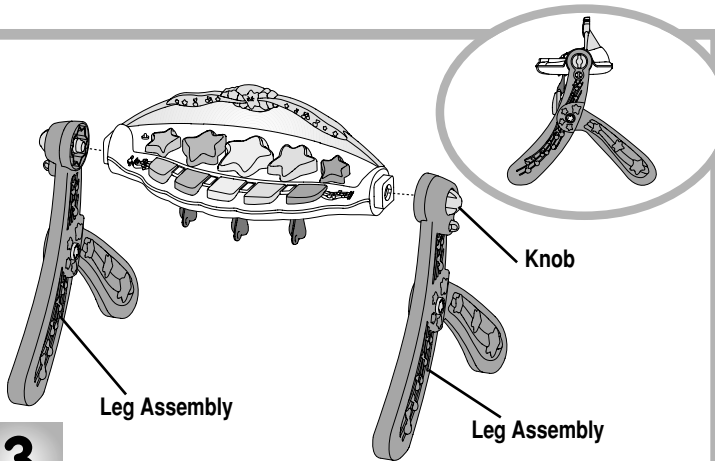


- Position the keyboard so it faces up.
- Fit a leg assembly to the side of the keyboard, as shown.
- Turn the knob clockwise to secure the leg assembly to the keyboard. Make sure the knob is fully tightened.
- Repeat this procedure to attach the other leg assembly to the keyboard.


4

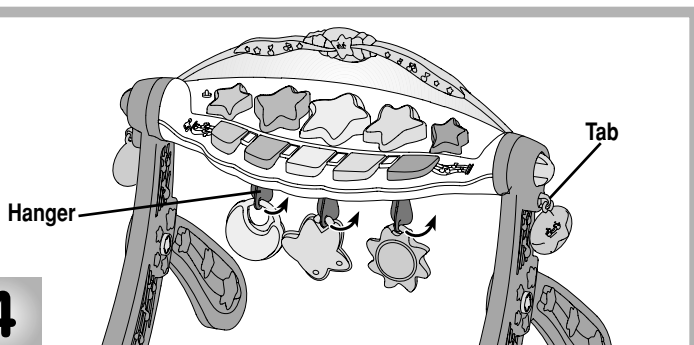

- Rotate the hangers up and “snap” them into place.
- Attach the toys to the hangers and tabs as shown.

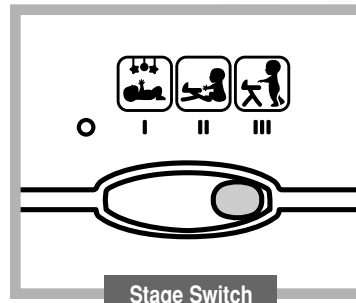

Stage Switch

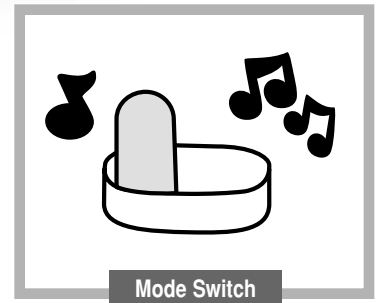

Mode Switch

- Slide the stage switch to for use with standing toddlers.
- Slide the mode switch to . Press the keys to play note by note like a real piano, as stars light up.
- Slide the mode switch to . Press the keys to hear notes that sound like they're sung by a children's chorus.
- Locate the volume switch on the bottom of the keyboard. Adjust volume to high ; or low , for your child's comfort.

Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- Be sure to slide the stage switch to the off position when not in use.