

**Fisher-Price®**

 
**K3800**



- Please keep this instruction sheet for future reference, as it contains important information.
- Requires four “C” batteries (included) for operation.
- Batteries included are for demonstration purposes only.
- Adult assembly is required for battery replacement and crib attachment.
- Tool required for battery replacement: Phillips screwdriver (not included).

**[fisher-price.com](http://fisher-price.com)**

## Battery Replacement

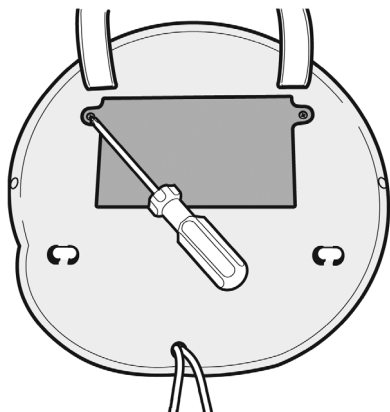


*For best performance, we recommend replacing the batteries that came with this toy with four “C” (LR14) alkaline batteries.*

- Locate the battery compartment on the back of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert four “C” (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- If sounds, lights or motions become faint or stop, it's time for an adult to change the batteries.
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



## Battery Safety Information

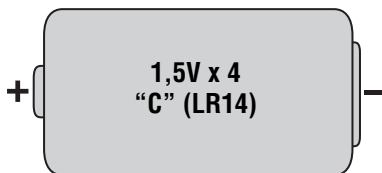 


**In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:**

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Crib Attachment

## WARNING

 This product will not attach to all crib designs.  
Do not add additional strings or straps to attach to a  
crib or playpen.

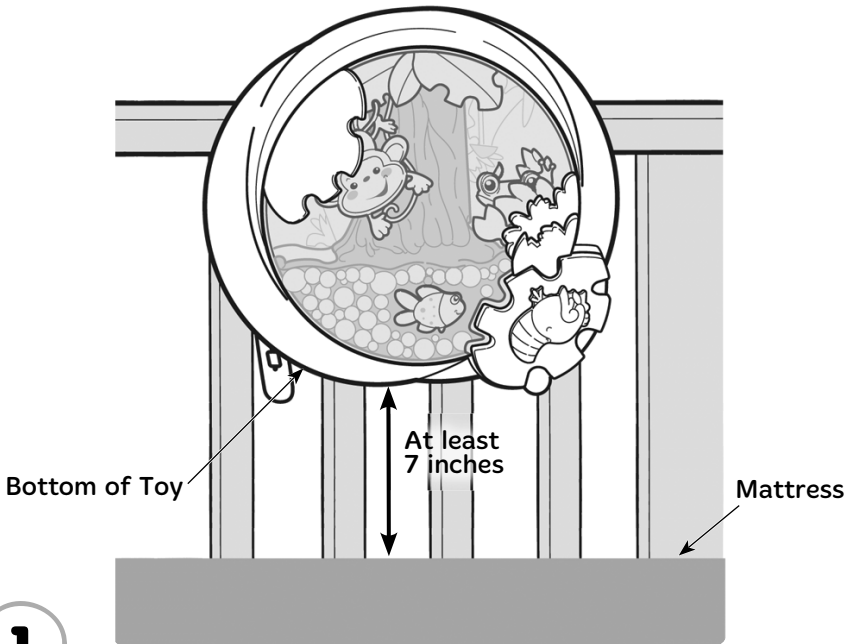


**1**

- If the distance between the toy and the mattress is less than 7 inches, lower the crib mattress.

# Crib Attachment



**IMPORTANT!** Always use the straps provided to attach this toy to a crib.
 
## Back View

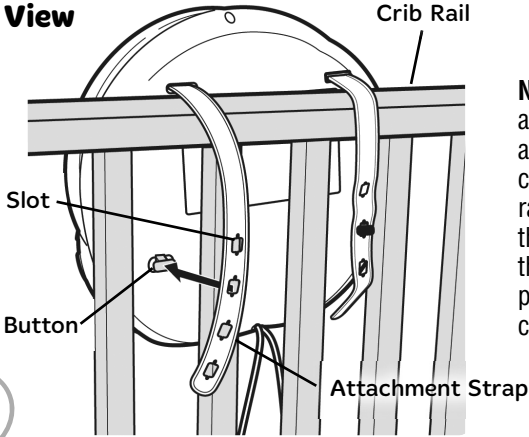

**Note:** If you are attaching this toy to a crib side rail that can be lowered and raised, make sure the crib side rail is in the raised (locked) position whenever a child is in the crib.

  - Position the toy inside the crib.
- Wrap one of the toy's attachment straps around the crib rail.
- Fasten the attachment strap slot to the button on the back of the toy. This toy should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.
- Repeat this procedure to secure the other attachment strap.

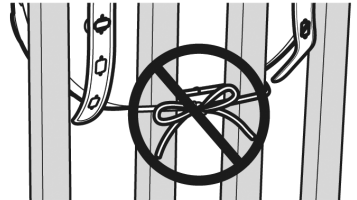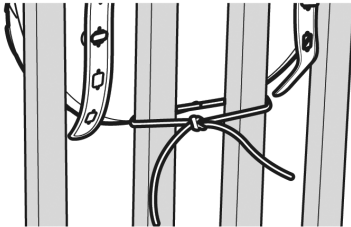

- Wrap the toy's strings around the crib spindles and tie in a knot.
- Note:** It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

# Gentle Motion and Soft Lights!



Press the toucan to start or restart music/sound/lights.



## Power/Volume Switch

Slide the switch to:

- ☛ ON with low volume,
- ☛ ON with medium volume
- OFF

## Sounds Select Switch

- ☛ Rainforest Sounds without Music
- ☛ Rainforest Sounds and Lullabies
- ☛ Classical Music with Rainforest Sounds

## Light and Motion Select Switch

- ☛ Six Minutes of Lights, Motion and Music
- ☛ 12 Minutes of Lights and Music
- ☛ 18 Minutes of Music

## Care

- To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.
- Do not drop this toy on a hard surface.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

# Consumer Information



**CONSUMER ASSISTANCE**  
1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**  
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).  
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk)  
Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.  
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.