

www.fisher-price.com





Rail & Road System


Parts


- A. Crane
- B. Arch
- C. Base
- D. Chute
- E. Cab

Part not shown: 1 Figure and 2 Crates

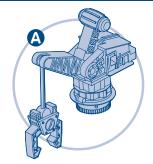

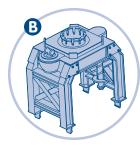


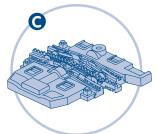

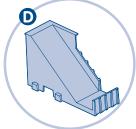



Lots of Lifting and Loading!

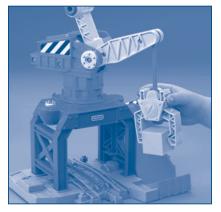


• Squeeze the crane to pick up your cargo.




• Lift the crane handle and rotate to move the cargo.


Assembly

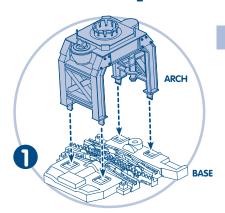

• "Snap" the arch into the base.

- Press firmly to "snap" the crane into the arch.
- "Snap" the cab into the crane.

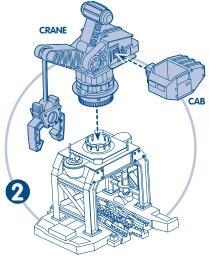

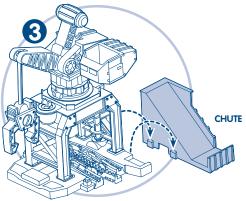

• Set the crane assembly grooves onto the tabs on the chute, as shown.

Assembly is now complete.





Visit www.fisher-price.com to see the entire world of GeoTrax® accessories!

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

No tools needed for assembly.

Wipe the toy with a clean, damp cloth.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only) M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331. Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.