

Fisher-Price®

www.fisher-price.com

L5893











GeoTrax
Rail & Road System

Parts


- A. 3 End Rails
- B. Small Tower with Toll Booth
- C. 3 Small Towers
- D. Main Tower
- E. 4 Side Rails
- F. 4 Supports
- G. Span
- H. 2 Span Ends

Part not shown: 1 Figure

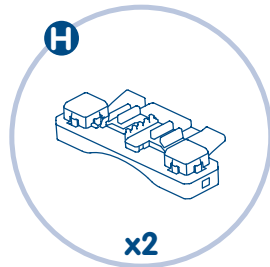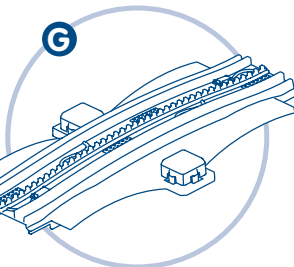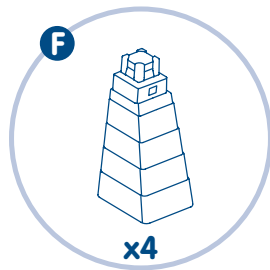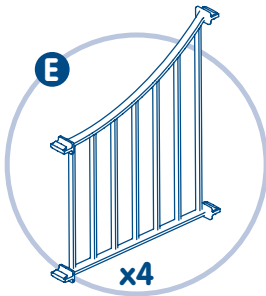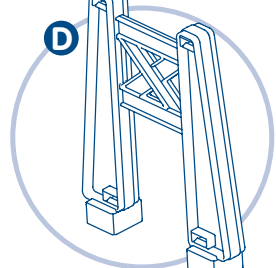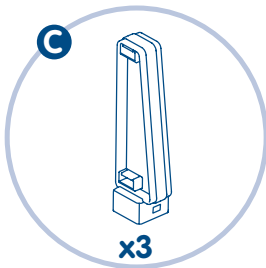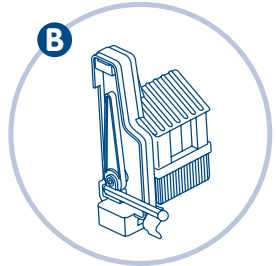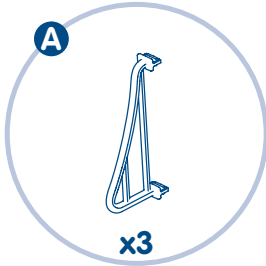

Assembly


1

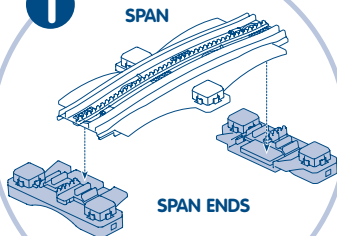

- “Snap” the span ends onto the span.


- Locate the square mark on both the side of a support and on the span assembly. Match the squares and “snap” the support into the underside of the span assembly, as shown.
- “Snap” the remaining supports into the span matching the square marks on each.

2

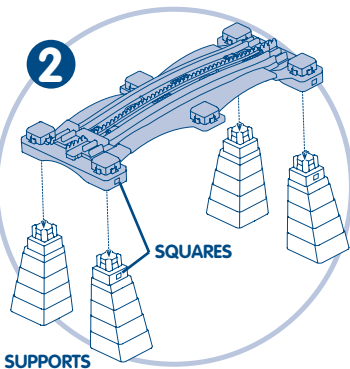

SUPPORTS

3

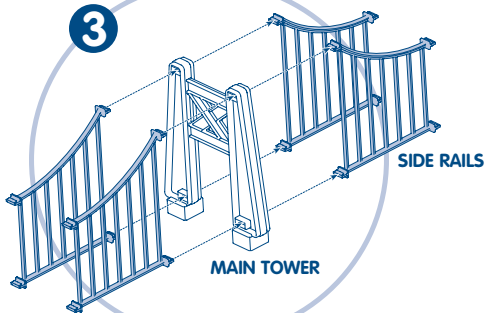


SIDE RAILS

MAIN TOWER

- “Snap” the four side rails into the main tower, as shown.

Assembly

4

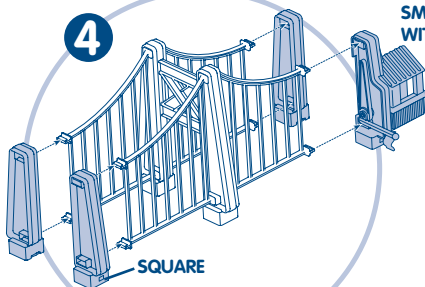

SMALL TOWER
WITH TOLL BOOTH

- Locate the square mark near the bottom of each small tower.
- With the square marks facing out, “snap” the small towers and tower with toll booth to the side rails, as shown.

SMALL
TOWERS


- “Snap” the end rails to the small towers, as shown.

5



END RAILS

6

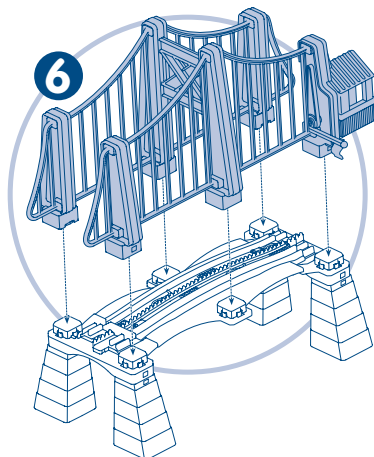

- “Snap” each of the towers onto the span assembly.
Assembly is now complete.

So Many Ways to Play!




- Remove the supports for a ground-level bridge.



- The toll gate lifts and lowers.


Multiple Levels of Track Layouts!

Track not included.

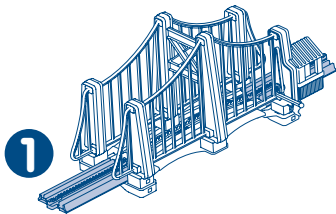


- To build a ground-level layout, separate the span assembly from the supports and place the span assembly on the floor.
- Attach straight tracks (sold separately) to either end of the span assembly.

- Use supports and straight tracks (sold separately) to build an elevated assembly.

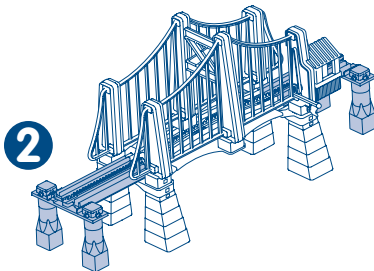

- Use an Elevation Track Pack™ (sold separately) to access the suspension bridge.
- Attach ramp assemblies (sold separately) to the ends of the span.

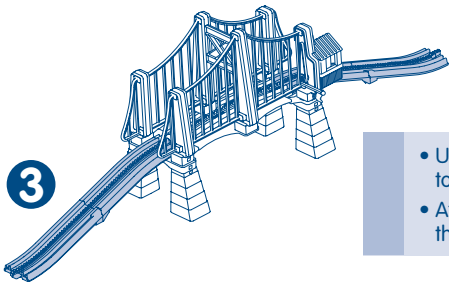

Fisher-Price®



Visit www.fisher-price.com to see
the entire world of GeoTrax® accessories!

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

No tools needed for assembly.

Wipe the toy with a clean, damp cloth. Do not immerse.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: [Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303,
www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.