



www.fisher-price.com

N0459



Product features and decoration may vary from the photograph above.

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.


Tool required for assembly: Phillips Screwdriver (not included).

Water or sand to fill base (not included).

IMPORTANT! Rim height should be adjusted **only** by an adult.

Assembled Parts

Hint: Some parts were placed inside the lower post for shipping.

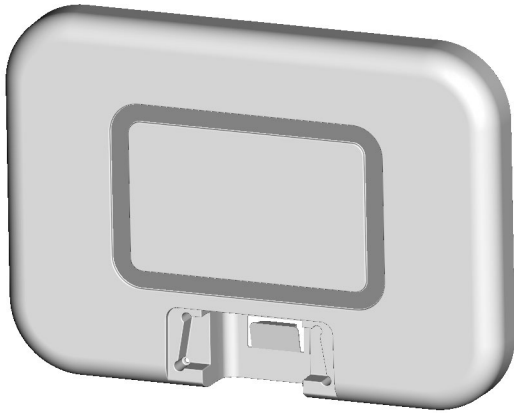

Backboard



**Net/Ring
Assembly**



Upper Post



Lower Post



Rim



Sure Score™ Rim




#6 x 1/2" Screw - 4



#8 x 3/4" Screw - 4

BOTH SHOWN ACTUAL SIZE

Note: Tighten all screws with a Phillips screwdriver. Do not over-tighten the screws.

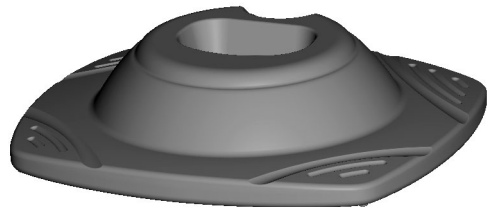

Base


Note: Label sheet not shown.

Assembly




CAUTION

This product contains small parts in its unassembled state. Adult assembly is required.

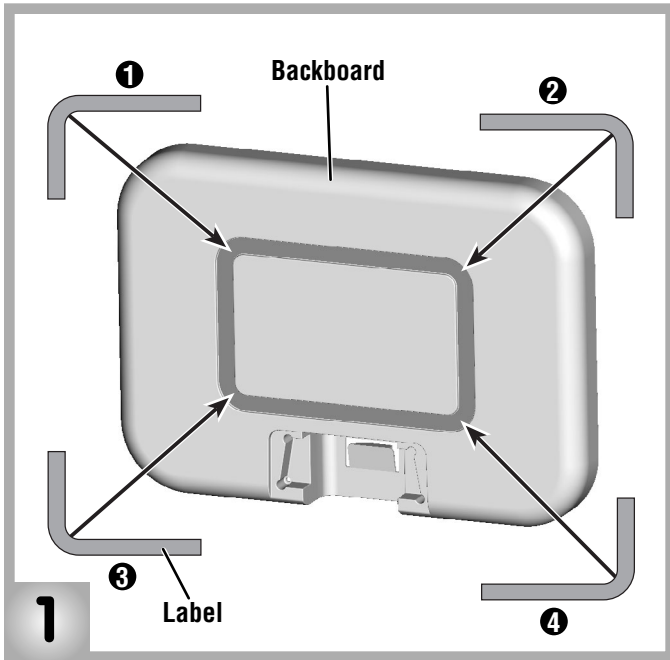


Proper label application will help to keep the label looking its best!

- Carefully peel a label from the label sheet and attach it to the backboard, as shown.
- Smooth out the label to remove any air bubbles.
- Repeat this procedure to apply the remaining labels to the backboard.

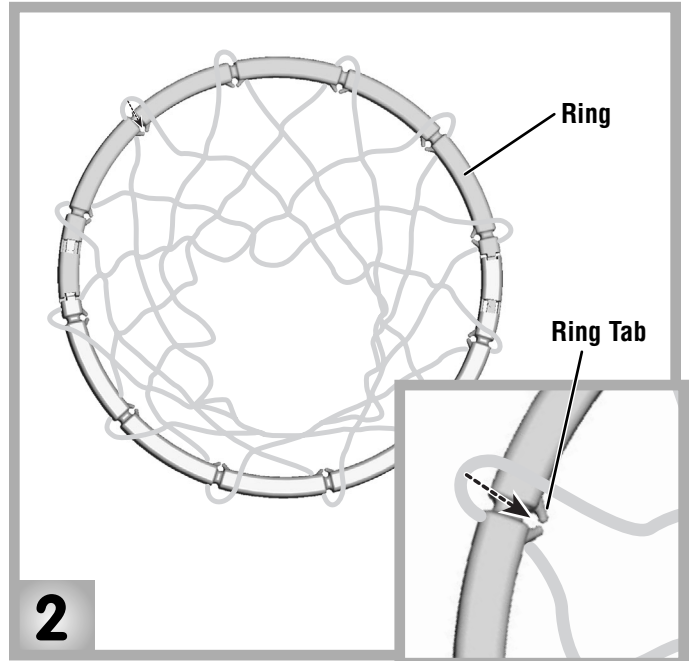


- Place the loops at the top of the net into the grooves on the ring.
- Pull each loop through a ring tab, as shown.

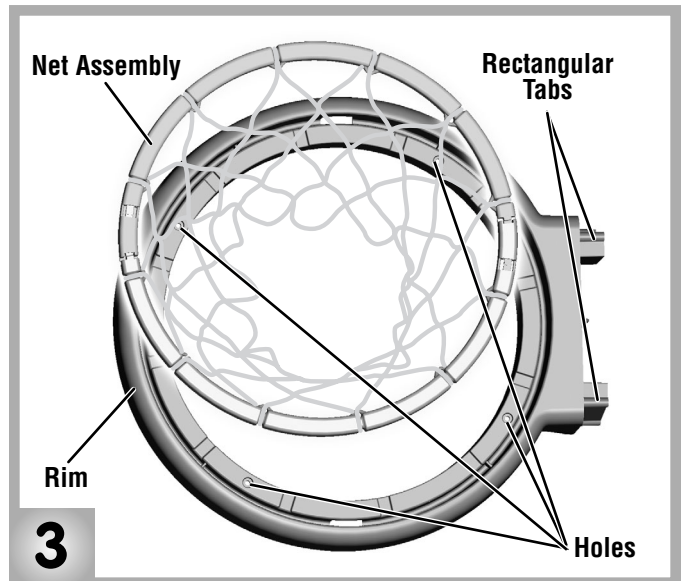


- Place the rim on a flat surface with the rectangular tabs facing up.
- Locate the four holes in the underside of the net assembly. Align the four holes in the underside of the net assembly with the four holes in the rim.
- Place the net assembly onto the rim.

Assembly

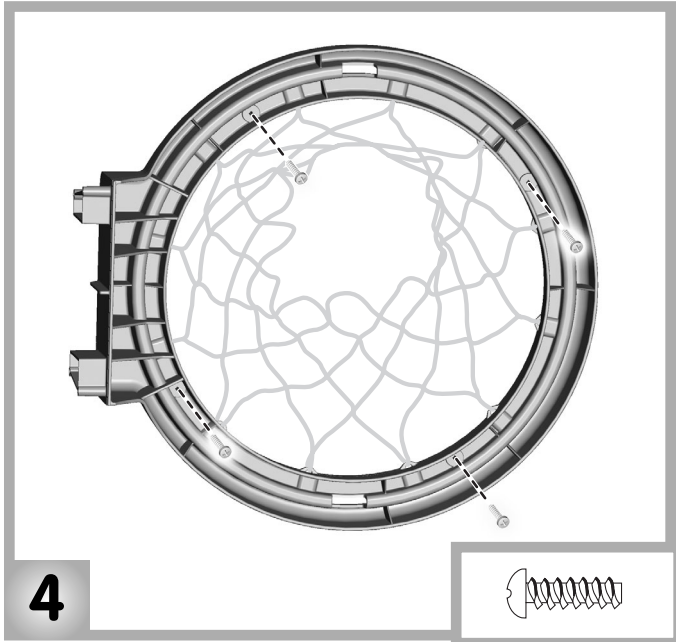


- While holding the ring assembly and rim together, turn them over.
- Insert four #6 x 1/2" screws into the holes in the rim, making sure each hole in the rim is still aligned with each screw hole in the net assembly.
- Partially tighten the screws. Turn the rim over to ensure that the net loops are still in the grooves and through the ring tabs. Now, tighten the screws.

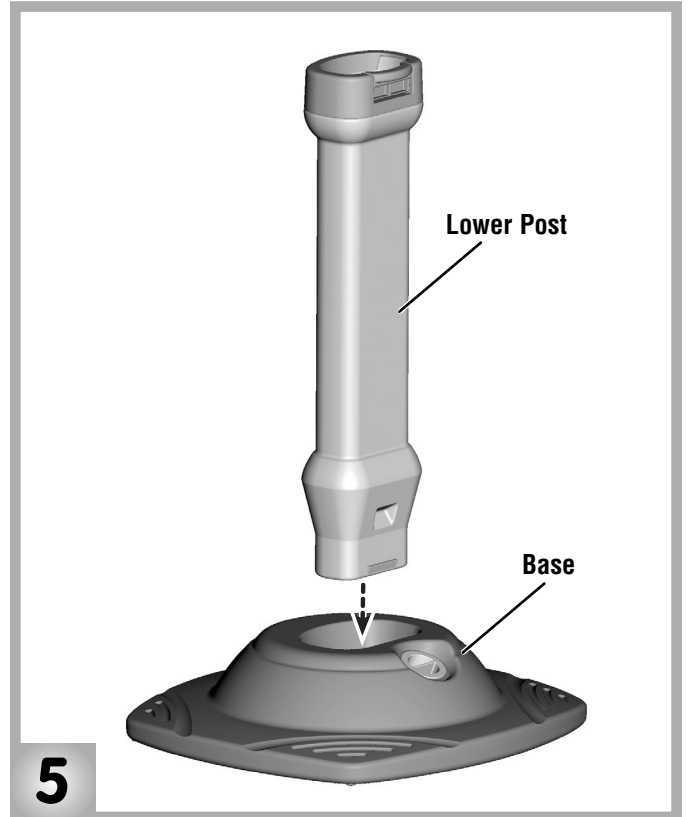


- Insert and **"snap"** the lower post into the base.


Assembly

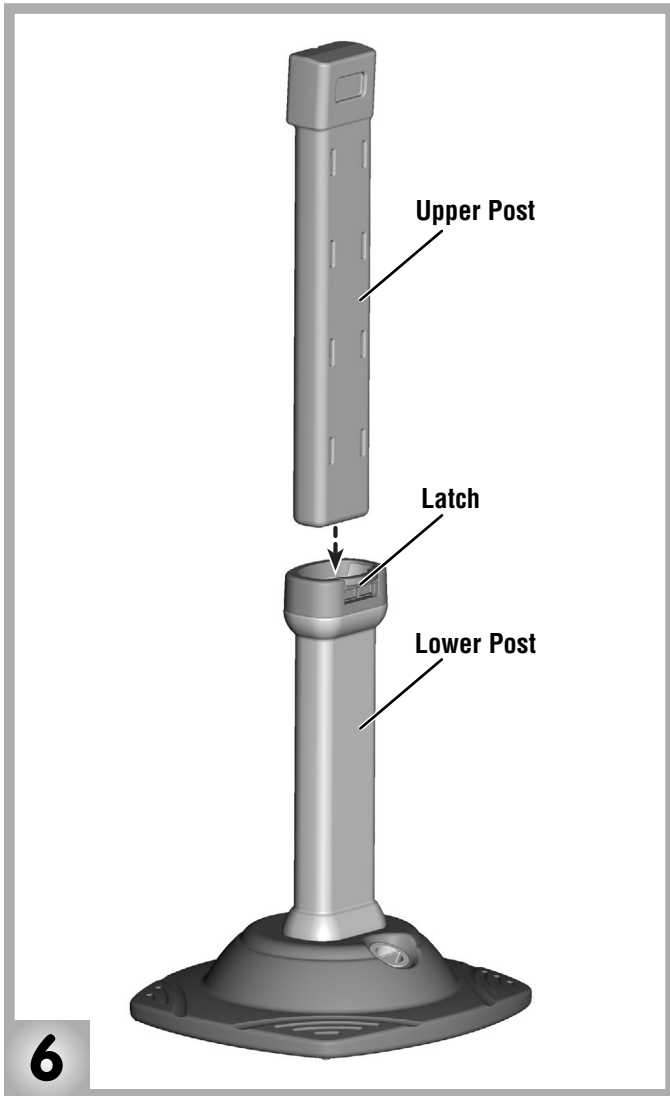

- Flip down the latch on the lower post.
- Insert the upper post into the lower post.

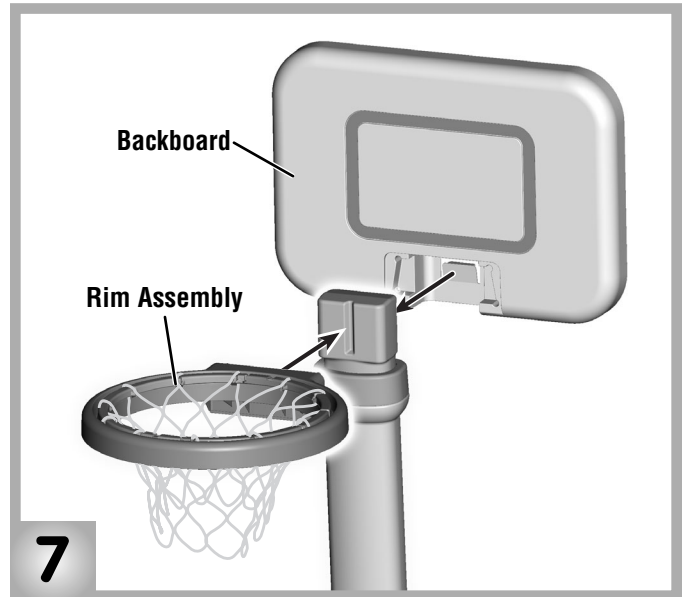


- Attach the rim assembly and backboard to the upper post, as shown.

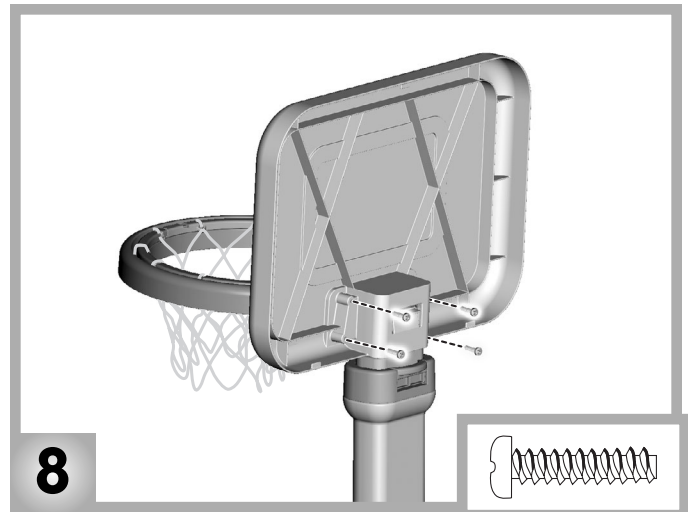


- Insert four #8 x 3/4" screws into the holes on the back of the backboard. Tighten the screws.

Assembly

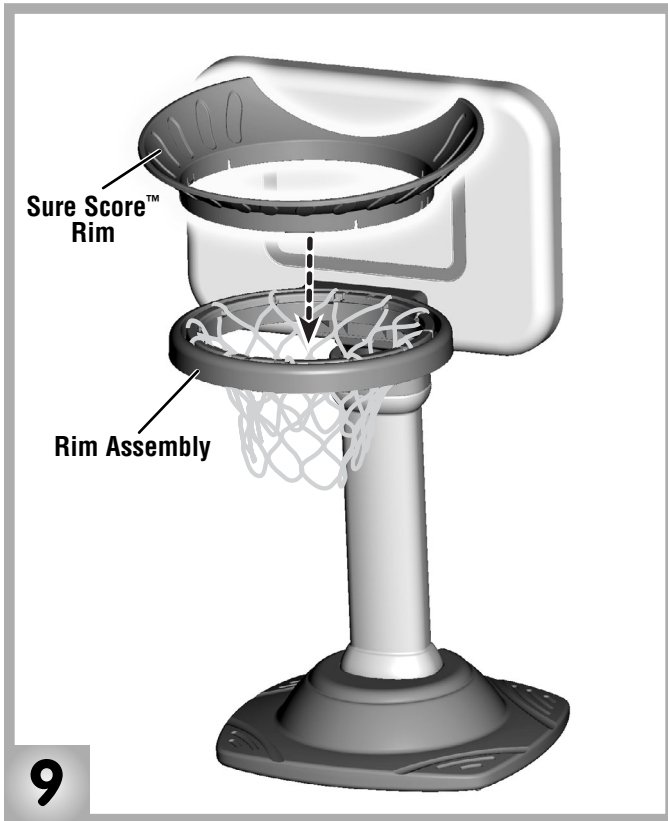


- Snap the Sure score™ rim onto the rim assembly.

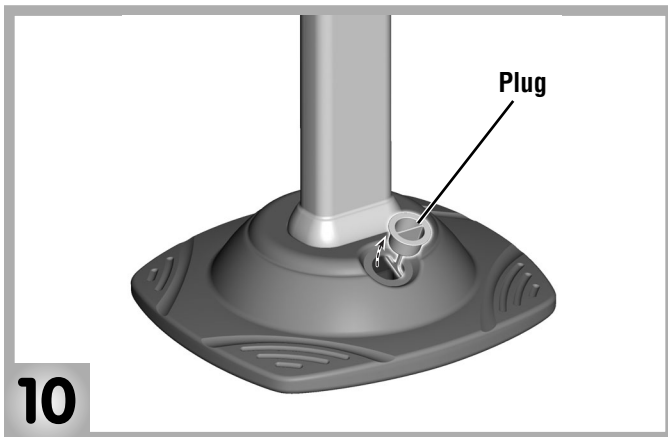

- After assembly is complete, fill each base with water or approximately 20 lbs of sand (water or sand not included) to keep this product stationary. Simply lift the plug, fill the base and then replace the plug.

Adjusting the Rim Height

IMPORTANT! Rim height should **only** be adjusted by an adult. Also, make sure children are not standing below the rim when adjusting the rim height.

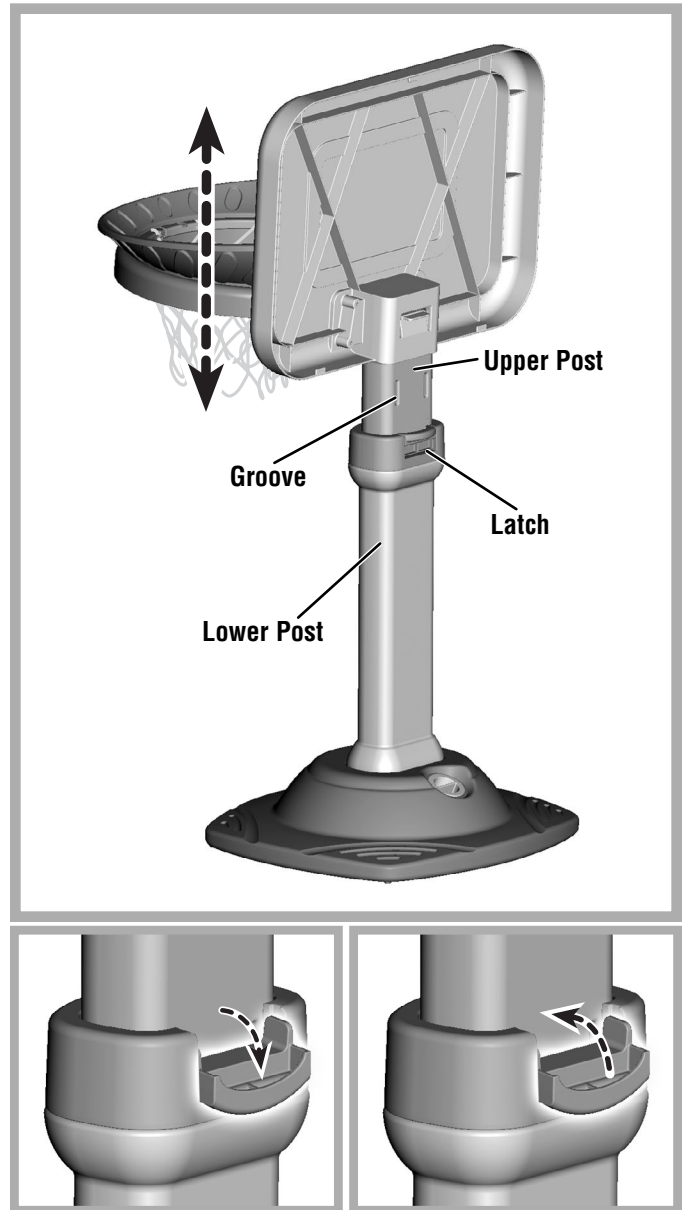

- **To lower the rim height:** While holding the upper post, flip the latch on the lower post down. Lower the upper post and flip the latch into the groove to secure in place.
- **To raise the rim height:** Simply lift the upper post and flip the latch into the groove to secure in place.

Let's Play!




- Sure score™ rim guides the ball to the basket.




- Remove the Sure score™ rim to add more challenge!

Storage

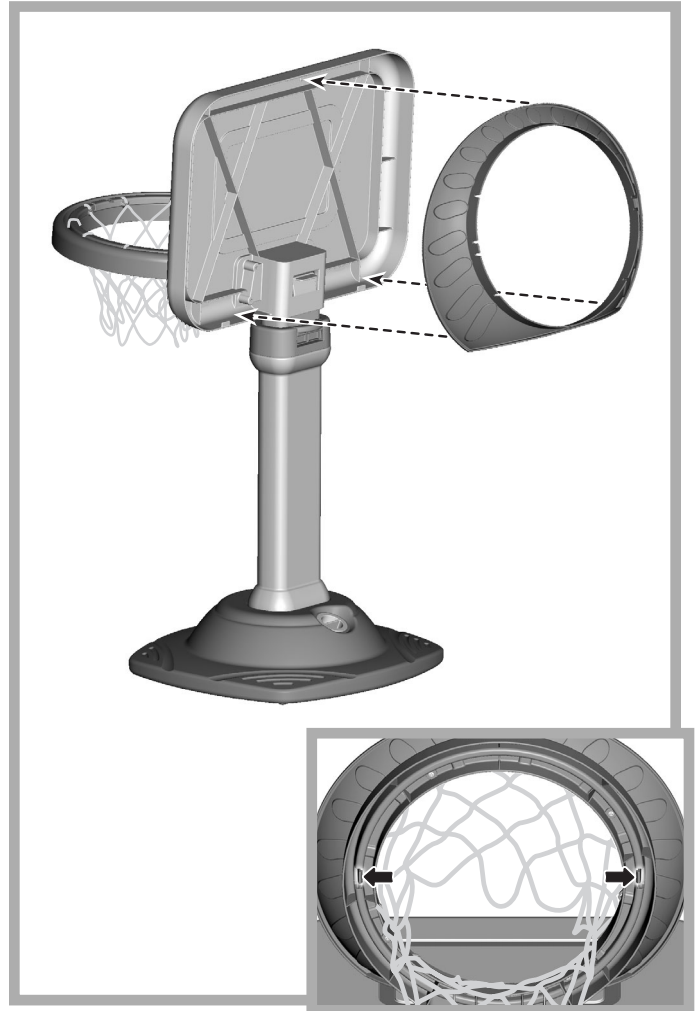

- Push in the tabs on the bottom of the rim assembly to remove the Sure score™ rim.
- Store the Sure score™ rim behind the backboard, as shown.

Consumer Information

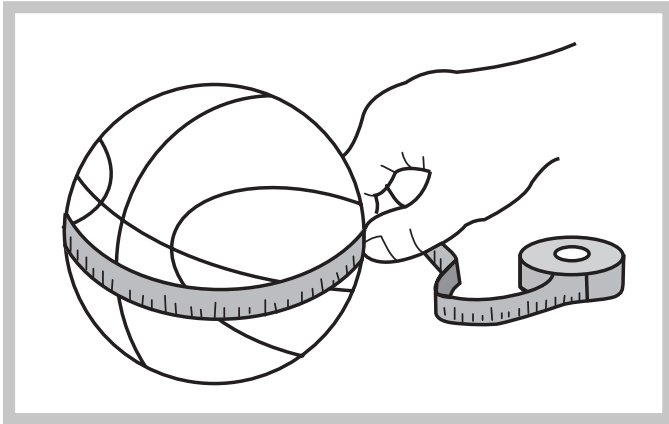

- This toy includes an inflatable ball. If the ball becomes soft, inflate it with a standard, hand-operated air pump with a standard air needle (both not included).
- The ball will contain the correct amount of air when its circumference measures 21 to 22 inches. Measure the circumference of the ball with a tape measure or with a piece of string cut 21 to 22 inches long. Do not over-inflate the ball.

Care

- To clean, use a mild soap and water solution and clean cloth. Rinse clean with warm water to remove soap residue.
- Be sure to drain water from the base before extended storage. If water freezes in the base, it could cause damage.
- Check all fasteners regularly to be sure they are tight. If the fasteners are not tight, tighten them as necessary.
- Check plastic parts regularly and if broken or cracked, dispose of them properly.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: [Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303,
\[www.service.mattel.com/uk\]\(http://www.service.mattel.com/uk\)](http://www.service.mattel.com/uk)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.