



Please keep this instruction sheet for future reference,
as it contains important information.

Requires three "C" batteries (included) for operation.


Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips
screwdriver (not included).

Assembled Parts



Tree top

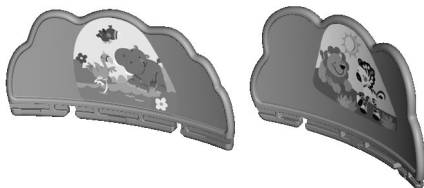


2 Hedges



Tree Trunk




Tree Branch

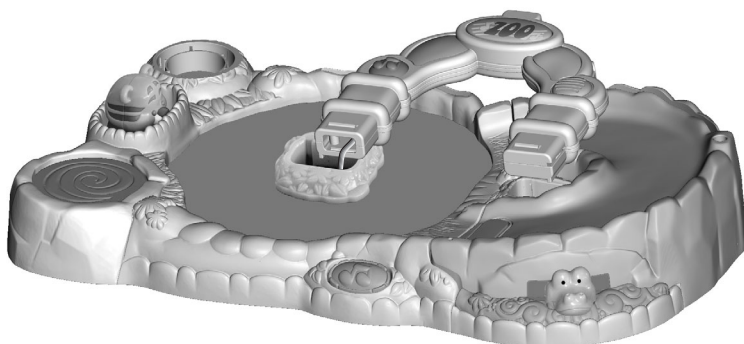


Base


Assembly

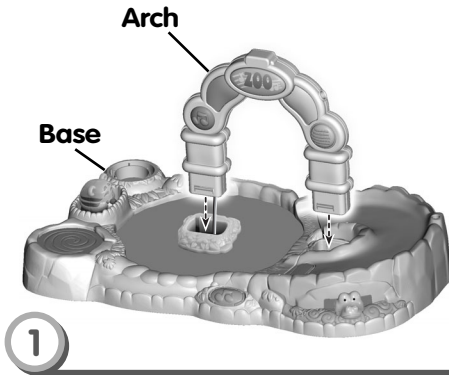


- Lift the arch on the base and “Snap” it into the base.
Note: The arch is connected to the base by an electrical wire. Make sure this wire retracts into the arch before snapping into the base.

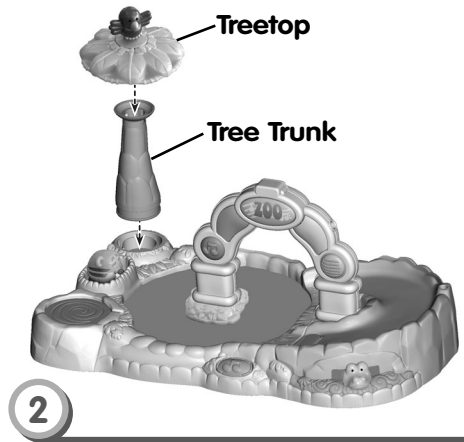

- “Snap” the treetop to the tree trunk and then into base.
Note: The treetop only fits onto the tree trunk one way. If it does not seem to fit, turn it around and try again.
- “Snap” the tree trunk into the base.

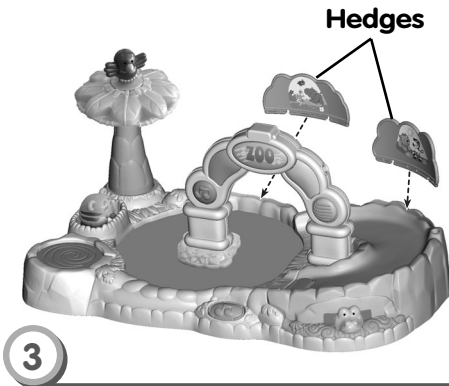


- “Snap” the hedges into the slots in the base.
Note: If a hedge does not seem to fit into a slot, try the other slot.

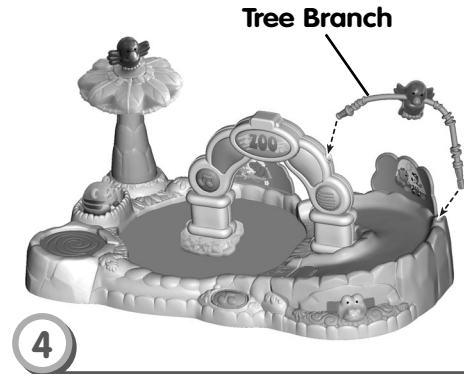

- Insert the tree branch into the arch and the base.
- Push down on the tree branch to “snap” it in place.

Battery Replacement

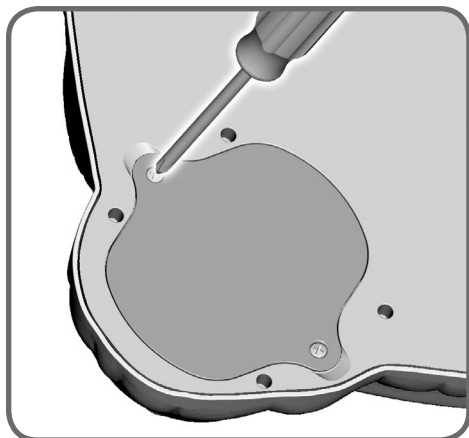

Hint: For best performance, we recommend that you replace batteries that came with this toy with three, new "C" (LR14) alkaline batteries.

- Locate the battery compartment on the base of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door. Remove exhausted batteries and throw them away.
- Insert three "C" (LR14) **alkaline** batteries.


Hint: We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

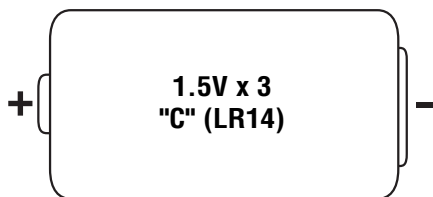

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Rollin' Around the Zoo



- Slide the power/volume switch on the arch to on with low volume 🔊, on with high volume 🔊 or off ○.
 - Press the button on the base or ramp to hear fun songs.
- Hint:** Place the animals on the base and ramp and watch them roll around the zoo.
- Press the button on the arch for animal sounds and tunes.

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: [Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
\[www.service.mattel.com/uk\]\(http://www.service.mattel.com/uk\)](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB.Helpline:01628500303)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.