



Please keep this instruction sheet for future reference, as it contains important information.

Requires four "AA" batteries (included).


Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

Before Use

A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, open the fasteners on the back of the toy and pull and remove the tab. Close the fasteners and throw the plastic tab away.

Battery Replacement

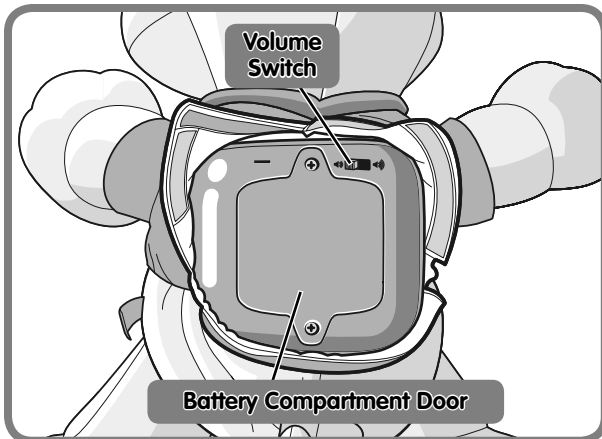

For best results, we recommend replacing the batteries that came with this toy with four, new "AA" (LR6) alkaline batteries.

- Open the fasteners on the back of the toy to access the battery compartment.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Throw the exhausted batteries away.
- Insert four, new "AA" (LR6) **alkaline** batteries.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- Close the fasteners on the toy.
- If the toy begins to operate erratically, you may need to reset the electronics. Slide the mode select switch off then back on.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information







In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

2 Interactive Play Modes!





- Locate the mode select switch on teddy's tummy. Slide the switch to Learning Mode **ABC**, Music Mode  or Off .

Hint: The volume switch is located on the battery box. Open the fasteners on the back of the toy and slide the switch to either low volume  or high volume .







Mode Select Switch

ABC Learning Mode

- Press  to learn the alphabet.
- Press  to practice counting with teddy.
- Press  to learn about shapes and colours.
- Press  for sing-along songs with teddy!

Music Mode

- Press  for the alphabet song.
- Press  for a counting song.
- Press  for a song about shapes and colours.
- Press  for musical tunes.

Consumer Information

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.