




Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three “AA” batteries (included). Batteries included are for  
demonstration purposes only

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

# Battery Replacement

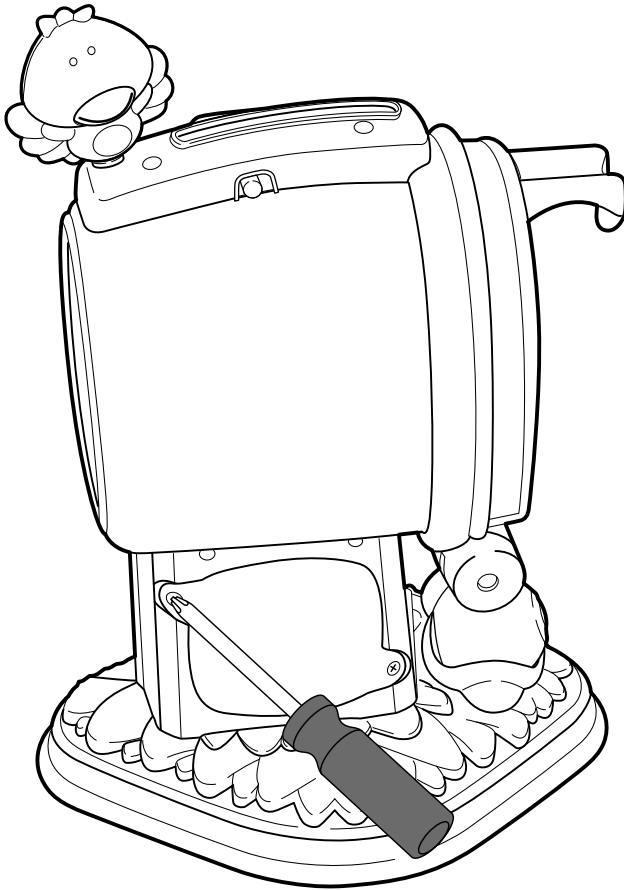

**For best performance, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.**

- Locate the battery compartment on the side of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door and the exhausted batteries. Dispose of the batteries properly.
- Insert three, new “AA” (LR6) **alkaline** batteries.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

## Two Modes of Fun!



Drop letters into the slot



Bat the bird

Volume Switch (on other side)

Power/Mode Switch



Open and close the postbox



Lift and lower the flag



- Slide the power/mode switch to **Music** or **Learning** mode.

🎵 **Music** – select for fun songs and musical tunes

**ABC Learning** – select for counting, opposites and fun phrases

- Slide the volume switch to low volume 🗣️ or high volume 🔊.
- When finished playing with this toy, slide the power/mode switch OFF ⏻.



# Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Consumer Information

**Great Britain:** Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ.

Tel: 03-78803817, Fax: 03-78803867.

## Care

- Wipe with a clean, damp cloth. Do not immerse this toy.